

Fax: 805 247-0669 • www.vortechsuperchargers.com • M-F 7:00AM - 3:30PM (PST)

FOREWORD

his manual provides information on the installation, maintenance and service of the Vortech supercharger kit expressly designed for this vehicle. All information, illustrations and specifications contained herein are based on the latest product information available at the time of this publication. Changes to the manual may be made at any time without notice. Contact Vortech Engineering for any additional information regarding this kit and any of these modifications at (805) 247-0226 7:00am-3:30pm PST.



Take note of the following before proceeding:

- 1. Proper installation of this supercharger kit requires general automotive mechanic knowledge and experience. Please browse through each step of this instruction manual prior to beginning the installation to determine if you should refer the job to a professional installer/technician. Please contact your dealer or Vortech Engineering for possible installers in your area.
- 2. This product was designed for use on stock (un-modified, OEM) vehicles. The PCM (computer), engine, transmission, drive axle ratios and tire O.D. must be stock. If the vehicle or engine has been modified in any way, check with Vortech prior to installation and use of this product.
- **3.** Use only premium grade fuel with a minimum of 91 octane (R+M/2).
- **4.** Always listen for any sign of detonation (*knocking/pinging*) and discontinue hard use (*no boost*) until problem is resolved.
- **5.** Vortech is not responsible for any clutch, transmission, drive-line or engine damage.
 - Exclusions from Vortech warranty coverage considerations include, but not limited to:
- 1. Neglect, abuse, lack of maintenance, abnormal operation or improper installation.
- 2. Continued operation with an impaired vehicle or sub-system.
- The combined use of Vortech components with other modifications such as, but not limited to, exhaust headers, aftermarket camshafts, nitrous oxide, third party PCM programming or other such changes.

©2018 VORTECH ENGINEERING, INC.

All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, or translated into another language in any form, by any means without written permission of Vortech Engineering, Inc.

TABLE OF CONTENTS

FORE	WORD		<i>. ii</i>
TABL	E OF C	ONTENTS	
IMPO	RTANT	NOTES	<i>iv</i>
		PLY REQUIREMENTS	
		(2005-2006 Mustang GT, Standard)	
		(2005-2006 Mustang GT, Standard) Internally Lubricated	
		(2005-2006 Mustang GT, H.O.)	
		(2005-2006 Mustang GT, H.O.) Internally Lubricated	
		(2007-2008 Mustang GT, Standard)	
		(2007-2008 Mustang GT, Standard) Internally Lubricated	
		(2007-2008 Mustang GT, H.O.)	
PART	SLIST	(2007-2008 Mustang GT, H.O.) Internally Lubricated	XV
		(2008 Mustang Bullitt) Internally Lubricated	
		(2010 Mustang GT, Standard) Internally Lubricated	
PARI	2 FI2 I	(2010 Mustang GT, H.O.) Internally Lubricated	XXI
1.		.RATION/REMOVAL	4
		ED INSTALLATION	
2.			
3.		AIN ASSEMBLY INSTALLATION	
4.		R STEERING RELOCATION	
4.1		R STEERING RELOCATION (2010 Only)	
5.1		ANT TUBE RELOCATION (2005-2006 Only)	9
5.2		MOSTAT HOUSING/RADIATOR HOSE MODIFICATION	40
0.4	(2007-2	2010 Model Year Only)	12
6.1		Y AND SPACER REPLACEMENT (Bullet/V-Power Only)	
6.2		RCHARGER MOUNTING PLATE INSTALLATION	
7.		MOSTAT HOUSING RELOCATION (2005-2006 Only)	
8.		GE AIR COOLER INSTALLATION (H.O. Kits Only)	
		BUMPER COVER AND SPLASH PAN	
		CHARGE AIR COOLER ASSEMBLY INSTALLATION $$ (H.O. Kits Only) \ldots .	26
		ENGINE COOLANT RESERVOIR INSTALLATION (2005-2006	
		Models Only)	
	8.D	RADIATOR HOSE MODIFICATIONS (2005-2006 Models Only)	37
	8.E	ENGINE COOLANT RESERVOIR INSTALLATION (2007-2010	
		Models Only)	38
		COOLER CORE INSTALLATION	
	8.G	COOLANT RESERVOIR FILL	42
8.1		IUSTANG BUMPER TRIMMING (2010 Models Only)	
8.2		RESSOR BYPASS VALVE ASSEMBLY INSTALLATION	
8.3		RESSOR BYPASS VALVE ASSEMBLY INSTALLATION (V-Power/Bullitt)	
9.		SCHARGE ASSEMBLY (Non-cooled Kits Only)	
10.		RESSOR BY-PASS VALVE INSTALLATION (Non-cooled kits only)	
11.		ANT RESERVOIR RE-INSTALLATION (Non-cooled Kits Only)	
12.		CASE BREATHER AND PCV INSTALLATION	
13.		LET ASSEMBLY	
14.		PUMP UPGRADE	
15.		SH COMPUTER	
16.		CHECK	
IU.	1 11 1/7\L \	OHEON	

NOTICE

This product is protected by state common law, copyright and/or patent. All legal rights therein are reserved. The design, layout, dimensions, geometry, and engineering features shown in this product are the exclusive property of Vortech Engineering, Inc. This product may not be copied or duplicated in whole or part, abstractly or fundamentally, intentionally or fortuitously, nor shall any design, dimension, or other information be incorporated into any product or apparatus without prior written consent of Vortech Engineering, Inc.

2005-2010 Mustang GT

Installation Instructions

Congratulations on selecting the best performing and best backed automotive supercharger available today... the VORTECH® supercharger!

Before beginning this installation, please read through this entire instruction booklet and the Street Supercharger System Owner's Manual which includes the Limited Warranty Program, the Warranty Registration form and return envelope.

Vortech supercharger systems are performance improving devices. In most cases, increases in torque of 30-35% and horsepower between 35-45% can be expected with the boost levels specified by Vortech Engineering. This product is intended for use on healthy, well maintained engines. Installation on a worn-out or damaged engine is not recommended and may result in failure of the engine as well as the supercharger. Vortech Engineering is not responsible for engine damage.

Installation on new vehicles will not harm or adversely affect the break-in period so long as factory break-in procedures are followed.

For best performance and continued durability, please take note of the following key points:

- Use only premium grade fuel 91 octane or higher (R+M/2).
- The engine must have stock compression ratio.
- If the engine has been modified in any way, check with Vortech prior to using this product.
- Always listen for any sign of detonation (pinging) and discontinue hard use (no boost) until
- problem is resolved.

 Perform an oil and filter change upon completion of this installation and prior to test driving your vehicle. Thereafter, always use a high grade SF rated engine oil or a high quality synthetic, and change the oil and filter at least every 3,000 miles. Never attempt to extend the oil change interval beyond 3,000 miles, regardless of oil manufacturer's claims as potential damage to the supercharger may result.
- Before beginning installation, replace all spark plugs that are older than 1-year or 15,000 miles with original heat range plugs as specified by the manufacturer and reset timing to factory specifications (follow the procedures indicated within the factory repair manual and/ or as indicated on the factory underhood emissions tag). Do not use platinum spark plugs unless they are original equipment. Change spark plugs every 20,000 miles.

TOOL & SUPPLY REQUIREMENTS

- Factory repair manual
- 3/8" socket and drive set: SAE & metric
- 1/2" socket and drive set: SAE & metric
- 3/8"NPT tap, 3/8-18 tap & handle
- · Adjustable wrench
- Open end wrenches: 3/8", 7/16", 1/2", 9/16"
- Center punch and a 5/8" tapered punch
- 6 guarts (or what is specified in your owner's manual) SF rated quality engine oil, oil filter and wrench



If it has been 15,000 miles or more since your vehicle's last spark plug change, then you will also need:

- Spark plug socket
- NEW spark plugs

VORTECH/ ENGINEERING, INC.

2005-2006 Mustang GT, Standard Part No. 4FU218-010SQ/018SQ

PARTS LIST

ART NO.	DESCRIPTION	QTY.	PART NUMBE	R DESCRIPTION	QTY
2E229-230	V2-S SUPERCHARGER ASY	1	7U133-050	1.5" X 90° HOSE, LONG LEG	1
4FU130-036	OIL DRAIN ASSY	1	7U133-190	HOSE, COOLNT DRIV SIDE 05 MUST	
7U030-036	1/2" OIL DRAIN HOSE	3FT	7U038-000	3/4" HEATER HOSE	3.5
7R001-008	#8 HOSE CLAMP	2	7P375-075	3/4" HOSE BARB UNION, BRASS	1
7P375-017	3/8NPT X 1/2 BEADED HSE BRB	1	7R002-020	#20 HOSE CLAMP	4
4FU130-026	OIL FEED ASY	1	7R002-024	#24 HOSE CLAMP FREEZE PLUG, 1.25 DIA, .25 TAL	2
7U250-090-260		1	7P125-002 7R002-010	#10 HOSE CLAMP	4
7P125-005	1/8 NPT STR. X -4 JIC FTG STL	i	7P125-016	1/8 NPT PLUG	1
7P250-091	1/4 NPT 90° X -4JIC FTG STL	1	4FU110-010	P/S RESERVOIR RELOCATION	-
7P250-034	1/4 NPT X 1/4 NPT STRT T	1	7P375-075	3/4" HOSE BARB UNION, BRASS	1
4FU112-020	DISCHARGE ASY	1	7P375-050	3/8" HOSE UNION, BRASS	i
4FU012-020	DUCT, DISCH, MUST GT STD	1	7R001-004	#4 HOSE CLAMP	2
7S450-200	SLEEVE, 4 1/2 X 2, BLUE	1	7R001-008	#8 HOSE CLAMP	2 2 3 3
7S300-276	REDUCER, 3.0 X 2.75 X 2.5L	1 1	7U038-030	HOSE, P/S, 3/4 ID	3
7R002-044 7R002-048	#44 HOSE CLAMP #48 HOSE CLAMP	1	7U032-016	3/8" EFI FUEL HSE HI-PSR	1
7R002-046 7R002-072	#72 HOSE CLAMP	2	7A250-075 7J250-001	1/4-20 X .75 SHCS PLTD 1/4 WASHER, SAE, PLTD	2
7R002-016	#16 HOSE CLAMP	2 4	7F250-021	1/4-20 NYLOCK NUT ZINC PLATED	1
7U030-046	5/32" VACUUM LINE	5	4FU010-010	P/S RELOC BRKT, 05 GT MUST	1
8D001-001	STD COMPRESS BYPASS VALVE	. 1	7U100-055	TIE WRAP, 7.5" NYLON	4
7U034-016	1" GS HEATER HOSE	1.25	8F060-048	FUEL INJ, 39LB EV6, OEM 03 C	OB 8
7U034-016 7P218-156	1" GS HEATER HOSE VAC TEE, 7/32,7/32,5/32	0.583 1	008110	SMALL SILVER DIE CUT DECA	
4FU112-010	AIR INTAKE ASY	1	008444	3 YR S/C WARRANTY PKG	<i>-</i> 1
4FU012-010	INLET DUCT,"A"	1		LICENSE PLATE FRAME. VORTE	-
4FU012-015	INLET DUCT, "B"	1	008130	, -	
7R002-056 7S400-200	#56 HOSE CLAMP SLEEVE, 4 X 2, BLUE	1 2	4FU020-010	INSTR MAN 05-08 MUST GT	
7S400-250 7S400-351	REDUCER SLV 4.00 X 3.5 X 2.35L	1	5A003-035	PREDATOR, 05-08 MUSTANG	
7R002-064	#64 HOSE CLAMP	5	8F101-262	FUEL PMP ASY,05 MUST TWIN I	
8H040-235	AIR FILTER, 4.0FLG X 7.0L	1	7U032-018	3/8" SUBMERSIBLE EFI FUEL HOSE TIE WRAP. 7.5" NYLON	2.7
8A003-071	MAF, 3.8 I.D. MUSTANG GT	1 1	7U100-055 7R004-002	STEPLESS CLAMP, 17.0-70	4
7P750-102 7P250-047	3/4NPT X 1" X 90° HSE FIT 1/4NPT TO 3/8"BARB 90°	1	8F001-255	255 INTANK FUEL PUMP '86-'97	2 1
4FU010-071	BRKT, INTAKE SUPPORT	1	7R002-044	#44 HOSE CLAMP	1
7U032-016	3/8" EFI FUEL HSE HI-PSR	4	7R004-006	STEPLESS CLAMP, 11.3 X 5MM WID	4
4FU013-010	COVER, AIR FILTER, MUST GT	1	5W001-022	T-TAP CONN,14-16 AWG	2
7C040-008	M47X8MM SCHD SS	2	5W001-009 5W001-080	16-14GA MALE SLIDE INSULATED FUSE, 20 AMP. MINI BLADE	2
4FU111-044	S/C MOUNTING BRKT ASY	1	7P375-099	Y-UNION, 3/8" BARBED TEFLON	1
4FU010-044	S/C MOUNT PLT, MUST GT	1	7U032-025	HOSE, 5/16" ID,3/8"OD, 1/32" W	0.1
4FU010-034	IDLER MOUNT PLATE, MUST	1	7U032-030	HOSE, SPIRAL 3/8" CUFF ID, 1' L	2
4FU017-011 2A017-750-05	SPACER, STUDDED MUST GT SPACER, .750 OD X 2.691 LONG	2 2 1	4FU101-001	MAF EXT MOD 05+ MUSTANO	3 1
2A017-750-05	SPACER, .750 OD X 2.091 LONG SPACER, .750 OD X 2.712 LONG	1	5W018-030	18GA STRD WIRE GREY	ī
2A017-879-08	SPACER, .875 OD X 1.776 LONG	i	5W018-010	18GA STRD WIRE RED	1
2A017-750-07	SPACER, .750 OD X .097 LONG	1	5W018-020	18GA STRD WIRE BLK, UL1015	1
4FU017-021	SPACER, IDLER, MUST GT	1	5W018-080	18GA STRD WIRE BLUE BULK	1
4PCS016-160	PULLEY, IDLER	1	5W018-090 5W018-100	18GA STRD WIRE BROWN BULK 18GA STRD WIRE PURPLE	1
2A046-120 7A375-375	BELT, GATES K061203 3/8-16 X 3-3/4 HX HD	1 1	5W001-007	3/16" HEAT-SHRINK TUBING	1.
7C080-150	M8 X 1.25 X 150MM HXHD CL10.9	1	5W001-005	3/8" PLASTIC WIRE LOOM	1.
7C080-140	M8 X 1.25 X 140 HXHD CL8.8	2	5W001-012	18-22 GA BUTT CONN RED INSUL	12
7A375-100	3/8-16 X 1 G5 HHCS, PLT	7			
7K312-030	5/16 AN WASHER, S.S.	2			
7K375-040	3/8 AN960 FLAT WASHR PLATED	10			
4FU139-096	PCV MOD ASY	1			
7P375-106 7P625-377	PCV VALVE, FORD, 3/8" HOSE	1			
7P625-377 7R004-002	5/8" -3/8" REDUCER BARB UNION STEPLESS CLAMP, 17.0-70	1 2			
7R004-002 7R004-004	STEPLESS CLAMP, 1.0 OD HOSE	3			
	STEPLESS CLAMP, 28.6 X 7MM WID	1			
7U032-016	3/8" EFI FUEL HSE HI-PSR	0.25			
7U033-020	HOSE, 5/8"ID CLASS 1 EMISSIONS	0.66667			
4FU214-021	COOL BYP HOSE RELOC ASY				
	ASY, WATER OUTLET, 05 MUST GT	1			
		1			
7J875-010 7F875-010	7/8 SEALING WASHER NUT, 7/8-14, SHORT/JAM	1 1			

VORTECH/ ENGINEERING, INC.

2005-2006 Mustang GT, Standard Part No. 4FU218-010L/018L

PARTS LIST

008130 Lic 008447 1 YI 009035 S/C L 2F329-010 V3 SL 4FU020-010 INST 4FU110-010 7P375-075 7P375-050 7R001-004 7R001-008 7U038-030 7U032-016 3/8" 7A250-075 1/4- 7J250-001 1/4- 7F250-021 1/4-20 N' 4FU010-010 7U100-055 4FU111-044 S/C 4FU017-011 2A017-750-05 SPACEI 2A017-750-05 SPACEI SPACEI 2A017-750-06 SPACEI SPACEI 2A017-750-07 4FU017-021 SPACEI 4PCS016-160 SPACEI SPACEI 2A046-120 M8 X 1.2 SPACEI 7C080-150 M8 X 1.2 SPACEI 7K375-040 M8 X 1.2 4FU112-010 4FU012-015 M8 X 1.2 7R002-056 SPACEI SPACEI 7S400-351 REDUCI REDUCI	CENSE PLATE FRAME R S/C WARRANTY PKG LUBE, BOTTLED, 3-PACK JPERCHARGER ASY, STD IR MAN 05-08 MUST GT ESERVOIR RELOCATION SE BARB UNION, BRASS HOSE UNION, BRASS H4 HOSE CLAMP #8 HOSE CLAMP H8 HOSE CLAMP H0SE, P/S, 3/4 ID EFI FUEL HSE HI-PSR -20 X. 75 SHCS PLTD WASHER, SAE, PLTD YLOCK NUT ZINC PLATED ELOC BRKT, 05 GT MUST E WRAP, 7.5" NYLON MOUNT PLT, MUST GT R MOUNT PLATE, MUST GT R, 750 OD X 2.691 LONG R, .750 OD X 2.712 LONG R, .750 OD X 2.712 LONG R, .750 OD X 1.776 LONG ER, .750 OD X .097 LONG	1 1 1 1	7P625-377 7R004-002 7R004-002 7R004-004 7R004-007 7U032-016 7U033-020 4FU214-021 4FU114-021 7J875-010 7F875-010 7U133-050 7U133-190 7U038-000 7P375-075 7R002-020 7R002-024 7P125-002 7R002-010 7P125-016 5A003-035 8F060-048 8F101-262 7U032-018	5/8" -3/8" REDUCER BARB UNION STEPLESS CLAMP, 17.0-70 STEPLESS CLAMP, 1.0 OD HOSE STEPLESS CLAMP, 28.6 X 7MM WID 3/8" EFI FUEL HSE HI-PSR HOSE, 5/8"ID CLASS 1 EMISSIONS COOL BYP HOSE RELOC ASY ASY, WATER OUTLET, 05 MUST GT 7/8 SEALING WASHER NUT, 7/8-14, SHORT/JAM 1.5" X 90° HOSE, LONG LEG HOSE, COOLNT DRIV SIDE 05 MUST 3/4" HEATER HOSE 3/4" HOSE BARB UNION, BRASS #20 HOSE CLAMP #24 HOSE CLAMP FREEZE PLUG, 1.25 DIA, .25 TAL #10 HOSE CLAMP 1/8 NPT PLUG PREDATOR, 05-08 MUSTANG FUEL INJ, 39LB EV6, OEM 03 CG FUEL PMP ASY,05 MUST TWIN IN	1 1 1 1 3.5 1 4 2 1 4 1 1 OB 8
4FU020-010 4FU110-010 7P375-075 7P375-050 7R001-004 7R001-008 7U038-030 7U032-016 7A250-075 7J250-001 7F250-021 4FU010-010 7U100-055 4FU111-044 4FU010-034 4FU010-034 4FU010-011 2A017-750-05 2A017-750-06 2A017-750-07 4FU017-021 4PCS016-160 2A046-120 7A375-375 7C080-140 7K375-040 4FU112-010 4FU012-015 7R002-056 7S400-206 7S400-351 7R002-064 8H040-235 AIR 8A003-071 MSX 3/4" HO 3/8" 3/8" 3/4" HO 3/8" 1/4-20 N	RESERVOIR RELOCATION SE BARB UNION, BRASS HOSE UNION, BRASS HOSE UNION, BRASS #4 HOSE CLAMP #8 HOSE CLAMP HOSE, P/S, 3/4 ID EFI FUEL HSE HI-PSR -20 X .75 SHCS PLTD WASHER, SAE, PLTD WASHER, SAE, PLTD YLOCK NUT ZINC PLATED ELOC BRKT, 05 GT MUST E WRAP, 7.5" NYLON MOUNTING BRKT ASY MOUNT PLT, MUST GT R MOUNT PLATE, MUST ER, .750 OD X 2.691 LONG R, .750 OD X 2.712 LONG R, .750 OD X 1.776 LONG	1 1 1 1 2 2 3 3 1 2 1 1 4 1 1 1 2 2 2 3 1 2 1 1 1 2 2 2 2 1 1 1 2 2 2 2	4FU114-021 7J875-010 7F875-010 7U133-050 7U133-190 7U038-000 7P375-075 7R002-020 7R002-024 7P125-002 7R002-010 7P125-016 5A003-035 8F060-048 8F101-262	ASY, WATER OUTLET, 05 MUST GT 7/8 SEALING WASHER NUT, 7/8-14, SHORT/JAM 1.5" X 90° HOSE, LONG LEG HOSE, COOLNT DRIV SIDE 05 MUST 3/4" HEATER HOSE 3/4" HOSE BARB UNION, BRASS #20 HOSE CLAMP #24 HOSE CLAMP FREEZE PLUG, 1.25 DIA, .25 TAL #10 HOSE CLAMP 1/8 NPT PLUG PREDATOR, 05-08 MUSTANG FUEL INJ, 39LB EV6, OEM 03 C	1 1 1 1 1 3.5 1 4 2 1 4 1 1
2A017-879-08 SPACEF 2A017-750-07 4FU017-021 4PCS016-160 2A046-120 7A375-375 3/7C080-150 M8 X 1.2 7C080-140 M8 X 1.2 7A375-100 3/8-7K312-030 5/1 7K375-040 3/8 AN9 4FU112-010 4FU012-015 7R002-056 7S400-200 7S400-351 REDUCI 7R002-064 8H040-235 AR 8A003-071 MAF,	R, .875 OD X 1.776 LONG	1	7U100-055 7R004-002	3/8" SUBMERSIBLE EFI FUEL HOSE TIE WRAP, 7.5" NYLON STEPLESS CLAMP, 17.0-70	2.75 4 2
4FU012-010 4FU012-015 7R002-056 7S400-200 7S400-351 7R002-064 8H040-235 8A003-071 MAF,	P. 1.750 OD 2.057 LONG CER, IDLER, MUST GT PULLEY, IDLER ELT, GATES K061203 78-16 X 3-3/4 HX HD 25 X 150MM HXHD CL10.9 1.25 X 140 HXHD CL8.8 16 X 1 G5 HHCS, PLT 16 AN WASHER, S.S.	1 1 1 1 1 1 1 1 2 7 2 10	8F001-255 7R002-044 7R004-006 5W001-022 5W001-089 5W001-080 7P375-099 7U032-025 7U032-030 4FU101-001 5W018-030	255 INTANK FUEL PUMP '86-'97 #44 HOSE CLAMP STEPLESS CLAMP, 11.3 X 5MM WID T-TAP CONN, 14-16 AWG 16-14GA MALE SLIDE INSULATED FUSE, 20 AMP. MINI BLADE Y-UNION, 3/8" BARBED TEFLON HOSE, 5/16" ID,3/8"OD, 1/32" W HOSE,SPIRAL 3/8" CUFF ID, 1' L MAF EXT MOD 05+ MUSTANG 18GA STRD WIRE GREY	1 1 4 2 2 1 1 0.125 2
7P250-047 1/4l 4FU010-071 BRk 7U032-016 3/8" 4FU013-010 COVER	AIR INTAKE ASY INLET DUCT,"A" INLET DUCT,"B" #56 HOSE CLAMP LEEVE, 4 X 2, BLUE ER SLV 4.00 X 3.5 X 2.35L #64 HOSE CLAMP FILTER, 4.0FLG X 7.0L 3.8 I.D. MUSTANG GT IPT X 1" X 90° HSE FIT NPT TO 3/8"BARB 90° KT, INTAKE SUPPORT EFI FUEL HSE HI-PSR R, AIR FILTER, MUST GT 4-7X8MM SCHD SS	1 1 1 1 2 1 5 1 1 1 1 1 1 2	5W018-010 5W018-020 5W018-080 5W018-090 5W018-100 5W001-007 5W001-005 5W001-012	18GA STRD WIRE RED 18GA STRD WIRE BLK, UL1015 18GA STRD WIRE BLUE BULK 18GA STRD WIRE BROWN BULK 18GA STRD WIRE PURPLE 3/16" HEAT-SHRINK TUBING 3/8" PLASTIC WIRE LOOM 18-22 GA BUTT CONN RED INSUL	1 1 1 1 1 1.5 1.5 1.2
7\$450-200 SLE 7\$300-276 REDU 7R002-044 7R002-048 7R002-072 7R002-016 7U030-046 5	DISCHARGE ASY T, DISCH, MUST GT STD EEVE, 4 1/2 X 2, BLUE JCER, 3.0 X 2.75 X 2.5L #44 HOSE CLAMP #48 HOSE CLAMP #72 HOSE CLAMP #16 HOSE CLAMP J162 VACUUM LINE JMPRESS BYPASS VALVE	1 1 1 1 1 1 2 4 5 1 1.25 0.583			



2005-2006 Mustang GT, H.O. Part No. 4FU218-020SQ PARTS LIST

PART NO.	DESCRIPTION	QTY.	PART NUMBE	R DESCRIPTION	QTY.
008110 008130	SMALL SILVER DIE CUT DECA LICENSE PLATE FRAME	1	7R004-004 7R004-007 7U032-016	STEPLESS CLAMP, 1.0 OD HOSE STEPLESS CLAMP, 28.6 X 7MM WID 3/8" EFI FUEL HSE HI-PSR	0.25
008444	3 YR S/C WARRANTY PKG	1	7U033-020	HOSE, 5/8"ID CLASS 1 EMISSIONS	
2E229-240	V2-S SUPERCHARGER ASY, H		4FU214-021	COOL BYP HOSE RELOC AS	
4FU020-010	INSTR MAN 05-08 MUST GT		4FU114-021 7J875-010	ASY, WATER OUTLET, 05 MUST GT 7/8 SEALING WASHER	1 1
4FU110-010 7P375-075	P/S RESERVOIR RELOCATION 3/4" HOSE BARB UNION. BRASS	1 1	7F875-010	NUT, 7/8-14, SHORT/JAM	1
7P375-075	3/8" HOSE UNION, BRASS	1	7U133-050 7U133-190	1.5" X 90° HOSE, LONG LEG HOSE, COOLNT DRIV SIDE 05 MUST	1 Г 1
7R001-004	#4 HOSE CLÁMP	2	7U038-000	3/4" HEATER HOSE	3.5
7R001-008 7U038-030	#8 HOSE CLAMP HOSE, P/S, 3/4 ID	2 2 3 3	7P375-075 7R002-020	3/4" HOSE BARB UNION, BRASS #20 HOSE CLAMP	1 4
7U032-016	3/8" EFI FUEL HSE HI-PSR		7R002-024	#24 HOSE CLAMP	2
7A250-075 7J250-001	1/4-20 X .75 SHCS PLTD 1/4 WASHER, SAE, PLTD	1 2	7P125-002 7R002-010	FREEZE PLUG, 1.25 DIA, .25 TAL #10 HOSE CLAMP	1
7F250-021	1/4-20 NYLOCK NUT ZINC PLATED	1	7P125-016	1/8 NPT PLUG	1
4FU010-010 7U100-055	P/S RELOC BRKT, 05 GT MUST TIE WRAP, 7.5" NYLON	1 4	5A001-025	DIABLO MAFIA	1
4FU111-044	S/C MOUNTING BRKT ASY	1	5A003-035	PREDATOR, 05-08 MUSTAN	G 1
4FU010-044	S/C MOUNT PLT, MUST GT	1	8F060-048	FUEL INJ, 39LB EV6, OEM 03	
4FU010-034	IDLER MOUNT PLATE, MUST SPACER, STUDDED MUST GT	1	8F101-262	FUEL PMP ASY,05 MUST TWIN	
4FU017-011 2A017-750-05	SPACER, .750 OD X 2.691 LONG	2 2	7U032-018	3/8" SUBMERSIBLE EFI FUEL HOSE	
2A017-750-06	SPACER, .750 OD X 2.712 LONG	1 1	7U100-055 7R004-002	TIE WRAP, 7.5" NYLON STEPLESS CLAMP, 17.0-70	4 2
2A017-879-08 2A017-750-07	SPACER, .875 OD X 1.776 LONG SPACER, .750 OD X .097 LONG	1	8F001-255	255 INTANK FUEL PUMP '86-'97	1
4FU017-021	SPACÉR, IDLER, MUST GT	1	7R002-044 7R004-006	#44 HOSE CLAMP STEPLESS CLAMP, 11.3 X 5MM WID	1 4
4PCS016-160 2A046-120	PULLEY, IDLER BELT. GATES K061203	1 1	5W001-022	T-TAP CONN,14-16 AWG	2 2
7A375-375	3/8-16 X 3-3/4 HX HD	1	5W001-009 5W001-080	16-14GA MALE SLIDE INSULATED FUSE, 20 AMP. MINI BLADE	2 1
7C080-150 7C080-140	M8 X 1.25 X 150MM HXHD CL10.9 M8 X 1.25 X 140 HXHD CL8.8	1	7P375-099	Y-UNION, 3/8" BARBED TEFLON	1
7A375-100	3/8-16 X 1 G5 HHCS, PLT	2 7	7U032-025 7U032-030	HOSE, 5/16" ID,3/8"OD, 1/32" W HOSE,SPIRAL 3/8" CUFF ID, 1' L	0.12 2
7K312-030 7K375-040	5/16 AN WASHER, S.S. 3/8 AN960 FLAT WASHR PLATED	2 10	8N101-290	WELDED CORE ASY	1
4FU112-010	AIR INTAKE ASY	1	8N104-125	SUPRT PCS, 05-08 MUST GT CI	LR G1
4FU012-010 4FU012-015	INLET DUCT,"A" INLET DUCT,"B"	1 1	4FE014-010 5W001-009	RADIATOR PIPE-STAINLESS 16-14GA MALE SLIDE INSULATED	1
7R002-056		i		16-14 GA RING TERM .26" HOLE	i
	#56 HOSE CLAMP		5W001-011		
7S400-200	SLEEVE, 4 X 2, BLUE	2	5W001-015	FUSE, BLADE TYPE 20 AMP	1
	SLEEVE, 4 X 2, BLUE REDUCER SLV 4.00 X 3.5 X 2.35L #64 HOSE CLAMP	2 1 5			1 1 60
7S400-200 7S400-351 7R002-064 8H040-235	SLEEVE, 4 X 2, BLUE REDUCER SLV 4.00 X 3.5 X 2.35L #64 HOSE CLAMP AIR FILTER, 4.0FLG X 7.0L	2 1 5 1	5W001-015 5W001-022 5W001-032 5W001-050	FUSE, BLADE TYPE 20 AMP T-TAP CONN,14-16 AWG 1/4" PLASTIC WIRE LOOM HARNESS, FUEL INJ PLUG W/WIRES	60 S 1
7S400-200 7S400-351 7R002-064	SLEEVE, 4 X 2, BLUE REDUCER SLV 4.00 X 3.5 X 2.35L #64 HOSE CLAMP	2 1 5	5W001-015 5W001-022 5W001-032	FUSE, BLADE TYPE 20 AMP T-TAP CONN,14-16 AWG 1/4" PLASTIC WIRE LOOM	60 S 1 1
7S400-200 7S400-351 7R002-064 8H040-235 8A003-071 7P750-102 7P250-047	SLEEVE, 4 X 2, BLUE REDUCER SLV 4.00 X 3.5 X 2.35L #64 HOSE CLAMP AIR FILTER, 4.0FLG X 7.0L MAF, 3.8 I.D. MUSTANG GT 3/4NPT X 1" X 90° HSE FIT 1/4NPT TO 3/8"BARB 90°	2 1 5 1 1 1	5W001-015 5W001-022 5W001-032 5W001-050 5W001-071 5W018-010 7A250-050	FUSE, BLADE TYPE 20 AMP T-TAP CONN,14-16 AWG 1/4" PLASTIC WIRE LOOM HARNESS, FUEL INJ PLUG W/WIRES FUSE HOLDER,16GA WIRE 18GA STRD WIRE RED 1/4-20 X .50 SHCS ZINC PLTD	60 S 1 1
7S400-200 7S400-351 7R002-064 8H040-235 8A003-071 7P750-102 7P250-047 4FU010-071	SLEEVE, 4 X 2, BLUE REDUCER SLV 4.00 X 3.5 X 2.35L #64 HOSE CLAMP AIR FILTER, 4.0FLG X 7.0L MAF, 3.8 I.D. MUSTANG GT 3/4NPT X 1" X 90° HSE FIT 1/4NPT TO 3/8"BARB 90° BRKT, INTAKE SUPPORT	2 1 5 1 1	5W001-015 5W001-022 5W001-032 5W001-050 5W001-071 5W018-010 7A250-050 7A250-051	FUSE, BLADE TYPE 20 AMP T-TAP CONN, 14-16 AWG 1/4" PLASTIC WIRE LOOM HARNESS, FUEL INJ PLUG W/WIRES FUSE HOLDER, 16GA WIRE 18GA STRD WIRE RED 1/4-20 X .50 SHCS ZINC PLTD 1/4-20 X .50 HHCS ZINC PLTD	60 S 1 1
7S400-200 7S400-351 7R002-064 8H040-235 8A003-071 7P750-102 7P250-047 4FU010-071 7U032-016 4FU013-010	SLEEVE, 4 X 2, BLUE REDUCER SLV 4.00 X 3.5 X 2.35L #64 HOSE CLAMP AIR FILTER, 4.0FLG X 7.0L MAF, 3.8 I.D. MUSTANG GT 3/4NPT X 1" X 90° HSE FIT 1/4NPT TO 3/8"BARB 90° BRKT, INTAKE SUPPORT 3/8" EFI FUEL HSE HI-PSR COVER, AIR FILTER, MUST GT	2 1 5 1 1 1 1 4	5W001-015 5W001-022 5W001-032 5W001-050 5W001-071 5W018-010 7A250-050 7A250-051 7A250-074 7F250-020	FUSE, BLADE TYPE 20 AMP T-TAP CONN,14-16 AWG 1/4" PLASTIC WIRE LOOM HARNESS, FUEL INJ PLUG WWIRES FUSE HOLDER,16GA WIRE 18GA STRD WIRE RED 1/4-20 X .50 SHCS ZINC PLTD 1/4-20 X .50 HHCS ZINC PLTD 1/4-20 X .75 HHCS PLTD 1/4-20 HEX NUT	60 5 1 1 5 3 2 2 2
7S400-200 7S400-351 7R002-064 8H040-235 8A003-071 7P750-102 7P250-047 4FU010-071 7U032-016 4FU013-010 7C040-008	SLEEVE, 4 X 2, BLUE REDUCER SLV 4.00 X 3.5 X 2.35L #64 HOSE CLAMP AIR FILTER, 4.0FLG X 7.0L MAF, 3.8 I.D. MUSTANG GT 3/4NPT X 1" X 90° HSE FIT 1/4NPT TO 3/8"BARB 90° BRKT, INTAKE SUPPORT 3/8" EFI FUEL HSE HI-PSR COVER, AIR FILTER, MUST GT M4-7X8MM SCHD SS	2 1 5 1 1 1 1 1 4 1 2	5W001-015 5W001-022 5W001-032 5W001-050 5W001-071 5W018-010 7A250-050 7A250-051 7A250-074	FUSE, BLADE TYPE 20 AMP T-TAP CONN,14-16 AWG 1/4" PLASTIC WIRE LOOM HARNESS, FUEL INJ PLUG W/WIRES FUSE HOLDER,16GA WIRE 18GA STRD WIRE RED 1/4-20 X .50 SHCS ZINC PLTD 1/4-20 X .50 HHCS ZINC PLTD 1/4-20 X .75 HHCS PLTD 1/4-20 HEX NUT 6MM WASHER, PLATED	60 S 1 1
7S400-200 7S400-351 7R002-064 8H040-235 8A003-071 7P750-102 7P250-047 4FU010-071 7U032-016 4FU013-010 7C040-008	SLEEVE, 4 X 2, BLUE REDUCER SLV 4.00 X 3.5 X 2.35L #64 HOSE CLAMP AIR FILTER, 4.0FLG X 7.0L MAF, 3.8 I.D. MUSTANG GT 3/4NPT X 1" X 90° HSE FIT 1/4NPT TO 3/8"BARB 90° BRKT, INTAKE SUPPORT 3/8" EFI FUEL HSE HI-PSR COVER, AIR FILTER, MUST GT M4-7X8MM SCHD SS RAD PIPE RELOC ASY, MUST (2 1 5 1 1 1 1 1 4 1 2	5W001-015 5W001-022 5W001-032 5W001-050 5W001-071 5W018-010 7A250-050 7A250-051 7A250-074 7F250-020 7J006-093 7J250-001 7P156-082	FUSE, BLADE TYPE 20 AMP T-TAP CONN,14-16 AWG 1/4" PLASTIC WIRE LOOM HARNESS, FUEL INJ PLUG WWIRES FUSE HOLDER,16GA WIRE 18GA STRD WIRE RED 1/4-20 X .50 SHCS ZINC PLTD 1/4-20 X .50 HHCS ZINC PLTD 1/4-20 X .75 HHCS PLTD 1/4-20 HEX NUT 6MM WASHER, PLATED 1/4 WASHER, SAE, PLTD 5/32 TEE	60 5 1 1 5 3 2 2 2 5 4 1
7\$400-200 7\$400-351 7R002-064 8H040-235 8A003-071 7P750-102 7P250-047 4FU010-071 7U032-016 4FU013-010 7C040-008	SLEEVE, 4 X 2, BLUE REDUCER SLV 4.00 X 3.5 X 2.35L #64 HOSE CLAMP AIR FILTER, 4.0FLG X 7.0L MAF, 3.8 I.D. MUSTANG GT 3/4NPT X 1" X 90° HSE FIT 1/4NPT TO 3/8"BARB 90° BRKT, INTAKE SUPPORT 3/8" EFI FUEL HSE HI-PSR COVER, AIR FILTER, MUST GT M4-7X8MM SCHD SS	2 1 5 1 1 1 1 1 4 1 2	5W001-015 5W001-022 5W001-032 5W001-050 5W001-071 5W018-010 7A250-050 7A250-051 7A250-074 7F250-020 7J006-093 7J250-001 7P156-082 7P218-156	FUSE, BLADE TYPE 20 AMP T-TAP CONN,14-16 AWG 1/4" PLASTIC WIRE LOOM HARNESS, FUEL INJ PLUG WWIRES FUSE HOLDER,16GA WIRE 18GA STRD WIRE RED 1/4-20 X .50 SHCS ZINC PLTD 1/4-20 X .50 HHCS ZINC PLTD 1/4-20 X .75 HHCS PLTD 1/4-20 HEX NUT 6MM WASHER, PLATED 1/4 WASHER, SAE, PLTD 5/32 TEE VAC TEE, 7/32,7/32,5/32	60 5 1 1 5 3 2 2 2 5 4 1 1
7S400-200 7S400-351 7R002-064 8H040-235 8A003-071 7P750-102 7P250-047 4FU010-071 7U032-016 4FU013-010 7C040-008 4FU114-010 4FU014-010 7R002-024 4FU130-026	SLEEVE, 4 X 2, BLUE REDUCER SLV 4.00 X 3.5 X 2.35L #64 HOSE CLAMP AIR FILTER, 4.0FLG X 7.0L MAF, 3.8 I.D. MUSTANG GT 3/4NPT X 1" X 90° HSE FIT 1/4NPT TO 3/8"BARB 90° BRKT, INTAKE SUPPORT 3/8" EFI FUEL HSE HI-PSR COVER, AIR FILTER, MUST GT M47X8MM SCHD SS RAD PIPE RELOC ASY, MUST (RADIATOR PIPE, 05 GT MUST #24 HOSE CLAMP OIL FEED ASY	2 1 5 1 1 1 1 4 1 2 GT 1 1 2	5W001-015 5W001-022 5W001-032 5W001-050 5W001-071 5W018-010 7A250-050 7A250-051 7A250-074 7F250-020 7J006-093 7J250-001 7P156-082 7P218-156 7P375-075 7P500-026	FUSE, BLADE TYPE 20 AMP T-TAP CONN,14-16 AWG 1/4" PLASTIC WIRE LOOM HARNESS, FUEL INJ PLUG W/WIRES FUSE HOLDER,16GA WIRE 18GA STRD WIRE RED 1/4-20 X .50 SHCS ZINC PLTD 1/4-20 X .50 HHCS ZINC PLTD 1/4-20 X .75 HHCS PLTD 1/4-20 HEX NUT 6MM WASHER, PLATED 1/4 WASHER, SAE, PLTD 5/32 TEE VAC TEE, 7/32,7/32,5/32 3/4" HOSE BARB UNION, BRASS 1/2NPT X 3/4 BARB 90° BRASS	60 5 1 1 5 3 2 2 2 5 4 1 1
7S400-200 7S400-351 7R002-064 8H040-235 8A003-071 7P750-102 7P250-047 4FU010-071 7U032-016 4FU013-010 7C040-008 4FU114-010 7R002-024 4FU130-026 7U250-090-260	SLEEVE, 4 X 2, BLUE REDUCER SLV 4.00 X 3.5 X 2.35L #64 HOSE CLAMP AIR FILTER, 4.0FLG X 7.0L MAF, 3.8 I.D. MUSTANG GT 3/4NPT X 1" X 90° HSE FIT 1/4NPT TO 3/8"BARB 90° BRKT, INTAKE SUPPORT 3/8" EFI FUEL HSE HI-PSR COVER, AIR FILTER, MUST GT M47X8MM SCHD SS RAD PIPE RELOC ASY, MUST (RADIATOR PIPE, 05 GT MUST #24 HOSE CLAMP OIL FEED ASY OIL FEED HOSE, 26" -4X90°	2 1 5 1 1 1 1 4 1 2 GT 1 1 2	5W001-015 5W001-022 5W001-032 5W001-050 5W001-071 5W018-010 7A250-050 7A250-074 7F250-020 7J006-093 7J250-001 7P156-082 7P218-156 7P375-075 7P500-026 7P500-078	FUSE, BLADE TYPE 20 AMP T-TAP CONN,14-16 AWG 1/4" PLASTIC WIRE LOOM HARNESS, FUEL INJ PLUG W/WIRES FUSE HOLDER,16GA WIRE 18GA STRD WIRE RED 1/4-20 X .50 SHCS ZINC PLTD 1/4-20 X .50 HHCS ZINC PLTD 1/4-20 X .75 HHCS PLTD 1/4-20 HEX NUT 6MM WASHER, PLATED 1/4 WASHER, SAE, PLTD 5/32 TEE VAC TEE, 7/32,7/32,5/32 3/4" HOSE BARB UNION, BRASS 1/2NPT X 3/4 BARB 90° BRASS 1/2NPT X 3/4 HOSE FIT STRT	60 1 1 5 3 2 2 2 5 4 1 1
7S400-200 7S400-351 7R002-064 8H040-235 8A003-071 7P750-102 7P250-047 4FU010-071 7U032-016 4FU013-010 7C040-008 4FU114-010 7R002-024 4FU130-026 7U250-090-260 7P125-005 7P250-091	SLEEVE, 4 X 2, BLUE REDUCER SLV 4.00 X 3.5 X 2.35L #64 HOSE CLAMP AIR FILTER, 4.0FLG X 7.0L MAF, 3.8 I.D. MUSTANG GT 3/4NPT X 1" X 90° HSE FIT 1/4NPT TO 3/8"BARB 90° BRKT, INTAKE SUPPORT 3/8" EFI FUEL HSE HI-PSR COVER, AIR FILTER, MUST GT M47X8MM SCHD SS RAD PIPE RELOC ASY, MUST RADIATOR PIPE, 05 GT MUST #24 HOSE CLAMP OIL FEED ASY OIL FEED HOSE, 26" -4X90° 1/8 NPT STR. X -4 JIC FTG STL 1/4 NPT 90° X -4JIC FTG STL	2 1 5 1 1 1 1 2 GT 1 1 2	5W001-015 5W001-022 5W001-032 5W001-050 5W001-071 5W018-010 7A250-050 7A250-051 7A250-074 7F250-020 7J006-093 7J250-001 7P156-082 7P218-156 7P375-075 7P500-026 7P500-078 7R002-016 7R002-024	FUSE, BLADE TYPE 20 AMP T-TAP CONN,14-16 AWG 1/4" PLASTIC WIRE LOOM HARNESS, FUEL INJ PLUG WWIRES FUSE HOLDER,16GA WIRE 18GA STRD WIRE RED 1/4-20 X .50 SHCS ZINC PLTD 1/4-20 X .50 HHCS ZINC PLTD 1/4-20 X .75 HHCS PLTD 1/4-20 HEX NUT 6MM WASHER, PLATED 1/4 WASHER, SAE, PLTD 5/32 TEE VAC TEE, 7/32,7/32,5/32 3/4" HOSE BARB UNION, BRASS 1/2NPT X 3/4 BARB 90° BRASS 1/2NPT X 3/4 HOSE FIT STRT #16 HOSE CLAMP #24 HOSE CLAMP	60 1 1 5 3 2 2 2 5 4 1 1
7S400-200 7S400-351 7R002-064 8H040-235 8A003-071 7P750-102 7P250-047 4FU010-071 7U032-016 4FU013-010 7C040-008 4FU114-010 7R002-024 4FU130-026 7U250-090-260 7P125-005 7P250-091 7P250-034	SLEEVE, 4 X 2, BLUE REDUCER SLV 4.00 X 3.5 X 2.35L #64 HOSE CLAMP AIR FILTER, 4.0FLG X 7.0L MAF, 3.8 I.D. MUSTANG GT 3/4NPT X 1" X 90° HSE FIT 1/4NPT TO 3/8"BARB 90° BRKT, INTAKE SUPPORT 3/8" EFI FUEL HSE HI-PSR COVER, AIR FILTER, MUST GT M47X8MM SCHD SS RAD PIPE RELOC ASY, MUST RADIATOR PIPE, 05 GT MUST #24 HOSE CLAMP OIL FEED ASY OIL FEED HOSE, 26" -4X90° 1/8 NPT STR. X -4 JIC FTG STL 1/4 NPT 90° X -4JIC FTG STL 1/4 NPT X 1/4 NPT STRT T	2 1 5 1 1 1 1 2 GT 1 1 2 1	5W001-015 5W001-022 5W001-032 5W001-050 5W001-071 5W018-010 7A250-050 7A250-051 7A250-074 7F250-020 7J006-093 7J250-001 7P156-082 7P218-156 7P375-075 7P500-026 7P500-078 7R002-016 7R002-024 7R002-044	FUSE, BLADE TYPE 20 AMP T-TAP CONN,14-16 AWG 1/4" PLASTIC WIRE LOOM HARNESS, FUEL INJ PLUG WWIRES FUSE HOLDER,16GA WIRE 18GA STRD WIRE RED 1/4-20 X .50 SHCS ZINC PLTD 1/4-20 X .50 HHCS ZINC PLTD 1/4-20 X .75 HHCS PLTD 1/4-20 HEX NUT 6MM WASHER, PLATED 1/4 WASHER, SAE, PLTD 5/32 TEE VAC TEE, 7/32,7/32,5/32 3/4" HOSE BARB UNION, BRASS 1/2NPT X 3/4 BARB 90° BRASS 1/2NPT X 3/4 HOSE FIT STRT #16 HOSE CLAMP #24 HOSE CLAMP	60 1 1 5 3 2 2 2 5 4 1 1
7S400-200 7S400-351 7R002-064 8H040-235 8A003-071 7P750-102 7P250-047 4FU010-071 7U032-016 4FU013-010 7C040-008 4FU114-010 7R002-024 4FU130-026 7U250-090-260 7P125-005 7P250-091 7P250-034 4FU130-036	SLEEVE, 4 X 2, BLUE REDUCER SLV 4.00 X 3.5 X 2.35L #64 HOSE CLAMP AIR FILTER, 4.0FLG X 7.0L MAF, 3.8 I.D. MUSTANG GT 3/4NPT X 1" X 90° HSE FIT 1/4NPT TO 3/8"BARB 90° BRKT, INTAKE SUPPORT 3/8" EFI FUEL HSE HI-PSR COVER, AIR FILTER, MUST GT M47X8MM SCHD SS RAD PIPE RELOC ASY, MUST RADIATOR PIPE, 05 GT MUST #24 HOSE CLAMP OIL FEED ASY OIL FEED HOSE, 26" -4X90° 1/8 NPT STR. X -4 JIC FTG STL 1/4 NPT 90° X -4JIC FTG STL 1/4 NPT X 1/4 NPT STRT T OIL DRAIN ASSY	2 1 5 1 1 1 1 2 3 1 1 1 1 1	5W001-015 5W001-022 5W001-032 5W001-050 5W001-071 5W018-010 7A250-050 7A250-074 7F250-020 7J006-093 7J250-001 7P156-082 7P218-156 7P375-075 7P500-026 7P500-026 7P500-078 7R002-016 7R002-024 7R002-044 7R002-072	FUSE, BLADE TYPE 20 AMP T-TAP CONN,14-16 AWG 1/4" PLASTIC WIRE LOOM HARNESS, FUEL INJ PLUG WWIRES FUSE HOLDER,16GA WIRE 18GA STRD WIRE RED 1/4-20 X .50 SHCS ZINC PLTD 1/4-20 X .50 HHCS ZINC PLTD 1/4-20 X .75 HHCS PLTD 1/4-20 HEX NUT 6MM WASHER, PLATED 1/4 WASHER, SAE, PLTD 5/32 TEE VAC TEE, 7/32,7/32,5/32 3/4" HOSE BARB UNION, BRASS 1/2NPT X 3/4 BARB 90° BRASS 1/2NPT X 3/4 HOSE FIT STRT #16 HOSE CLAMP #24 HOSE CLAMP	60 1 1 5 3 2 2 2 2 5 4 1 1 4 2 2 2 4 2 2 2 1
7S400-200 7S400-351 7R002-064 8H040-235 8A003-071 7P750-102 7P250-047 4FU010-071 7U032-016 4FU013-010 7C040-008 4FU114-010 4FU014-010 7R002-024 4FU130-026 7U250-090-260 7P125-005 7P250-091 7P250-091 7P250-093 4FU130-036 7U030-036 7U030-036 7R001-008	SLEEVE, 4 X 2, BLUE REDUCER SLV 4.00 X 3.5 X 2.35L #64 HOSE CLAMP AIR FILTER, 4.0FLG X 7.0L MAF, 3.8 I.D. MUSTANG GT 3/4NPT X 1" X 90° HSE FIT 1/4NPT TO 3/8"BARB 90° BRKT, INTAKE SUPPORT 3/8" EFI FUEL HSE HI-PSR COVER, AIR FILTER, MUST GT M47X8MM SCHD SS RAD PIPE RELOC ASY, MUST RADIATOR PIPE, 05 GT MUST #24 HOSE CLAMP OIL FEED ASY OIL FEED HOSE, 26" -4X90° 1/8 NPT STR. X -4 JIC FTG STL 1/4 NPT 90° X -4JIC FTG STL 1/4 NPT X 1/4 NPT STR T OIL DRAIN ASSY 1/2" OIL DRAIN HOSE #8 HOSE CLAMP	2 1 5 1 1 1 1 2 3 1 1 1 1 1 1 3 5 7	5W001-015 5W001-022 5W001-032 5W001-050 5W001-071 5W018-010 7A250-050 7A250-051 7A250-074 7F250-020 7J006-093 7J250-001 7P156-082 7P218-156 7P375-075 7P500-026 7P500-078 7R002-016 7R002-044 7R002-072 7R003-016 7R003-028	FUSE, BLADE TYPE 20 AMP T-TAP CONN,14-16 AWG 1/4" PLASTIC WIRE LOOM HARNESS, FUEL INJ PLUG WWIRES FUSE HOLDER,16GA WIRE 18GA STRD WIRE RED 1/4-20 X .50 SHCS ZINC PLTD 1/4-20 X .50 HHCS ZINC PLTD 1/4-20 HEX NUT 6MM WASHER, PLATED 1/4 WASHER, SAE, PLTD 5/32 TEE VAC TEE, 7/32,7/32,5/32 3/4" HOSE BARB UNION, BRASS 1/2NPT X 3/4 BARB 90° BRASS 1/2NPT X 3/4 HOSE CLAMP #24 HOSE CLAMP #44 HOSE CLAMP #72 HOSE CLAMP ADEL CLAMP, 1.0" ADEL CLAMP, 2-3/8" .26 HOLE	60 111532222541114222422212
7S400-200 7S400-351 7R002-064 8H040-235 8A003-071 7P750-102 7P250-047 4FU010-071 7U032-016 4FU013-010 7C040-008 4FU114-010 4FU014-010 7R002-024 4FU130-026 7U250-090-26(7P125-005 7P250-091 7P250-091 7P250-094 4FU130-036 7U030-036 7R001-008 7P375-017	SLEEVE, 4 X 2, BLUE REDUCER SLV 4.00 X 3.5 X 2.35L #64 HOSE CLAMP AIR FILTER, 4.0FLG X 7.0L MAF, 3.8 I.D. MUSTANG GT 3/4NPT X 1" X 90° HSE FIT 1/4NPT TO 3/8"BARB 90° BRKT, INTAKE SUPPORT 3/8" EFI FUEL HSE HI-PSR COVER, AIR FILTER, MUST GT M47X8MM SCHD SS RAD PIPE RELOC ASY, MUST RADIATOR PIPE, 05 GT MUST #24 HOSE CLAMP OIL FEED HOSE, 26" -4X90° 1/8 NPT STR. X -4 JIC FTG STL 1/4 NPT Y 1/4 NPT STR T OIL DRAIN ASSY 1/2" OIL DRAIN HOSE #8 HOSE CLAMP 3/8NPT X 1/2 BEADED HSE BRB	2 1 5 1 1 1 1 4 1 2 3 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	5W001-015 5W001-022 5W001-032 5W001-050 5W001-071 5W018-010 7A250-050 7A250-051 7A250-074 7F250-020 7J006-093 7J250-001 7P156-082 7P218-156 7P375-075 7P500-026 7P500-078 7R002-016 7R002-024 7R002-044 7R002-072 7R003-016 7R003-016 7R003-028 7R007-001	FUSE, BLADE TYPE 20 AMP T-TAP CONN,14-16 AWG 1/4" PLASTIC WIRE LOOM HARNESS, FUEL INJ PLUG WWIRES FUSE HOLDER,16GA WIRE 18GA STRD WIRE RED 1/4-20 X .50 SHCS ZINC PLTD 1/4-20 X .50 HHCS ZINC PLTD 1/4-20 HEX NUT 6MM WASHER, PLATED 1/4 WASHER, SAE, PLTD 5/32 TEE VAC TEE, 7/32,7/32,5/32 3/4" HOSE BARB UNION, BRASS 1/2NPT X 3/4 BARB 90° BRASS 1/2NPT X 3/4 HOSE FIT STRT #16 HOSE CLAMP #24 HOSE CLAMP #44 HOSE CLAMP #72 HOSE CLAMP, 1.0" ADEL CLAMP, 2-3/8" .26 HOLE NYLON RATCHET CLAMP 1-1/8"	60 1 1 1 5 3 2 2 2 2 5 4 1 1 4 2 2 2 2 1 2 1 2 1 1 2 1 2 1 1 2 1 2
7S400-200 7S400-351 7R002-064 8H040-235 8A003-071 7P750-102 7P250-047 4FU010-071 7U032-016 4FU013-010 7C040-008 4FU114-010 4FU014-010 7R002-024 4FU130-026 7U250-090-260 7P125-005 7P250-091 7P250-091 7P250-091 4FU130-036 7U030-036 7R001-008 7P375-017	SLEEVE, 4 X 2, BLUE REDUCER SLV 4.00 X 3.5 X 2.35L #64 HOSE CLAMP AIR FILTER, 4.0FLG X 7.0L MAF, 3.8 I.D. MUSTANG GT 3/4NPT X 1" X 90° HSE FIT 1/4NPT TO 3/8"BARB 90° BRKT, INTAKE SUPPORT 3/8" EFI FUEL HSE HI-PSR COVER, AIR FILTER, MUST GT M47X8MM SCHD SS RAD PIPE RELOC ASY, MUST RADIATOR PIPE, 05 GT MUST #24 HOSE CLAMP OIL FEED ASY OIL FEED HOSE, 26" -4X90° 1/8 NPT STR. X -4 JIC FTG STL 1/4 NPT 90° X -4JIC FTG STL 1/4 NPT X 1/4 NPT STRT T OIL DRAIN ASSY 1/2" OIL DRAIN HOSE #8 HOSE CLAMP 3/8NPT X 1/2 BEADED HSE BRB PCV MOD ASY	2 1 5 1 1 1 1 2 3 1 1 1 3 5 1 1	5W001-015 5W001-022 5W001-022 5W001-050 5W001-071 5W018-010 7A250-050 7A250-051 7A250-020 7J006-093 7J250-001 7P156-082 7P218-156 7P375-075 7P500-026 7P500-078 7R002-016 7R002-044 7R002-044 7R002-044 7R002-072 7R003-016 7R003-028 7R007-001 7S275-055 7S450-200	FUSE, BLADE TYPE 20 AMP T-TAP CONN,14-16 AWG 1/4" PLASTIC WIRE LOOM HARNESS, FUEL INJ PLUG WWIRES FUSE HOLDER,16GA WIRE 18GA STRD WIRE RED 1/4-20 X .50 SHCS ZINC PLTD 1/4-20 X .50 HHCS ZINC PLTD 1/4-20 HEX NUT 6MM WASHER, PLATED 1/4 WASHER, SAE, PLTD 5/32 TEE VAC TEE, 7/32,7/32,5/32 3/4" HOSE BARB UNION, BRASS 1/2NPT X 3/4 BARB 90° BRASS 1/2NPT X 3/4 HOSE FIT STRT #16 HOSE CLAMP #24 HOSE CLAMP #24 HOSE CLAMP #44 HOSE CLAMP ADEL CLAMP, 1.0" ADEL CLAMP, 1.0" ADEL CLAMP, 2-3/8" .26 HOLE NYLON RATCHET CLAMP 1-1/8" ELBOW, Ø2.75 X 55° SILICONE SLEEVE, 4 1/2 X 2, BLUE	60 1 1 1 5 3 2 2 2 2 5 4 1 1 1 4 2 2 2 2 1 1 1 1 1 1 1 1 1 1 1
7\$400-200 7\$400-351 7R002-064 8H040-235 8A003-071 7P750-102 7P250-047 4FU010-071 7U032-016 4FU013-010 7C040-008 4FU114-010 4FU014-010 7R002-024 4FU130-026 7U250-090-26(7P125-005 7P250-091 7P250-091 7P250-034 4FU130-036 7U030-036 7R001-008 7P375-017	SLEEVE, 4 X 2, BLUE REDUCER SLV 4.00 X 3.5 X 2.35L #64 HOSE CLAMP AIR FILTER, 4.0FLG X 7.0L MAF, 3.8 I.D. MUSTANG GT 3/4NPT X 1" X 90° HSE FIT 1/4NPT TO 3/8"BARB 90° BRKT, INTAKE SUPPORT 3/8" EFI FUEL HSE HI-PSR COVER, AIR FILTER, MUST GT M47X8MM SCHD SS RAD PIPE RELOC ASY, MUST RADIATOR PIPE, 05 GT MUST #24 HOSE CLAMP OIL FEED HOSE, 26" -4X90° 1/8 NPT STR. X -4 JIC FTG STL 1/4 NPT Y 1/4 NPT STR T OIL DRAIN ASSY 1/2" OIL DRAIN HOSE #8 HOSE CLAMP 3/8NPT X 1/2 BEADED HSE BRB	2 1 5 1 1 1 1 4 1 2 3 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	5W001-015 5W001-022 5W001-032 5W001-050 5W001-071 5W018-010 7A250-051 7A250-051 7A250-074 7F250-020 7J006-093 7J250-001 7P156-082 7P218-156 7P375-075 7P500-026 7P500-078 7R002-016 7R002-024 7R002-044 7R002-044 7R002-072 7R003-016 7R003-028 7R007-001 7S275-055	FUSE, BLADE TYPE 20 AMP T-TAP CONN, 14-16 AWG 1/4" PLASTIC WIRE LOOM HARNESS, FUEL INJ PLUG WWIRES FUSE HOLDER, 16GA WIRE 18GA STRD WIRE RED 1/4-20 X .50 SHCS ZINC PLTD 1/4-20 X .50 HHCS ZINC PLTD 1/4-20 HEX NUT 6MM WASHER, PLATED 1/4 WASHER, SAE, PLTD 5/32 TEE VAC TEE, 7/32,7/32,5/32 3/4" HOSE BARB UNION, BRASS 1/2NPT X 3/4 BARB 90° BRASS 1/2NPT X 3/4 HOSE FIT STRT #16 HOSE CLAMP #24 HOSE CLAMP #44 HOSE CLAMP #72 HOSE CLAMP ADEL CLAMP, 1.0" ADEL CLAMP, 1.0" ADEL CLAMP, 2-3/8" .26 HOLE NYLON RATCHET CLAMP 1-1/8" ELBOW, Ø2.75 X 55° SILICONE	60 1 1 1 5 3 2 2 2 5 4 1 1 1 4 2 2 2 2 1 2 1 1 2 1 1 1 1 1 2 1 1 1 1



2005-2006 Mustang GT, H.O. cont'd Part No. 4FU218-020SQ

PARTS LIST

		QTY.
7U034-016 7U038-000 7U038-012 7U038-020 7U038-150 7U100-055 7U375-054 8D001-001 8F001-403 8N010-160 8N010-220 8N055-050 8N056-061	1" GS HEATER HOSE 3/4" HEATER HOSE HOSE,3/4"DIA 90°,4X12 LEGS HOSE, Ø3/4 'S' MOLDED RUBBER HOSE, 3/4"X150° MOLDED HOSE TIE WRAP, 7.5" NYLON 3/4" VINYL CAP STD COMPRESS BYPASS VALVE PUMP, WATER, BOSCH SURGE TANK BRKT, MUST GT MTG BRKT, 05-07 MUST BOSCH PMP PLASTIC CAP, SURGE TANK SURGE TANK INTEGRA GSR MODIFIE	1.25 12 1 1 1 6 1 1 1 1
8N106-135 8N006-020 8N010-171 8N010-173 2A017-036 7C080-030 7F008-020 7J312-000 7A250-051 7J250-001	WATER CLR ASY, MUST GEN.II WATER COOLR, FLDYN DUAL PASS BRACKET, DRVR SIDE CLR MNT,PLT BRACKET, PASS SIDE CLR MNT SPACER,PLT.BRG.HSG.,0.186" M8 X 1.25 X 30 HXHD CL10.9 NUT, M8 X 1.25 5/16 FLAT WASHER-SAE 1/4-20 X .50 HHCS ZINC PLTD 1/4 WASHER, SAE, PLTD	1 1 1 4 6 6 12 4 4
8N155-080 4FU010-051 4FU010-061 7A250-051 7C060-020 7J006-093 7J006-093 7P250-045 7P375-050 7R002-010 7R004-002 7U030-056 8N055-080	COOLANT RES RELOC, MUST MTG BRKT A, RES RELOC MUST BRKT B, COOL RES RELOC MUST 1/4-20 X .50 HHCS ZINC PLTD M6 X 1.0 X 20MM HHCS ZN 6MM WASHER, PLATED 6MM WASHER, PLATED 1/4 MALE NPT X 3/8 MALE BARB 3/8" HOSE UNION, BRASS #10 HOSE CLAMP STEPLESS CLAMP, 17.0-70 3/8 PCV/VAC RUBBER HOSE TANK, RAD OVERFLOW, MUST CHARGE COOLER DECAL	1 1 1 4 3 4 3 1 1 1 3 2.5 1



2005-2006 Mustang GT, H.O. Part No. 4FU218-020L/028L

PARTS LIST

08110		aged parts infinediately.				
D08130	PART NO.	DESCRIPTION	QTY.	PART NUMBE	R DESCRIPTION	QTY.
008341 CHARGE COOLER DECAL 1 71133-190 1.57 x 90° HOSE, LONG LEG 008447 1 YR S/C WARRANTY PKG 1 71033-190 1.57 x 90° HOSE, LONG LEG 009035 S/C LUBE, BOTTLED, 3-PACK 1 77975-075 S/C LUBE, BOTTLED, 3-PACK 1 77975-075 1 77975-050 1 NSTR MAN 05-08 MUST GT 1 77975-050 7 7797	008110	SMALL SILVER DIE CUT DECAL	. 2	7J875-010	7/8 SEALING WASHER	1
OB341 CHARGE COLER DECAL 1 70133-490 1 7093-800 709035 1 709035 5 5 5 5 5 5 5 5 5	008130	LICENSE PLATE FRAME	1			1
008447 1 YR S/C WARRANTY PKG 1 7093-000 3/4" HEATER HOSE 27920-202 1 Y3 SUPERCHARGER ASY, H.O. 1 1 77800-2020 4 PU020-010 4 PU1020-010 4 PU1020-010 4 PU100-010 7 P375-075 7 R001-002 4 PU030-010 8 PU038-075 7 R001-003 4 PU038-075 7 R001-004 4 PU038-075 7 R001-005 4 PU038-091 7 R001-008 4 PU038-091 7 R001-008 4 PU038-091 1/4-20 X 75 SHCS PLID 1 7 PU030-091 1/4-20 X 75 SHCS PLID 2 PU11-044 4 FU010-034 4 FU010-034 4 FU010-034 4 FU010-034 4 FU010-034 4 FU017-021 2 A017-750-05 2 PACER, 375 0D X 2.7712 LONG 2 PACER, 375 0D X 2.7712 LONG 2 PACER, 375 0D X 2.772 LONG 1 PACER SHOWN SHERS 2 PACER, 375 0D X 2.772 LONG 1 PACER SHOWN SHERS 3 R001-025 7 PA375-300 3 R001-025 7 PA375-300 3 R001-025 3 R001-025 3 R001-025 3 R001-025 3 R001-025 4 PU11-040 4 FU017-021 2 PU11-040 4 FU017-021 2 PASS CLAMP 4 FU017-021 2 PU11-040 4 FU017-021						1
19935 Sic Lube, Bottleb, 3-Pack 1						3.5
### ### ### ### ### ### ### ### ### ##			=			1
### AFF PLUG 1.25 DIA. 25 TAL ### AFF PLUG 1.25 DIA 25 DIA	009035	S/C LUBE, BOTTLED, 3-PACK	1		#20 HOSE CLAMP	4
### AU SUB ARR UNION REASS 1 7879-795 ### AU SE BARR UNION, BRASS 1 7879-795 ### AU SE BARR UNION ### AU SE BARR UNION, BRASS 1 7879-795 ### AU SE BARR UNION ### AU	2F329-020	V3 SUPERCHARGER ASY, H.O.	1			2 1
APU110-010 P/S RESERVOIR RELOCATION 1 7P125-016 1/8 NPT PLUG 1/8 NPT	4FU020-010	INSTR MAN 05-08 MUST GT	1			1
T-P375-075 3/4" HOSE BARB UNION, BRASS 1	4FU110-010	P/S RESERVOIR RELOCATION	1			1
7875-050 3/8" HOSE UNION, BRASS 1 78001-004 #4 HOSE CLAMP 2 8F060-048 FUEL INJ, 39LB EV6, 0EM 03 C 78001-008 #8 HOSE, PIS, 39 HOSE, PIS, 30 HOSE, 30 HOSE, 20 HOSE,						1
TRO01-008						. 1
7.255-0.021			2		•	-
7.255-0.021			2	8F060-048	FUEL INJ, 39LB EV6, OEM 03 C	OB 8
7.255-0.021 7.250-001 7.25			3			
TF250-02	7A250-075	1/4-20 X .75 SHCS PLTD	1			2.75
### 10010-010 7U100-050 7U1000-050						2
### ### ### ### ### ### ### ### ### ##						1
### SIC MOUNTING BRKT ASY				7R002-044	#44 HOSE CLAMP	1
4FU010-044 4FU017-034 4FU017-034 4FU017-034 4FU017-034 4FU017-041 5PACER, STUDDED MUST GT 204017-750-05 5PACER, STUDDED MUST GT 204017-750-05 2A017-750-05 2A017-750-05 5PACER, 750 OD X 2 691 LONG 2A017-750-07 4FU017-027 5PACER, 750 OD X .097 LONG 4FU017-027 4FU017-027 4FU017-027 4FU017-027 5PACER, 750 OD X .097 LONG 1 4FU017-027 4FU017-027 5PACER, 750 OD X .097 LONG 1 4FU017-027 4FU017-027 5PACER, 750 OD X .097 LONG 1 5PACE		-				4
4FU010-034 4FU017-011 SPACER, STUDDED MUST GT 2A017-750-05 SPACER, 750 OD X 2.691 LONG 2A017-750-06 SPACER, 750 OD X 2.712 LONG 2A017-750-06 SPACER, 750 OD X 2.712 LONG 2A017-750-07 SPACER, 750 OD X 2.712 LONG 3ED SPACER, 750 OD X 2.712 LONG 2A017-750-07 SPACER, 750 OD X 2.712 LONG 3ED						2
4FU017-011 SPACER, STUDDED MUST GT 2 7P375-099 Y-UNION, 3/8" BARBED TEFLON 2A017-750-05 SPACER, .750 OD X 2.691 LONG 2 7U032-030 HOSE, 5/16" ID, 3/8" BARBED TEFLON 2 7U032-030 HOSE, 5/16" ID, 3/8" DD X 1.776 LONG 1 7U032-030 HOSE, 5/16" ID, 3/8" DD X 1.776 LONG 1 7U032-030 HOSE, 5/16" ID, 3/8" OD X 1.776 LONG 1 7U032-030 HOSE, 5/16" ID, 3/8" OD X 1.776 LONG 1 7U032-030 HOSE, 5/16" ID, 3/8" OD X 1.776 LONG 1 7U032-030 HOSE, SPIRAL 3/8" CUFF ID, 1' L 8N101-290 SPACER, .750 OD X .097 LONG 1 8N101-290 SPACER, .750 OD X .097			1			1
2A017-750-06 SPACER, 750 OD X 2.712 LONG 1 2A017-879-08 SPACER, 750 OD X 1.716 LONG 1 2A017-750-07 SPACER, 750 OD X 1.716 LONG 1 2A017-750-07 SPACER, 750 OD X 0.97 LONG 1 2A017-750 SPACER, 750 SPACER, 750 OD X 0.97 LONG 1 2A017-750 SPACER, 750 OD X 0.97 LONG 1 2A017-750 SPACER, 750 OD X 0.97 LONG 1 2A017-750 SPACER, 750 SPACER, 750 SPACER, 750 SPACER, 750 SPACER, 750 SPACER, 750 SP			2			1
2A017-879-08 SPACER, 875 OD X 1.776 LONG 1 2A017-750-07 SPACER, 750 OD X 097 LONG 1 SPACER, 750 OD X 097 LONG 1 SPACER, 750 OD X 097 LONG 1 SPACER, 1750-07 SP		SPACER, .750 OD X 2.691 LONG	2			0.125
## AFU017-750-07 SPACER, 750 OD X, 097 LONG 1				7U032-030	,- , , , , , , , , , , , , , , , , ,	2
## ## ## ## ## ## ## ## ## ## ## ## ##				8N101-290	WELDED CORE ASY	1
2A046-120 BELT, GATES K061203 7A375-375 3/8-16 X 3-3/4 HX HD 1 5W001-011 16-14 GA RING TERM. 26" HOLE 7C080-150 M8 X 1.25 X 150MM HXHD CL10.9 1 5W001-015 FUSE, BLADE TYPE 20 AMP 7C080-140 M8 X 1.25 X 140 HXHD CL8.8 2 5W001-022 T-TAP CONN, 14-16 AWG 7A375-100 3/8-16 X 1 G5 HHCS, PLT 7 5W001-032 1/4" PLASTIC WIRE LOOM 7K312-030 5/16 AN WASHER, S.S. 2 5W001-050 7K375-040 3/8 AN960 FLAT WASHR PLATED 10 4FU112-010 4FU012-010 4FU012-010 INLET DUCT."A" 1 7A250-050 1/4-20 X 50 SHCS ZINC PLTD 1/4-20 X 50 SHCS Z		SPACER, IDLER, MUST GT	1			R G1
7A375-375 3/8-16 X 3-3/4 HX HD 1 5W001-011 16-14 GA RING TERM. 26" HOLE 7C080-150 M8 X 1.25 X 150MM HXHD CL10.9 1 5W001-015 FUSE, BLADE TYPE 20 AMP 7A375-100 3/8-16 X 1 G5 HHCS, PLT 7 5W001-022 1-7A275-100 3/8-16 X 1 G5 HHCS, PLT 7 5W001-032 1/4" PLASTIC WIRE LOOM 7K312-030 5/16 AN WASHER, S.S. 2 5W001-022 1/4" PLASTIC WIRE LOOM 4FU12-010 4FU12-010 4FU12-010 4FU12-010 INLET DUCT."R" 1 7A250-050 1/4-20 X .50 SHCS ZINC PLTD 7R002-056 7S400-200 SLEEVE, 4 X 2, BLUE 2 SLEEVE, 4 X 2, BLUE 2 SLEEVE, 4 X 2, BLUE 8H040-235 AIR FILTER, 4.0FLG X 7.0L 7P250-040 4FU013-010 7P250-047 1WAPT TO 3/8"BARB 90" 1 P7500-026 1/4-20 X .50 HHCS ZINC PLTD 1/4-20 X .50 HCS ZINC PLTD 1/4-20 X .50 SHCS ZINC PLTD 1/4-20 X .50			1			1
7C080-150 M8 X 1.25 X 150MM HXHD CL10.9 1 5W001-015 FUSE: BLADE TYPE 20 AMP 7C080-140 M8 X 1.25 X 140 HXHD CL8.8 2 5W001-022 1-TAP CONN, 14-16 AWG 7A375-100 3/8-16 X 1 G5 HHCS, PLT 7 5W001-032 1/4" PLASTIC WIRE LOOM 7K312-030 5/16 AN WASHER, S.S. 2 5W001-050 HARNESS, FUEL INJ PLUG WWIRES 7K375-040 3/8 AN960 FLAT WASHR PLATED 10 5W001-050 HARNESS, FUEL INJ PLUG WWIRES 4FU112-010 AIR INTAKE ASY 1 5W018-010 16GA STRD WIRE RED 4FU012-015 INLET DUCT,"A" 1 7A250-050 1/4-20 X. 50 SHCS ZINC PLTD 4FU012-015 INLET DUCT,"B" 1 7A250-050 1/4-20 X. 50 SHCS ZINC PLTD 78400-206 #56 HOSE CLAMP 1 7A250-051 1/4-20 X. 50 SHCS ZINC PLTD 78400-305 REDUCER SIV 4.00 X. 35 X 2.35L 1 7J006-093 6MM WASHER, PLATED 78002-064 #64 HOSE CLAMP 5 7J250-001 1/4 WASHER, PLATED 78703-0102 AIR FILTER, 4.0FLG X.7.0L 1 7P218-156 WAC TEE, 7						1
7C080-140						1
7K312-030 5/16 AN WASHER, S.S. 2 5W001-050 HARNESS, FUEL INJ PLUG WWIRES 7K375-040 3/8 AN960 FLAT WASHR PLATED 10 5W001-050 FUSE HOLDER, 16GA WIRE 4FU112-010 AIR INTAKE ASY 1 5W018-010 18GA STRD WIRE RED 4FU012-015 INLET DUCT,"A" 1 7A250-050 1/4-20 X. 50 SHCS ZINC PLTD 7R002-056 #56 HOSE CLAMP 1 7A250-051 1/4-20 X. 50 HHCS ZINC PLTD 78400-351 REDUCER SLV 4.00 X 3.5 X 2.35L 1 77060-093 6MM WASHER, PLATED 78400-351 REDUCER SLV 4.00 X 3.5 X 2.35L 1 70060-093 6MM WASHER, PLATED 78400-351 REDUCER SLV 4.00 X 3.5 X 2.35L 1 77050-001 1/4 WASHER, PLATED 8003-071 MAF, 3.8 I.D. MUSTANG GT 1 7P156-082 5/32 TEE 8003-071 MAF, 3.8 I.D. MUSTANG GT 1 7P218-156 VAC TEE, 7/32,7/32,5/32 7P250-047 1/4NPT X 1" X 90° HSE FIT 1 7P375-075 3/4" HOSE BARB UNION, BRASS 7P250-047 1/4NPT X 3/4 BARB 90° 1 7P500-026 1/2NPT X 3/4 HO						1
7K375-040 3/8 AN960 FLAT WASHR PLATED 10 5W001-071 FUSE HOLDER, 16GA WIRE 4FU112-010 AIR INTAKE ASY 1 5W018-010 18GA STRD WIRE RED 4FU012-010 INLET DUCT, "B" 1 7A250-050 1/4-20 X. 50 HHCS ZINC PLTD 7R002-056 #56 HOSE CLAMP 1 7A250-051 1/4-20 X. 50 HHCS ZINC PLTD 7S400-200 #56 HOSE CLAMP 1 7A250-074 1/4-20 X. 50 HHCS ZINC PLTD 7S400-200 #56 HOSE CLAMP 1 7A250-074 1/4-20 X. 50 HHCS ZINC PLTD 7S400-200 #56 HOSE CLAMP 1 7A250-0074 1/4-20 X. 75 HHCS PLTD 7S400-201 #56 HOSE CLAMP 1 7A250-020 1/4-20 X. 75 HHCS PLTD 7S400-204 #64 HOSE CLAMP 5 7J250-020 6MM WASHER, PLATED 7R002-064 #64 HOSE CLAMP 5 7J250-001 1/4 WASHER, SAE, PLTD 6MM WASHER, PLATED 7P750-102 3/4NPT X 1" X 90° HSE FIT 1 7P218-156 VAC TEE, 7/32,7/32,5/32 7P250-047 1/4NPT TO 3/8"BARB 90° 1 7P500-026 1/2NPT X 3/4 HOSE PLASH						60
### 4FU112-010 4FU012-010 4FU012-015 7R002-056 7S400-200 7S400-351 7R002-064 8H040-235 8A003-071 7P750-102 7P750-002 7P250-047 4FU010-071 7C020-046 4FU010-071 7C020-046 4FU010-071 7C020-047 4FU013-010 4FU014-010 4FU014-010 4FU014-010 4FU014-010 7C040-008 4FU114-010 4FU013-016 7P375-106 7P375-106 7P375-106 7P375-106 7P375-106 7P375-106 7P625-377 7R004-002 4FU139-096 7R004-007 7R004						i 1 1
4FU012-010 4FU012-015 4FU012-015 1NLET DUCT,"A" 1 7A250-050 11/4-20 X .50 SHCS ZINC PLTD 1/4-20 X .50 HHCS ZINC PLTD 1/4-20 X .50 HCS ZINC PLTD 1/4-20 X						
### AFU012-015 TR002-056						5 3 2 2 2
78400-200 78400-351 7R002-064 8H040-235 8H041-20 HEX NUT 14 WASHER, PLATED 1/4 WASHER, PLATE 1/4 WASHER 1/4 WASH						2
7S400-351 7R002-064 8H040-235 8A003-071 7P750-102 3/4NPT X 1" X 90° HSE FIT 7U032-016 4FU010-071 7C040-008 4FU114-010 7R002-024 4FU114-010 7R002-024 4FU139-096 7P375-106 7P375-106 7P375-106 7P375-106 7P625-377 7R004-004 7R004-007 7R004-	7R002-056	#56 HOSE CLAMP				2
TR002-064						5
8H040-235 8A003-071 8A003-071 8A003-071 8A003-071 8AF, 3.8 I.D. MUSTANG GT 7P750-102 7P250-047 7P250-047 1/4NPT X 1" X 90° HSE FIT 7P375-075 4FU010-071 7U032-016 4FU013-010 7C040-008 4FU114-010 4FU014-010 7R002-024 4FU114-010 7R002-024 4FU139-096 7P375-106 7P375-106 7P625-377 7P004-004 7R004-007 8TEPLESS CLAMP, 1.0 OD HOSE 7R004-007 8TEPLESS CLAMP, 1.0 OD HOSE 7R004-007 8AIR FILTER, 4.0FLG X 7.0L 1 7P218-156 7P2						4
8A003-071 7P750-102 7P750-102 7P750-102 7P250-047 7P500-047 7P500-047 7P500-047 7P500-047 7P500-047 7P500-047 7P500-047 7P500-058 7P250-047 7P500-078 7P600-078 7P600-078 7P600-078 7P600-078 7P600-078 7P600-078 7P600-079 7P600-078 7P600-		AIR FILTER, 4.0FLG X 7.0L				1
7P250-047 7P250-047 7P250-047 4FU010-071 7U032-016 3/8" EFI FUEL HSE HI-PSR 4FU013-010 7C040-008 7C040-008 4FU114-010 4FU014-010 7R002-024 4FU014-010 7R003-016 7R003-016 7R004-006 7P375-106 7P375		MAF, 3.8 I.D. MUSTANG GT	•			1
### 1010-071 BRKT, INTAKE SUPPORT 1 7P500-078 1/2NPT X 3/4 HOSE FIT STRT 7U032-016 3/8" EFI FUEL HSE HI-PSR 4 7R002-016 #16 HOSE CLAMP 7C040-008 AFU013-010 7C040-008 M47X8MM SCHD SS 2 7R002-044 #44 HOSE CLAMP 7R002-072 #72 HOSE CLAMP 7R002-072 #72 HOSE CLAMP 7R003-016 ADEL CLAMP 7R003-016 ADEL CLAMP 1.0" AFU014-010 7R002-024 #24 HOSE CLAMP 2 7R003-016 ADEL CLAMP 1.0" ADEL CLAMP 1.0" ADEL CLAMP 1.10" ADEL CLAMP 1.20" ADEL CLAM						4
7U032-016 4FU013-010 7C040-008 4FU114-010 4FU014-010 7R002-024 4FU014-010 7R003-016 7R003-016 7R004-004 7R004-007 7R004-008 7R004-007 7R004-007 7R004-008 7R0						2 2
4FU013-010 7C040-008 4FU114-010 4FU014-010 7R002-024 4FU114-010 7R002-024 4FU114-010 7R002-024 4FU114-010 7R002-024 4FU114-010 7R002-024 4FU114-010 7R002-024 4FU114-010 7R002-024 4FU139-096 7P375-106 7P625-377 7R004-002 7R004-004 7R004-004 7R004-007 7R004-008 7R003-016 7R003					#16 HOSE CLAMP	4
### ### ### ### ### ### ### ### ### ##		COVER, AIR FILTER, MUST GT	1			2
4FU114-010 RAD PIPE RELOC ASY, MUST GT 1 7R003-016 ADEL CLAMP, 1.0" 4FU014-010 RADIATOR PIPE, 05 GT MUST 1 7R003-028 ADEL CLAMP, 2-3/8" .26 HOLE 7R007-001 4FU139-096 #24 HOSE CLAMP 2 7R007-001 NYLON RATCHET CLAMP 1-1/8" NYLON RATCHET NYLON NYLON NYLON RATCHET NYLON NYLON NYLON RATCHET NYLON	7C040-008	M47X8MM SCHD SS	2			2 2
4FU014-010 7R002-024 #24 HOSE CLAMP 2 7R007-001 #24 HOSE CLAMP 2 7R007-001 NYLON RATCHET CLAMP 1-1/8" 4FU139-096 PCV MOD ASY 1 7S275-055 PCV VALVE, FORD, 3/8" HOSE 1 7F055-377 7R004-002 STEPLESS CLAMP, 17.0-70 2 7R004-004 STEPLESS CLAMP, 1.0 OD HOSE 7R004-007 STEPLESS CLAMP, 28.6 X 7MM WID 1 7R004-006 RADEL CLAMP, 2-3/8" .26 HOLE NYLON RATCHET CLAMP 1-1/8" ELBOW, Ø2.75 X 55° SILICONE 7S450-200 SLEEVE, 4 1/2 X 2, BLUE 7V030-046 5/32" VACUUM LINE 3/4"X90° RUBBER HOSE, SHORT 7U034-016 1" GS HEATER HOSE 7V034-016 1" GS HEATER HOSE					ADEL CLAMP. 1.0"	1
4FU139-096 PCV MOD ASY 1 7S275-055 ELBOW, Ø2.75 X 55° SILICONE 7P375-106 PCV VALVE, FORD, 3/8" HOSE 1 7S450-200 SLEEVE, 4 1/2 X 2, BLUE 7P625-377 5/8" -3/8" REDUCER BARB UNION 1 7U030-046 5/32" VACUUM LINE 7R004-002 STEPLESS CLAMP, 17.0-70 2 7U030-065 3/4"X90° RUBBER HOSE, SHORT 7R004-007 STEPLESS CLAMP, 1.0 OD HOSE 3 7U034-016 1" GS HEATER HOSE 7R004-007 STEPLESS CLAMP, 28.6 X 7MM WID 1 7U034-016 1" GS HEATER HOSE				7R003-028	ADEL CLAMP, 2-3/8" .26 HOLE	2
7P375-106 PCV VALVE, FORD, 3/8" HOSE 1 7S450-200 SLEÉVE, 4 1/2 X 2, BLUE 7P625-377 5/8" -3/8" REDUCER BARB UNION 1 7U030-046 5/32" VACUUM LINE 7R004-002 STEPLESS CLAMP, 17.0-70 2 7U030-065 3/4"X90° RUBBER HOSE, SHORT 7R004-004 STEPLESS CLAMP, 1.0 OD HOSE 3 7U034-016 1" GS HEATER HOSE 7R004-007 STEPLESS CLAMP, 28.6 X 7MM WID 1 7U034-016 1" GS HEATER HOSE					NYLON RATCHET CLAMP 1-1/8"	16
7P625-377 5/8" -3/8" REDUCER BARB UNION 1 7U030-046 5/32" VACUUM LINE 7R004-002 STEPLESS CLAMP, 17.0-70 2 7U030-065 3/4"X90° RUBBER HOSE, SHORT 7R004-004 STEPLESS CLAMP, 1.0 OD HOSE 3 7U034-016 1" GS HEATER HOSE 7R004-007 STEPLESS CLAMP, 28.6 X 7MM WID 1 7U034-016 1" GS HEATER HOSE						1 1
7R004-002 STEPLESS CLAMP, 17.0-70 2 7U030-065 3/4"X90° RUBBER HOSE, SHORT 7R004-004 STEPLESS CLAMP, 1.0 OD HOSE 3 7U034-016 1" GS HEATER HOSE 7R004-007 STEPLESS CLAMP, 28.6 X 7MM WID 1 7U034-016 1" GS HEATER HOSE			•			5
7R004-004 STEPLESS CLAMP, 1.0 OD HOSE 3 7U034-016 1" GS HEATER HOSE 7R004-007 STEPLESS CLAMP, 28.6 X 7MM WID 1 7U034-016 1" GS HEATER HOSE					3/4"X90° RUBBER HOSE, SHORT	1
71004-007 OTEL ELOO OLAWII , 20.0 X 7WW WID T		STEPLESS CLAMP, 1.0 OD HOSE		7U034-016	1" GS HEATER HOSE	1
ALIONO DARE DIOTETE FOR THE PORT AND THE STATE OF AN HEATED BINGS						1.25
7,0002,010 0/0 E111,0E1111,010 0.20 71,000,040 11,00E 0/41,000,404,01,E00	7U032-016	3/8" EFI FUEL HSE HI-PSR	0.25	7U038-000 7U038-012	3/4" HEATER HOSE HOSE 3/4"DIA 90° 4X12 LEGS	12 1
711038-020 HOSE, 3/4 IS GEAGG TEMIGORONG 0.00007		•				1
4FU214-021 COOL BYP HOSE RELOC ASY 1 4FU114-021 ASY, WATER OUTLET, 05 MUST GT 1 7U038-150 HOSE, 3/4"X150° MOLDED HOSE						1



2005-2006 Mustang GT, H.O. cont'd Part No. 4FU218-020L/028L

PARTS LIST

PART NO.	DESCRIPTION	QTY.
7U100-055 7U375-054 8D001-001 8F001-403 8N010-160 8N010-220 8N055-050 8N056-061	TIE WRAP, 7.5" NYLON 3/4" VINYL CAP STD COMPRESS BYPASS VALVE PUMP, WATER, BOSCH SURGE TANK BRKT, MUST GT MTG BRKT, 05-07 MUST BOSCH PMP PLASTIC CAP, SURGE TANK SURGE TANK INTEGRA GSR MODIFIE	6 1 1 1 1 1 1
8N106-135 8N006-020 8N010-171 8N010-173 2A017-036 7C080-030 7F008-020 7J312-000 7A250-051 7J250-001	WATER CLR ASY, MUST GEN.II WATER COOLR, FLDYN DUAL PASS BRACKET, DRVR SIDE CLR MNT,PLT BRACKET, PASS SIDE CLR MNT SPACER,PLT.BRG.HSG.,0.186" M8 X 1.25 X 30 HXHD CL10.9 NUT, M8 X 1.25 5/16 FLAT WASHER-SAE 1/4-20 X .50 HHCS ZINC PLTD 1/4 WASHER, SAE, PLTD	1 1 1 4 6 6 12 4 4
8N155-080 4FU010-051 4FU010-061 7A250-051 7C060-020 7J006-093 7J006-093 7P250-045 7P375-050 7R002-010 7R004-002 7U030-056 8N055-080	COOLANT RES RELOC, MUST MTG BRKT A, RES RELOC MUST BRKT B, COOL RES RELOC MUST 1/4-20 X .50 HHCS ZINC PLTD M6 X 1.0 X 20MM HHCS ZN 6MM WASHER, PLATED 6MM WASHER, PLATED 1/4 MALE NPT X 3/8 MALE BARB 3/8" HOSE UNION, BRASS #10 HOSE CLAMP STEPLESS CLAMP, 17.0-70 3/8 PCV/VAC RUBBER HOSE TANK, RAD OVERFLOW, MUST	1 1 1 4 3 4 3 1 1 1 3 2.5 1



2007-2008 Mustang GT, Standard Part No. 4FU218-030SQ/038SQ

PARTS LIST

PART NO.	DESCRIPTION	QTY.	PART NUMBER	R DESCRIPTION	QTY.
2E229-230 4FU130-036 7U030-036 7R001-008 7P375-017 4FU130-026 7U250-090-260 7P125-005 7P250-091 7P250-034 4FU112-020 4FU012-020 7S450-200 7S300-276 7R002-044 7R002-044 7R002-048 7R002-016 7U030-046 8D001-001 7U034-016 7U034-016 7P218-156 4FU111-044 4FU010-044	V2-S SUPERCHARGER ASY OIL DRAIN ASSY 1/2" OIL DRAIN HOSE #8 HOSE CLAMP 3/8NPT X 1/2 BEADED HSE BRB OIL FEED ASY OIL FEED HOSE, 26" -4X90° 1/8 NPT STR. X -4 JIC FTG STL 1/4 NPT 90° X -4JIC FTG STL 1/4 NPT X 1/4 NPT STRT T DISCHARGE ASY DUCT, DISCH, MUST GT STD SLEEVE, 4 1/2 X 2, BLUE REDUCER, 3.0 X 2.75 X 2.5L #44 HOSE CLAMP #48 HOSE CLAMP #72 HOSE CLAMP #72 HOSE CLAMP 5/32" VACUUM LINE STD COMPRESS BYPASS VALVE 1" GS HEATER HOSE 1" GS HEATER HOSE VAC TEE, 7/32,7/32,5/32 S/C MOUNTING BRKT ASY S/C MOUNT PLT, MUST GT	1 3FT 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	4FU114-030 4FU014-061 4FU014-060 5W001-085 7C060-020 7J006-094 7R002-024 7U012-018 8F101-262 7U032-018 7U100-055 7R004-002 8F001-255 7R004-002 8F001-255 7R004-006 5W001-022 5W001-009 5W001-080 7P375-099 7U032-030 5A003-035 4FU112-010	WATER PIPE ASSY, 07-08 MUSHOUSING, THRMST RELC 07 MUST WATER PIPE, Ø1.5 X 90°,07 MUST SLEEVE, FLEX BRD Ø1.5" NOM. M6 X 1.0 X 16MM SHCS CL10.9+ Z M6 X 1.0 X 20MM HX 6MM WASHER S.S. #24 HOSE CLAMP O-RING, 07 MUST GT THERM HSG FUEL PMP ASY,05 MUST TWIN 3/8" SUBMERSIBLE EFI FUEL HOSE TIE WRAP, 7.5" NYLON STEPLESS CLAMP, 17.0-70 255 INTANK FUEL PUMP '86-'97 #44 HOSE CLAMP STEPLESS CLAMP, 11.3 X 5MM WIE T-TAP CONN, 14-16 AWG 16-14GA MALE SLIDE INSULATED FUSE, 20 AMP. MINI BLADE Y-UNION, 3/8" BARBED TEFLON HOSE, 5/16" ID, 3/8"OD, 1/32" WHOSE,SPIRAL 3/8" CUFF ID, 1' L PREDATOR, 05-08 MUSTAN AIR INTAKE ASY INLET DUCT,"A"	T GT 1 0.83 2 2 2 3 1 1 INTA1 E 2.75 4 2 1 0.125 C 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
4FU010-034 4FU017-011 2A017-750-05 2A017-750-06 2A017-879-08 2A017-750-07 4FU017-021 4PCS016-160 2A046-120 7A375-375 7C080-150 7C080-140 7A375-100 7K375-040 4FU110-010 7P375-075 7P375-050 7R001-004 7R001-008 7U032-016 7A250-075 7J250-001 7F250-021	IDLER MOUNT PLATE, MUST SPACER, STUDDED MUST GT SPACER, 750 OD X 2.691 LONG SPACER, 750 OD X 2.712 LONG SPACER, 750 OD X 1.776 LONG SPACER, 875 OD X 1.776 LONG SPACER, 1750 OD X .097 LONG SPACER, IDLER, MUST GT PULLEY, IDLER BELT, GATES KO61203 3/8-16 X 3-3/4 HX HD M8 X 1.25 X 150MM HXHD CL10.9 M8 X 1.25 X 150MM HXHD CL10.9 M8 X 1.25 X 150MM HXHD CL10.9 M8 X 1.25 X 140 HXHD CL8.8 3/8-16 X 1 G5 HHCS, PLT 5/16 AN WASHER, S.S. 3/8 AN960 FLAT WASHR PLATED P/S RESERVOIR RELOCATION 3/4" HOSE BARB UNION, BRASS 3/8" HOSE CLAMP #8 HOSE CLAMP HOSE, P/S, 3/4 ID 3/8" EFI FUEL HSE HI-PSR 1/4-20 X .75 SHCS PLTD 1/4 WASHER, SAE, PLTD 1/4-20 NYLOCK NUT ZINC PLATED	1 2 2 1 1 1 1 1 1 1 2 7 2 10 1 1 1 2 3 3 1 2 1 2 1 1	4FU012-015 7R002-056 7S400-200 7S400-351 7R002-064 8H040-235 8A003-071 7P750-102 7P250-047 4FU010-071 7U032-016 4FU013-010 7C040-008 4FU101-001 5W018-030 5W018-030 5W018-040 5W018-090 5W018-090 5W018-090 5W018-090 5W018-090 5W001-007 5W001-005 5W001-012	INLET DUCT, "B" #56 HOSE CLAMP SLEEVE, 4 X 2, BLUE REDUCER SLV 4.00 X 3.5 X 2.35L #64 HOSE CLAMP AIR FILTER, 4.0FLG X 7.0L MAF, 3.8 I.D. MUSTANG GT 3/4NPT X 1" X 90° HSE FIT 1/4NPT TO 3/8"BARB 90° BRKT, INTAKE SUPPORT 3/8" EFI FUEL HSE HI-PSR COVER, AIR FILTER, MUST GT M47X8MM SCHD SS MAF EXT MOD 05+ MUSTAN 18GA STRD WIRE GREY 18GA STRD WIRE BLK, UL1015 18GA STRD WIRE BLK, UL1015 18GA STRD WIRE BLUE BULK 18GA STRD WIRE BROWN BULK 18GA STRD WIRE PURPLE 3/16" HEAT-SHRINK TUBING 3/8" PLASTIC WIRE LOOM 18-22 GA BUTT CONN RED INSUL	1 1 2 1 5 1 1 1 1 1 4 1 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
7U032-016 7U033-020 8F060-048 008110 008444	P/S RELOC BRKT, 05 GT MUST TIE WRAP, 7.5" NYLON PCV MOD ASY PCV VALVE, FORD, 3/8" HOSE 5/8" -3/8" REDUCER BARB UNION STEPLESS CLAMP, 17.0-70 STEPLESS CLAMP, 1.0 OD HOSE STEPLESS CLAMP, 28.6 X 7MM WID 3/8" EFI FUEL HSE HI-PSR HOSE, 5/8"ID CLASS 1 EMISSIONS FUEL INJ, 39LB EV6, OEM 03 C SMALL SILVER DIE CUT DECA 3 YR S/C WARRANTY PKG LICENSE PLATE FRAME, VORTE INSTR MAN 05-08 MUST GT	L 2 1			



2007-2008 Mustang GT, Standard Part No. 4FU218-030L/038L

PARTS LIST

ART NO.	DESCRIPTION	QTY.	PART NUMBER	DESCRIPTION	QTY.
008110	SMALL SILVER DIE CUT DECAL	2	5W001-085	SLEEVE, FLEX BRD Ø1.5" NOM.	0.83
008130	LICENSE PLATE FRAME	1	7C060-015	M6 X 1.0 X 16MM SHCS CL10.9+ Z	2
008447	1 YR S/C WARRANTY PKG	1	7C060-020 7J006-094	M6 X 1.0 X 20MM HX 6MM WASHER S.S.	2
009035	S/C LUBE, BOTTLED, 3-PACK	1	7R002-024	#24 HOSE CLAMP	2
2F329-010	V3 SUPERCHARGER ASY, STD	1	7U012-018	O-RING, 07 MUST GT THERM HSG	1
4FU020-010	INSTR MAN 05-08 MUST GT	1	4FU139-096 7P375-106	PCV MOD ASY PCV VALVE, FORD, 3/8" HOSE	1 1
4FU110-010	P/S RESERVOIR RELOCATION	1	7P625-377	5/8" -3/8" REDUCER BARB UNION	1
7P375-075	3/4" HOSE BARB UNION, BRASS	1	7R004-002	STEPLESS CLAMP, 17.0-70	2
7P375-050 7R001-004	3/8" HOSE UNION, BRASS #4 HOSE CLAMP	1	7R004-004 7R004-007	STEPLESS CLAMP, 1.0 OD HOSE STEPLESS CLAMP, 28.6 X 7MM WID	3 1
7R001-004 7R001-008	#8 HOSE CLAMP	2 2 3	7U032-016	3/8" EFI FUEL HSE HI-PSR	0.25
7U038-030	HOSE, P/S, 3/4 ID	3	7U033-020	HOSE, 5/8"ID CLASS 1 EMISSIONS	0.666
7U032-016 7A250-075	3/8" EFI FUEL HSE HI-PSR 1/4-20 X .75 SHCS PLTD	3 1	5A003-035	PREDATOR, 05-08 MUSTANG	
7J250-073	1/4 WASHER, SAE, PLTD	2	8F060-048	FUEL INJ, 39LB EV6, OEM 03 C	OB 8
7F250-021	1/4-20 NYLOCK NUT ZINC PLATED	1		FUEL PMP ASY,05 MUST TWIN I	
4FU010-010 7U100-055	P/S RELOC BRKT, 05 GT MUST TIE WRAP, 7.5" NYLON	1 4	7U032-018 7U100-055	3/8" SUBMERSIBLE EFI FUEL HOSE TIE WRAP, 7.5" NYLON	2.75 4
4FU111-044	S/C MOUNTING BRKT ASY	1	7R004-002	STEPLESS CLAMP, 17.0-70	2
4FU010-044	S/C MOUNT PLT, MUST GT	1	8F001-255	255 INTANK FUEL PUMP '86-'97	1
4FU010-034	IDLER MOUNT PLATE, MUST	1	7R002-044 7R004-006	#44 HOSE CLAMP STEPLESS CLAMP, 11.3 X 5MM WID	1 4
4FU017-011 2A017-750-05	SPACER, STUDDED MUST GT SPACER, .750 OD X 2.691 LONG	2	5W001-022	T-TAP CONN,14-16 AWG	2
2A017-750-06	SPACER, .750 OD X 2.712 LONG	1	5W001-009	16-14GA MALE SLIDE INSULATED	2
2A017-879-08		1	5W001-080 7P375-099	FUSE, 20 AMP. MINI BLADE Y-UNION, 3/8" BARBED TEFLON	1 1
2A017-750-07 4FU017-021	SPACER, .750 OD X .097 LONG SPACER, IDLER, MUST GT	1	7U032-025	HOSE, 5/16" ID,3/8"OD, 1/32" W	0.12
4PCS016-160	PULLEY, IDLER	1	7U032-030	HOSE, SPIRAL 3/8" CUFF ID, 1' L	2
2A046-120	BELT, GATES K061203	1	4FU101-001	MAF EXT MOD 05+ MUSTANO	
7A375-375 7C080-150	3/8-16 X 3-3/4 HX HD M8 X 1.25 X 150MM HXHD CL10.9	1 1	5W018-030 5W018-010	18GA STRD WIRE GREY 18GA STRD WIRE RED	1
7C080-130	M8 X 1.25 X 140 HXHD CL8.8	2	5W018-020	18GA STRD WIRE RED 18GA STRD WIRE BLK, UL1015	1
7A375-100	3/8-16 X 1 G5 HHCS, PLT	7	5W018-080	18GA STRD WIRE BLUE BULK	1
7K312-030 7K375-040	5/16 AN WASHER, S.S. 3/8 AN960 FLAT WASHR PLATED	2 10	5W018-090 5W018-100	18GA STRD WIRE BROWN BULK 18GA STRD WIRE PURPLE	1 1
4FU112-010	AIR INTAKE ASY	1	5W001-007	3/16" HEAT-SHRINK TUBING	1.5
4FU012-010	INLET DUCT,"A"	1	5W001-005	3/8" PLASTIC WIRE LOOM	1.5
4FU012-015	INLET DUCT,"B"	1 1	5W001-012	18-22 GA BUTT CONN RED INSUL	12
7R002-056 7S400-200	#56 HOSE CLAMP SLEEVE, 4 X 2, BLUE	2			
7S400-351	REDUCER SLV 4.00 X 3.5 X 2.35L	1			
7R002-064 8H040-235	#64 HOSE CLAMP AIR FILTER, 4.0FLG X 7.0L	5 1			
8A003-071	MAF, 3.8 I.D. MUSTANG GT	1			
7P750-102	3/4NPT X 1" X 90° HSE FIT	1			
7P250-047 4FU010-071	1/4NPT TO 3/8"BARB 90° BRKT, INTAKE SUPPORT	1			
7U032-016	3/8" EFI FUEL HSE HI-PSR	4			
4FU013-010	COVER, AIR FILTER, MUST GT	1			
7C040-008	M47X8MM SCHD SS	2 1			
4FU112-020 4FU012-020	DISCHARGE ASY DUCT, DISCH, MUST GT STD	1			
7S450-200	SLEEVE, 4 1/2 X 2, BLUE	i			
7S300-276	REDUCER, 3.0 X 2.75 X 2.5L	1			
7R002-044 7R002-048	#44 HOSE CLAMP #48 HOSE CLAMP	1			
7R002-072	#72 HOSE CLAMP	2			
7R002-016 7U030-046	#16 HOSE CLAMP	4 5			
8D001-001	5/32" VACUUM LINE STD COMPRESS BYPASS VALVE	5 1			
7U034-016	1" GS HEATER HOSE	1.25			
7U034-016 7P218-156	1" GS HEATER HOSE VAC TEE, 7/32,7/32,5/32	0.583 1			
	WATER PIPE ASSY, 07-08 MUST G IOUSING. THRMST RELC 07 MUST G	5 T 1			



2007-2008 Mustang GT, H.O. Part No. 4FU218-040SQ/048SQ PARTS LIST

PART NO.	DESCRIPTION	QTY.	PART NUMBER	R DESCRIPTION	QTY.
008110	SMALL SILVER DIE CUT DECAL	. 2	4FU130-036	OIL DRAIN ASSY	1
008130	LICENSE PLATE FRAME	1	7U030-036 7R001-008	1/2" OIL DRAIN HOSE #8 HOSE CLAMP	3FT 2
008444	3 YR S/C WARRANTY PKG	1	7P375-017	3/8NPT X 1/2 BEADED HSE BRB	1
2E229-240	V2-S SUPERCHARGER ASY, H.O). 1	4FU139-096	PCV MOD ASY	1
4FU020-010	INSTR MAN 05-08 MUST GT	1	7P375-106	PCV VALVE, FORD, 3/8" HOSE	1
4FU110-010	P/S RESERVOIR RELOCATION	1	7P625-377 7R004-002	5/8" -3/8" REDUCER BARB UNION STEPLESS CLAMP, 17.0-70	1 2
7P375-075	3/4" HOSE BARB UNION, BRASS	1	7R004-004	STEPLESS CLAMP, 1.0 OD HOSE	3
7P375-050 7R001-004	3/8" HOSE UNION, BRASS #4 HOSE CLAMP	1	7R004-007	STEPLESS CLAMP, 28.6 X 7MM WID 3/8" EFI FUEL HSE HI-PSR	1
7R001-004	#8 HOSE CLAMP	2 2 3	7U032-016 7U033-020	HOSE, 5/8"ID CLASS 1 EMISSIONS	0.25 0.6667
7U038-030	HOSE, P/S, 3/4 ID	3 3	5A001-025	DIABLO MAFIA	1
7U032-016 7A250-075	3/8" EFI FUEL HSE HI-PSR 1/4-20 X .75 SHCS PLTD	3 1	5A003-035	PREDATOR, 05-08 MUSTANG	1
7J250-001	1/4 WASHER, SAE, PLTD	2	8F060-048	FUEL INJ, 39LB EV6, OEM 03 C	
7F250-021 4FU010-010	1/4-20 NYLOCK NUT ZINC PLATED P/S RELOC BRKT, 05 GT MUST	1 1	8F101-262	FUEL PMP ASY,05 MUST TWIN II	
7U100-055	TIE WRAP, 7.5" NYLON	4	7U032-018	3/8" SUBMERSIBLE EFI FUEL HOSE	2.75
4FU111-044	S/C MOUNTING BRKT ASY	1	7U100-055	TIE WRAP, 7.5" NYLON	4
4FU010-044	S/C MOUNT PLT, MUST GT	1	7R004-002 8F001-255	STEPLESS CLAMP, 17.0-70 255 INTANK FUEL PUMP '86-'97	2 1
4FU010-034 4FU017-011	IDLER MOUNT PLATE, MUST SPACER, STUDDED MUST GT	1 2	7R002-044	#44 HOSE CLAMP	1
2A017-750-05	SPACER, .750 OD X 2.691 LONG	2	7R004-006 5W001-022	STEPLESS CLAMP, 11.3 X 5MM WID T-TAP CONN,14-16 AWG	4 2
2A017-750-06 2A017-879-08	SPACER, .750 OD X 2.712 LONG SPACER, .875 OD X 1.776 LONG	1 1	5W001-022	16-14GA MALE SLIDE INSULATED	2
2A017-750-07	SPACER, .750 OD X .097 LONG	1	5W001-080	FUSE, 20 AMP. MINI BLADE	1 1
4FU017-021	SPACER, IDLER, MUST GT	1	7P375-099 7U032-025	Y-UNION, 3/8" BARBED TEFLON HOSE. 5/16" ID.3/8"OD. 1/32" W	0.125
4PCS016-160 2A046-120	PULLEY, IDLER BELT. GATES K061203	1 1	7U032-030	HOSE, SPIRAL 3/8" CUFF ID, 1' L	2
7A375-375	3/8-16 X 3-3/4 HX HD	1	8N101-290	WELDED CORE ASY	1
7C080-150 7C080-140	M8 X 1.25 X 150MM HXHD CL10.9 M8 X 1.25 X 140 HXHD CL8.8	1 2	8N104-125	SUPRT PCS, 05-08 MUST GT CL	R G 1
7A375-100	3/8-16 X 1 G5 HHCS, PLT	7	4FE014-010 5W001-009	RADIATOR PIPE-STAINLESS 16-14GA MALE SLIDE INSULATED	1 1
7K312-030 7K375-040	5/16 AN WASHER, S.S. 3/8 AN960 FLAT WASHR PLATED	2 10	5W001-011	16-14 GA RING TERM .26" HOLE	1
4FU112-010	AIR INTAKE ASY	10	5W001-015	FUSE, BLADE TYPE 20 AMP	1 1
4FU012-010	INLET DUCT,"A"	1	5W001-022 5W001-032	T-TAP CONN,14-16 AWG 1/4" PLASTIC WIRE LOOM	60
4FU012-015	INLET DUCT, "B"	1	5W001-050	HARNESS, FUEL INJ PLUG W/WIRES	1
7R002-056 7S400-200	#56 HOSE CLAMP SLEEVE, 4 X 2, BLUE	1 2	5W001-071 5W018-010	FUSE HOLDER,16GA WIRE 18GA STRD WIRE RED	1 5
7S400-351	REDUCER SLV 4.00 X 3.5 X 2.35L	1	7A250-050	1/4-20 X .50 SHCS ZINC PLTD	5 3 2 2 2 5 4 1
7R002-064 8H040-235	#64 HOSE CLAMP AIR FILTER, 4.0FLG X 7.0L	5 1	7A250-051 7A250-074	1/4-20 X .50 HHCS ZINC PLTD 1/4-20 X .75 HHCS PLTD	2
8A003-071	MAF, 3.8 I.D. MUSTANG GT	1	7F250-074 7F250-020	1/4-20 X 1/5 HHCS PLTD 1/4-20 HEX NUT	2
7P750-102	3/4NPT X 1" X 90° HSE FIT	1	7J006-093	6MM WASHER, PLATED	5
7P250-047 4FU010-071	1/4NPT TO 3/8"BARB 90° BRKT. INTAKE SUPPORT	1 1	7J250-001 7P156-082	1/4 WASHER, SAE, PLTD 5/32 TEE	4 1
7U032-016	3/8" EFI FUEL HSE HI-PSR	4	7P218-156	VAC TEE, 7/32,7/32,5/32	1
4FU013-010 7C040-008	COVER, AIR FILTER, MUST GT M47X8MM SCHD SS	1 2	7P375-075 7P500-026	3/4" HOSE BARB UNION, BRASS 1/2NPT X 3/4 BARB 90° BRASS	4 2
	WATER PIPE ASSY, 07-08 MUST (7P500-078	1/2NPT X 3/4 HOSE FIT STRT	2
4FU014-051 H	IOUSING, THRMST RÉLC 07 MUST G	1	7R002-016	#16 HOSE CLAMP	4
4FU014-060	WATER PIPE, Ø1.5 X 90°,07 MUST	1	7R002-024 7R002-044	#24 HOSE CLAMP #44 HOSE CLAMP	2
5W001-085 7C060-015	SLEEVE, FLEX BRD Ø1.5" NOM. M6 X 1.0 X 16MM SHCS CL10.9+ Z	0.83 2	7R002-072	#72 HOSE CLAMP	2 2 2 1
7C060-020	M6 X 1.0 X 20MM HX	2	7R003-016 7R003-028	ADEL CLAMP, 1.0" ADEL CLAMP, 2-3/8" .26 HOLE	1 2
7J006-094 7R002-024	6MM WASHER S.S. #24 HOSE CLAMP	2 3	7R003-020 7R007-001	NYLON RATCHET CLAMP 1-1/8"	16
7U012-024 7U012-018	O-RING, 07 MUST GT THERM HSG	1	7S275-055	ELBOW, Ø2.75 X 55° SILICONE	1
4FU130-026	OIL FEED ASY	1	7S450-200 7U030-046	SLEEVE, 4 1/2 X 2, BLUE 5/32" VACUUM LINE	1 5
7U250-090-260	OIL FEED HOSE, 26" -4X90°	1	7U030-065	3/4"X90° RUBBER HOSE, SHORT	1
7P125-005 7P250-091	1/8 NPT STR. X -4 JIC FTG STL 1/4 NPT 90° X -4JIC FTG STL	1 1	7U034-016 7U034-016	1" GS HEATER HOSE 1" GS HEATER HOSE	1 1.25
7P250-034	1/4 NPT X 1/4 NPT STRT T	i	7U038-000	3/4" HEATER HOSE	1.23
			7U038-012	HOSE,3/4"DIA 90°,4X12 LEGS	1



2007-2008 Mustang GT, H.O. cont'd Part No. 4FU218-040SQ/048SQ PARTS LIST

PART NO.	DESCRIPTION	QTY.
7U038-020 7U038-150 7U100-055 7U375-054 8D001-001 8F001-403 8N010-160 8N010-220 8N055-050 8N056-061	HOSE, Ø3/4 'S' MOLDED RUBBER HOSE, 3/4"X150° MOLDED HOSE TIE WRAP, 7.5" NYLON 3/4" VINYL CAP STD COMPRESS BYPASS VALVE PUMP, WATER, BOSCH SURGE TANK BRKT, MUST GT MTG BRKT, 05-07 MUST BOSCH PMP PLASTIC CAP, SURGE TANK SURGE TANK INTEGRA GSR MODIFIE	1 1 6 1 1 1 1 1
8N106-135 8N006-020 8N010-171 8N010-173 2A017-036 7C080-030 7F008-020 7J312-000 7A250-051 7J250-001	WATER CLR ASY, MUST GEN.II WATER COOLR, FLDYN DUAL PASS BRACKET, DRVR SIDE CLR MNT,PLT BRACKET, PASS SIDE CLR MNT SPACER,PLT.BRG.HSG.,0.186" M8 X 1.25 X 30 HXHD CL10.9 NUT, M8 X 1.25 5/16 FLAT WASHER-SAE 1/4-20 X .50 HHCS ZINC PLTD 1/4 WASHER, SAE, PLTD	1 1 1 1 4 6 6 12 4 4
8N155-082 4FU010-061 4FU010-091 7A250-074 7F250-021 7J006-093 7P100-076 7P250-045 7P375-050 7R002-010 7R004-002 7U038-000 8N055-080 008341	COOLANT RES RELOC, 07-08 MU: BRKT B, COOL RES RELOC, 07 GT 1/4-20 X .50 HHCS ZINC PLTD 1/4-20 X .75 HHCS PLTD 1/4-20 NYLOCK NUT ZINC PLATED 6MM WASHER, PLATED HOSE REDUCER, 1"->3/4" PLSTC 1/4 MALE NPT X 3/8 MALE BARB 3/8" HOSE UNION, BRASS #10 HOSE CLAMP STEPLESS CLAMP, 17.0-70 3/8 PCV/VAC RUBBER HOSE 3/4" HEATER HOSE TANK, RAD OVERFLOW, MUST	1 1 4 3 3 10 1 1 1 2 3 2.5 1.83



2007-2008 Mustang GT, H.O. Part No. 4FU218-040L/048L PARTS LIST

PART NO.	DESCRIPTION	QTY.	PART NUMBER	R DESCRIPTION	QTY.
008110 008130 008341 008447 009035 2F329-020	SMALL SILVER DIE CUT DECAL LICENSE PLATE FRAME, VORTEC VORTECH CHARGE COOLER DEC 1 YR S/C WARRANTY PKG S/C LUBE, BOTTLED, VORT 3-PAC V3 SUPERCHARGER ASY, H.O.	CH 1 AL1 1 CK 1	4FU139-096 7P375-106 7P625-377 7R004-002 7R004-004 7R004-007 7U032-016 7U033-020	PCV MOD ASY PCV VALVE, FORD, 3/8" HOSE 5/8"-3/8" REDUCER BARB UNION STEPLESS CLAMP, 17.0-70 STEPLESS CLAMP, 1.0 OD HOSE STEPLESS CLAMP, 28.6 X 7MM WID 3/8" EFI FUEL HSE HI-PSR HOSE, 5/8"ID CLASS 1 EMISSIONS	1 1 2 3 1 0.25 0.6667
4FU020-010	INSTR MAN 05-08 MUST GT	1	5A001-025	DIABLO MAFIA	1
4FU110-010	P/S RESERVOIR RELOCATION	1	5A003-035	PREDATOR, 05-08 MUSTANG	1
7P375-075	3/4" HOSE BARB UNION, BRASS	1	8F060-048	FUEL INJ, 39LB EV6, OEM 03 C	
7P375-050	3/8" HOSE UNION, BRASS	1	8F101-262	FUEL PMP ASY,05 MUST TWIN II	
7R001-004 7R001-008	#4 HOSE CLAMP #8 HOSE CLAMP	2 2 3 3	7U032-018	3/8" SUBMERSIBLE EFI FUEL HOSE	2.75
7U038-030	HOSE, P/S, 3/4 ID	3	7U100-055	TIE WRAP, 7.5" NYLON	4
7U032-016	3/8" EFI FUEL HSE HI-PSR	3	7R004-002 8F001-255	STEPLESS CLAMP, 17.0-70 255 INTANK FUEL PUMP '86-'97	2 1
7A250-075 7J250-001	1/4-20 X .75 SHCS PLTD 1/4 WASHER, SAE, PLTD	1 2	7R002-044	#44 HOSE CLAMP	1
7F250-001	1/4-20 NYLOCK NUT ZINC PLATED	1	7R004-006	STEPLESS CLAMP, 11.3 X 5MM WID	4
4FU010-010	P/S RELOC BRKT, 05 GT MUST	1	5W001-022 5W001-009	T-TAP CONN,14-16 AWG 16-14GA MALE SLIDE INSULATED	2
7U100-055	TIE WRAP, 7.5" NYLON	4	5W001-009	FUSE, 20 AMP. MINI BLADE	1
4FU111-044	S/C MOUNTING BRKT ASY S/C MOUNT PLT, MUST GT	1 1	7P375-099	Y-UNION, 3/8" BARBED TEFLON	1
4FU010-044 4FU010-034	IDLER MOUNT PLATE, MUST	1	7U032-025 7U032-030	HOSE, 5/16" ID,3/8"OD, 1/32" W HOSE,SPIRAL 3/8" CUFF ID, 1' L	0.125 2
4FU017-011 2A017-750-05	SPACER, STUDDED MUST GT	2 2	8N101-290	WELDED CORE ASY	1
2A017-750-06	SPACER, .750 OD X 2.712 LONG	1	8N104-125	SUPRT PCS, 05-08 MUST GT CL	R G1
2A017-879-08		1	4FE014-010	RADIATOŔ PIPE-STAINLESS	1
2A017-750-07 4FU017-021	SPACER, .750 OD X .097 LONG SPACER, IDLER, MUST GT	1 1	5W001-009 5W001-011	16-14GA MALE SLIDE INSULATED 16-14 GA RING TERM .26" HOLE	1 1
4PCS016-160		i	5W001-011	FUSE, BLADE TYPE 20 AMP	1
2A046-120	BELT, GATES K061203	1	5W001-022	T-TAP CONN,14-16 AWG	1
7A375-375 7C080-150	3/8-16 X 3-3/4 HX HD M8 X 1.25 X 150MM HXHD CL10.9	1 1	5W001-032	1/4" PLASTIC WIRE LOOM	60
7C080-130 7C080-140	M8 X 1.25 X 140 HXHD CL8.8	2	5W001-050 5W001-071	HARNESS, FUEL INJ PLUG W/WIRES FUSE HOLDER,16GA WIRE	1 1
7A375-100	3/8-16 X 1 G5 HHCS, PLT	2	5W018-010	18GA STRD WIRE RED	5
7K312-030	5/16 AN WASHER, S.S. 3/8 AN960 FLAT WASHR PLATED	2 10	7A250-050	1/4-20 X .50 SHCS ZINC PLTD	3 2 2 2 5 4
7K375-040			7A250-051 7A250-074	1/4-20 X .50 HHCS ZINC PLTD 1/4-20 X .75 HHCS PLTD	2
4FU112-010 4FU012-010	AIR INTAKE ASY INLET DUCT."A"	1 1	7F250-020	1/4-20 HEX NUT	2
4FU012-015	INLET DUCT,"B"	1	7J006-093	6MM WASHER, PLATED	5
7R002-056	#56 HOSE CLAMP	1	7J250-001 7P156-082	1/4 WASHER, SAE, PLTD 5/32 TEE	4 1
7S400-200 7S400-351	SLEEVE, 4 X 2, BLUE REDUCER SLV 4.00 X 3.5 X 2.35L	2 1	7P218-156	VAC TEE, 7/32,7/32,5/32	1
7R002-064	#64 HOSE CLAMP	5	7P375-075	3/4" HOSE BARB UNION, BRASS	4
8H040-235	AIR FILTER, 4.0FLG X 7.0L	1	7P500-026 7P500-078	1/2NPT X 3/4 BARB 90° BRASS 1/2NPT X 3/4 HOSE FIT STRT	2 2 4 2 2
8A003-071 7P750-102	MAF, 3.8 I.D. MUSTANG GT 3/4NPT X 1" X 90° HSE FIT	1 1	7R002-016	#16 HOSE CLAMP	4
7P250-047	1/4NPT TO 3/8"BARB 90°	i	7R002-024	#24 HOSE CLAMP	2
4FU010-071	BRKT, INTAKE SUPPORT	1	7R002-044 7R002-072	#44 HOSE CLAMP #72 HOSE CLAMP	2
7U032-016 4FU013-010	3/8" EFI FUEL HSE HI-PSR COVER, AIR FILTER, MUST GT	4 1	7R003-016	ADEL CLAMP, 1.0"	1
7C040-008	M47X8MM SCHD SS	2	7R003-028	ADEL CLAMP, 2-3/8" .26 HOLE	2
4FU114-030	WATER PIPE ASSY, 07-08 MUST	GT1	7R007-001 7S275-055	NYLON RATCHET CLAMP 1-1/8" ELBOW, Ø2.75 X 55° SILICONE	16 1
	HOUSING, THRMST RÉLC 07 MUST G	1	7S450-200	SLEEVE, 4 1/2 X 2, BLUE	1
4FU014-060 5W001-085	WATER PIPE, Ø1.5 X 90°,07 MUST SLEEVE, FLEX BRD Ø1.5" NOM.	1 0.83	7U030-046	5/32" VACUUM LINE	5
7C060-015	M6 X 1.0 X 16MM SHCS CL10.9+ Z	2	7U030-065 7U034-016	3/4"X90° RUBBER HOSE, SHORT 1" GS HEATER HOSE	1 1
7C060-020	M6 X 1.0 X 20MM HX	2 2	7U034-016	1" GS HEATER HOSE	1.25
7J006-094	6MM WASHER S.S. #24 HOSE CLAMP	2 3	7U038-000	3/4" HEATER HOSE	12
7R002-024 7U012-018	0-RING, 07 MUST GT THERM HSG	1	7U038-012 7U038-020	HOSE,3/4"DIA 90°,4X12 LEGS HOSE, Ø3/4 'S' MOLDED RUBBER	1 1



2007-2008 Mustang GT, H.O. cont'd Part No. 4FU218-040L/048L PARTS LIST

PART NO.	DESCRIPTION	QTY.	PART NUMBER	DESCRIPTION	QTY.
7U038-150 7U100-055 7U375-054 8D001-001 8F001-403 8N010-160 8N010-220 8N055-050 8N056-061	HOSE, 3/4"X150° MOLDED HOSE TIE WRAP, 7.5" NYLON 3/4" VINYL CAP STD COMPRESS BYPASS VALVE PUMP, WATER, BOSCH SURGE TANK BRKT, MUST GT MTG BRKT, 05-07 MUST BOSCH PMP PLASTIC CAP, SURGE TANK SURGE TANK INTEGRA GSR MODIFIE	1 6 1 1 1 1 1			
8N106-135 8N006-020 8N010-171 8N010-173 2A017-036 7C080-030 7F008-020 7J312-000 7A250-051 7J250-001	WATER CLR ASY, MUST GEN.I WATER COOLR, FLDYN DUAL PASS BRACKET, DRVR SIDE CLR MNT,PLT BRACKET, PASS SIDE CLR MNT SPACER,PLT.BRG.HSG.,0.186" M8 X 1.25 X 30 HXHD CL10.9 NUT, M8 X 1.25 5/16 FLAT WASHER-SAE 1/4-20 X .50 HHCS ZINC PLTD 1/4 WASHER, SAE, PLTD	1 1 1 1 4 6 6 12 4 4			
8N155-082 4FU010-061 4FU010-091 7A250-051 7A250-074 7F250-021 7J006-093 7P100-076 7P250-045 7P375-050 7R002-010 7R004-002 7U038-000 8N055-080	COOLANT RES RELOC, 07-08 MU BRKT B, COOL RES RELOC MUST BRKT, COOL RES RELOC, 07 GT 1/4-20 X .50 HHCS ZINC PLTD 1/4-20 X .75 HHCS PLTD 1/4-20 NYLOCK NUT ZINC PLATED 6MM WASHER, PLATED HOSE REDUCER, 1"->3/4" PLSTC 1/4 MALE NPT X 3/8 MALE BARB 3/8" HOSE UNION, BRASS #10 HOSE CLAMP STEPLESS CLAMP, 17.0-70 3/8 PCV/VAC RUBBER HOSE 3/4" HEATER HOSE TANK, RAD OVERFLOW, MUST	ST1 1 1 4 3 3 10 1 1 2 3 2.5 1.83 1			



2008 Mustang Bullitt Part No. 4FU218-050L/058L PARTS LIST

PART NO.	DESCRIPTION	QTY.	PART NUMBE	R DESCRIPTION	QTY.
2F329-070	V3 SUPERCHARGER ASY	1	7C040-008	M47X8MM SCHD SS	2
008110	SMALL SILVER DIE CUT DECAL	2	4FU114-030	WATER PIPE ASSY, 07-08 MUST	GT1
008130	LICENSE PLATE FRAME	1		HOUSING, THRMST RELC 07 MUST OF WATER PIPE, Ø1.5 X 90°,07 MUST	
008341	CHARGE COOLER DECAL	1	4FU014-060 5W001-085	SLEEVE. FLEX BRD Ø1.5" NOM.	1 0.83
008447	1 YR S/C WARRANTY PKG	1	7C060-015	M6 X 1.0 X 16MM SHCS CL10.9+ Z	2
009035	S/C LUBE, BOTTLED, 3-PACK	1	7C060-020 7J006-094	M6 X 1.0 X 20MM HX 6MM WASHER S.S.	2 2
4FU020-010	INSTR MAN 05-08 MUST GT	1	7R002-024	#24 HOSE CLAMP	3
4FU110-010	P/S RESERV RELOC MUST GT	1	7U012-018	O-RING, 07 MUST GT THERM HSG	1
7P375-075	3/4" HOSE BARB UNION, BRASS	1	4FU139-096 7P375-106	PCV MOD ASSY, 05 GT PCV VALVE, FORD, 3/8" HOSE	1 1
7P375-050 7R001-004	3/8" HOSE UNION, BRASS #4 HOSE CLAMP	1	7P625-377	5/8" -3/8" REDUCER BARB UNION	1
7R001-008	#8 HOSE CLAMP	2	7R004-002	STEPLESS CLAMP, 17.0-70	2
7U038-030	HOSE, P/S, 3/4 ID	2 2 3 3	7R004-004 7R004-007	STEPLESS CLAMP, 1.0 OD HOSE STEPLESS CLAMP, 28.6 X 7MM WID	3 1
7U032-016 7A250-075	3/8" EFI FUEL HSE HI-PSR 1/4-20 X .75 SHCS PLTD	3 1	7U032-016	3/8" EFI FUEL HSE HI-PSR	0.25
7J250-001	1/4 WASHER, SAE, PLTD	2	7U033-020	HOSE, 5/8"ID CLASS 1 EMISSIONS	0.6667
7F250-021 4FU010-010	1/4-20 NYLOCK NUT ZINC PLATED P/S RELOC BRKT	1 1	5A001-025	DIABLO MAFIA, MUST	1
7U100-055	TIE WRAP, 7.5" NYLON	4	5A003-035	PREDATOR, 05-08 MUSTANG	1
4FU111-051	S/C MTG BRKT ASSY, V-PWR	1	8F060-061	FUEL INJ. 60 LB LONG, US CA	•
4FU010-044	S/C MOUNT PLT IDLER MOUNT PLATE	1 1	8F101-262	FUEL PMP ASY,05 MUST TWIN I	
4FU010-034 4FU017-041	SPCR , STD BLT BRNG PLT 1.597"	2	7U032-018 7U100-055	3/8" SUBMERSIBLE EFI FUEL HOSE TIE WRAP, 7.5" NYLON	2.75 4
2A017-750-05	SPACER, .750 OD X 2.691 LONG	2	7R004-002	STEPLESS ĆLAMP, 17.0-70	2
2A017-750-06 2A017-879-07	SPACER, .750 OD X 2.712 LONG SPACER, .875 OD X 1.597 LNG	1 1	8F001-255 7R002-044	255 INTANK FUEL PUMP '86-'97 #44 HOSE CLAMP	1 1
2A017-075-07	SPACER, .750 OD X .097 LONG	i	7R002-044 7R004-006	STEPLESS CLAMP, 11.3 X 5MM WID	4
4FU017-031	SPACER, IDLR 10D X 375 ID X	1	5W001-022	T-TAP CONN,14-16 AWG	2
4FU016-021 2A048-121	PULLEY, IDLR 3.5" 8-RIB (SMOOT BELT, DAYCO-5081213, 8-RIB	1 1	5W001-009 5W001-080	16-14GA MALE SLIDE INSULATED FUSE, 20 AMP. MINI BLADE	2 1
7A375-375	3/8-16 X 3-3/4 HX HD	1	7P375-099	Y-UNION, 3/8" BARBED TEFLON	i
7C080-150	M8 X 1.25 X 150MM HXHD CL10.9	1	7U032-025	HOSE, 5/16" ID,3/8"OD, 1/32" W	0.125
7C080-140 7A375-100	M8 X 1.25 X 140 HXHD CL8.8 3/8-16 X 1 G5 HHCS, PLT	2	7U032-030	HOSE,SPIRAL 3/8" CUFF ID, 1' L	2
7A375-124	3/8-16 X 1-1/4 HHCS, G5, PLATE	5	8N104-160 4FE014-010	SUPPORT PCS, LG, 05+ MUST G RADIATOR PIPE-STAINLESS	5T V1
2A017-878-08 7K312-030	SPACER,.875OD X .406 ID X .280 5/16 AN WASHER, S.S.	5	5W001-009	16-14GA MALE SLIDE INSULATED	i
7K375-040	3/8 AN960 FLAT WASHR PLATED	10	5W001-011	16-14 GA RING TERM .26" HOLE	1
4FR016-021	PULLEY,8 RIB A/C PLY 03 COBRA	1	5W001-015 5W001-022	FUSE, BLADE TYPE 20 AMP T-TAP CONN,14-16 AWG	1 1
4FR016-031 4FR016-041	PULLEY, 8 RIB P/S 03 COBRA DAMPER, CRANK, 8 RIB 03 COBRA	1 1	5W001-032	1/4" PLASTIC WIRE LOOM	60
4FU016-011	PULLEY, FORD, ALT, 8-RIB, 2.5" OD	1	5W001-050 5W001-071	HARNESS, FUEL INJ PLUG W/WIRES FUSE HOLDER,16GA WIRE	5 1 1
7G016-150 4FU016-021	NUT, M16 X 1.50 FLANGED PULLEY, IDLR 3.5" 8-RIB (SMOOT	1 2	5W018-010	18GA STRD WIRE RED	5
4FU016-021 4FU016-041	PULLEY, IDLR 3.5" 8-RIB (SMOOT PULLEY, IDLR 3.5" 8-RIB (RIBD)	1	7A250-050	1/4-20 X .50 SHCS ZINC PLTD	3
2A017-882-02	SPACER, .875 OD X .101 LNG	3 3	7A250-051 7A250-074	1/4-20 X .50 HHCS ZINC PLTD 1/4-20 X .75 HHCS PLTD	2
2A017-750-014 7C080-041	1 SPACER .75"OD X .328"ID X.140" M8 X 1.25 X 40 HXHD ZINC	3	7F250-020	1/4-20 HEX NUT	3 2 2 2 5
7J312-000	5/16 FLAT WASHER-SAE	3	7J006-093	6MM WASHER, PLATED	5 4
4FU116-031	IDLER ASSY, 3" 8-RIB (SMOOTH)	1	7J250-001 7P156-082	1/4 WASHER, ŠAE, PLTD 5/32 TEE	1
4FU112-010	AIR INLET ASSY, 05 MUST GT	1	7P175-100	COMP BYPASS "Y", 1.75 X 1.00	1
4FU012-010 4FU012-015	INLET DUCT,"A" INLET DUCT,"B"	1 1	7P218-156 7P375-075	VAC TEE, 7/32,7/32,5/32 3/4" HOSE BARB UNION, BRASS	1 4
7R002-056	#56 HOSE CLAMP	1	7P500-026	1/2NPT X 3/4 BARB 90° BRASS	3
7S400-200 7S400-351	SLEEVE, 4 X 2, BLUE REDUCER SLV 4.00 X 3.5 X 2.35L	2 1	7P500-078	1/2NPT X 3/4 HOSE FIT STRT	1
7R002-064	#64 HOSE CLAMP	5	7P750-102 7R002-016	3/4NPT X 1" X 90° HSE FIT #16 HOSE CLAMP	1 10
8H040-235	AIR FILTER, 4.0FLG X 7.0L	1	7R002-024	#24 HOSE CLAMP	2
8A003-071 7P750-102	MAF, 3.8 I.D., 05 MUSTANG GT, 3/4NPT X 1" X 90° HSE FIT	1 1	7R002-028 7R002-044	#28 HOSE CLAMP #44 HOSE CLAMP	2 1
7P250-047	1/4NPT TO 3/8"BARB 90°	1	7R002-044 7R002-048	#48 HOSE CLAMP	1
4FU010-071 7U032-016	BRKT, INTAKE SUPPORT 3/8" EFI FUEL HSE HI-PSR	1 4	7R002-072	#72 HOSE CLAMP	2
4FU013-010	COVER, AIR FILTER, MUST GT	1	7R003-016 7R003-028	ADEL CLAMP, 1.0" ADEL CLAMP, 2-3/8" .26 HOLE	1 2
-	, ,			, - 0.0002	_



2008 Mustang Bullitt cont'd Part No. 4FU218-050L/058L PARTS LIST

PART NO.	DESCRIPTION	QTY.
7R007-001 7S175-400 7S300-055 7S450-200 7U030-046 7U030-065 7U034-016 7U038-000 7U038-150 7U100-055 7U375-054 8D204-001 8F001-403 8N010-160 8N010-220 8N055-050 8N056-061	NYLON RATCHET CLAMP 1-1/8" SLEEVE, Ø1.75" X 4", BLUE SLEEVE, 3.0 X 55 SILICONE SLEEVE, 4 1/2 X 2, BLUE 5/32" VACUUM LINE 3/4"X90° RUBBER HOSE, SHORT 1" GS HEATER HOSE 3/4" HEATER HOSE HOSE, 3/4"X150° MOLDED HOSE TIE WRAP, 7.5" NYLON 3/4" VINYL CAP RACE BYPASS VALVE-BLUE/SATIN PUMP, WATER, BOSCH SURGE TANK BRKT, MUST GT MTG BRKT, 05-07 MUST BOSCH PMP PLASTIC CAP, SURGE TANK SURGE TANK	16 1 1 5 1 3 12 2 1 6 1 1 1 1
8N106-135 8N006-020 8N010-171 8N010-173 2A017-036 7C080-030 7F008-020 7J312-000 7A250-051 7J250-001	WATER CLR ASY, 05 MUST GEN. WATER COOLR, FLDYN DUAL PASS BRACKET, DRVR SIDE CLR MNT,PLT BRACKET, PASS SIDE CLR MNT SPACER,PLT.BRG.HSG.,0.186" M8 X 1.25 X 30 HXHD CL10.9 NUT, M8 X 1.25 5/16 FLAT WASHER-SAE 1/4-20 X .50 HHCS ZINC PLTD 1/4 WASHER, SAE, PLTD	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
8N155-082 4FU010-061 4FU010-091 7A250-051 7A250-074 7F250-021 7J006-093 7P100-076 7P250-045 7P375-050 7R002-010 7R004-002 7U038-000 8N055-080	COOLANT RES RELOC, 07-08 MU BRKT B, COOL RES RELOC, 07 GT 1/4-20 X .50 HHCS ZINC PLTD 1/4-20 X .75 HHCS PLTD 1/4-20 NYLOCK NUT ZINC PLATED 6MM WASHER, PLATED HOSE REDUCER, 1"->3/4" PLSTC 1/4 MALE NPT X 3/8 MALE BARB 3/8" HOSE UNION, BRASS #10 SAE TYPE F SS HOSE CLAMP STEPLESS CLAMP, 17.0-70 3/8 PCV/VAC RUBBER HOSE 3/4" HEATER HOSE TANK, RAD OVERFLOW, MUST CAC ASSY, LARGE, 05+ MUST GT	1 1 4 3 3 10 1 1 1 2 3 2.5 1.83



2010 Mustang GT, Standard Part No. 4FU218-080L/088L PARTS LIST

PART NO.	DESCRIPTION	QTY.	PART NUMBER	DESCRIPTION	QTY.
008110 008130 008447 009035	SMALL SILVER DIE CUT DECAL LICENSE PLATE FRAME 1 YR S/C WARRANTY PKG S/C LUBE, BOTTLED, 3-PACK	. 2 1 1	7C060-015 7C060-020 7J006-094 7R002-024 7U012-018	M6 X 1.0 X 16MM SHCS CL10.9+ Z M6 X 1.0 X 20MM HX 6MM WASHER S.S. #24 HOSE CLAMP O-RING, 07 MUST GT THERM HSG	2 2 2 3 1
2F329-010 4FU020-010 4FU110-101 4FU010-101 7A250-075 7F250-021 7J250-001	V3 SUPERCHARGER ASY, STD INSTR MAN 05-10 MUST GT P/S RELOCATE ASSY BRACKET P/S 2010 GT 1/4-20 X .75 SHCS PLTD 1/4-20 NYLOCK NUT ZINC PLATED 1/4 WASHER, SAE, PLTD	1 1 1 1 1 1 2	4FU139-096 7P375-106 7P625-377 7R004-002 7R004-004 7R004-007 7U032-016 7U033-020	PCV MOD ASY PCV VALVE, FORD, 3/8" HOSE 5/8" -3/8" REDUCER BARB UNION STEPLESS CLAMP, 17.0-70 STEPLESS CLAMP, 1.0 OD HOSE STEPLESS CLAMP, 28.6 X 7MM WID 3/8" EFI FUEL HSE HI-PSR HOSE, 5/8"ID CLASS 1 EMISSIONS	1 1 1 2 3 1 0.25 0.6667
7P375-050 7P375-075	3/8" HOSE UNION, BRASS 3/4" HOSE BARB UNION, BRASS	1 2	5A003-035	PREDATOR, 05-08 MUSTANG	1
7R004-002	STEPLESS CLAMP, 17.0-70	2	8F060-048	FUEL INJ, 39LB EV6, OEM 03 C	
7R004-007 7U032-016 7U038-030 4FU111-044 4FU010-044 4FU010-034 4FU017-011 2A017-750-05	STEPLESS CLAMP, 28.6 X 7MM WID 3/8" EFI FUEL HSE HI-PSR HOSE, P/S, 3/4 ID S/C MOUNTING BRKT ASY S/C MOUNT PLT, MUST GT IDLER MOUNT PLATE, MUST SPACER, STUDDED MUST GT SPACER750 OD X 2.691 LONG	4 3FT 4FT 1 1 1 2 2	7U032-018 7U100-055 7R004-002 8F001-255 7R002-044 7R004-006 5W001-022	FUEL PMP ASY,05 MUST TWIN I 3/8" SUBMERSIBLE EFI FUEL HOSE TIE WRAP, 7.5" NYLON STEPLESS CLAMP, 17.0-70 255 INTANK FUEL PUMP '86-'97 #44 HOSE CLAMP STEPLESS CLAMP, 11.3 X 5MM WID T-TAP CONN,14-16 AWG	2.75 4 2 1 1 4 2
2A017-750-06 2A017-879-08 2A017-750-07 4FU017-021 4PCS016-160 2A046-120 7A375-375	SPACER, .750 OD X .097 LONG SPACER, IDLER, MUST GT PULLEY, IDLER BELT, GATES K061203 3/8-16 X 3-3/4 HX HD	1 1 1 1 1 1	5W001-009 5W001-080 7P375-099 7U032-025 7U032-030 4FU101-001 5W018-030	16-14GA MALE SLIDE INSULATED FUSE, 20 AMP. MINI BLADE Y-UNION, 3/8" BARBED TEFLON HOSE, 5/16" ID,3/8"OD, 1/32" W HOSE,SPIRAL 3/8" CUFF ID, 1' L MAF EXT MOD 05+ MUSTANG 18GA STRD WIRE GREY	2 1 1 0.125 2 3 1 1
7C080-150 7C080-140 7A375-100 7K312-030 7K375-040 4FU112-010	M8 X 1.25 X 150MM HXHD CL10.9 M8 X 1.25 X 140 HXHD CL8.8 3/8-16 X 1 G5 HHCS, PLT 5/16 AN WASHER, S.S. 3/8 AN960 FLAT WASHR PLATED AIR INTAKE ASY	1 2 7 2 10 1	5W018-010 5W018-020 5W018-080 5W018-090 5W018-100 5W001-007	18GA STRD WIRE RED 18GA STRD WIRE BLK, UL1015 18GA STRD WIRE BLUE BULK 18GA STRD WIRE BROWN BULK 18GA STRD WIRE PURPLE 3/16" HEAT-SHRINK TUBING	1 1 1 1 1 1.5
4FU012-010 4FU012-015 7R002-056 7S400-200 7S400-351 7R002-064 8H040-235 8A003-071 7P750-102 7P250-047 4FU010-071 7U032-016 4FU013-010 7C040-008	INLET DUCT,"A" INLET DUCT,"B" #56 HOSE CLAMP SLEEVE, 4 X 2, BLUE REDUCER SLV 4.00 X 3.5 X 2.35L #64 HOSE CLAMP AIR FILTER, 4.0FLG X 7.0L MAF, 3.8 I.D. MUSTANG GT 3/4NPT X 1" X 90° HSE FIT 1/4NPT TO 3/8"BARB 90° BRKT, INTAKE SUPPORT 3/8" EFI FUEL HSE HI-PSR COVER, AIR FILTER, MUST GT M47X8MM SCHD SS	1 1 1 2 1 5 1 1 1 1 1 4 1 2	5W001-005 5W001-012	3/8" PLASTIC WIRE LOOM 18-22 GA BUTT CONN RED INSUL	1.5 12
4FU112-020 4FU012-020 7S450-200 7S300-276 7R002-044 7R002-048 7R002-016 7U030-046 8D001-001 7U034-016 7U034-016 7P218-156	DISCHARGE ASY DUCT, DISCH, MUST GT STD SLEEVE, 4 1/2 X 2, BLUE REDUCER, 3.0 X 2.75 X 2.5L #44 HOSE CLAMP #48 HOSE CLAMP #72 HOSE CLAMP #16 HOSE CLAMP 5/32" VACUUM LINE STD COMPRESS BYPASS VALVE 1" GS HEATER HOSE 1" GS HEATER HOSE VAC TEE, 7/32,7/32,5/32	1 1 1 1 1 2 4 5 1 1.25 0.583			
	WATER PIPE ASSY, 07-08 MUST (HOUSING, THRMST RELC 07 MUST GWATER PIPE, Ø1.5 X 90°,07 MUST SLEEVE, FLEX BRD Ø1.5" NOM.	1 1 0.83			



2010 Mustang GT, H.O. Part No. 4FU218-100L/108L PARTS LIST

PART NO.	DESCRIPTION	QTY.	PART NUMBER	DESCRIPTION	QTY.
008110 008130 008341 008447 009035 2F329-020	SMALL SILVER DIE CUT DECA LICENSE PLATE FRAME, VORTE VORTECH CHARGE COOLER DEC 1 YR S/C WARRANTY PKG S/C LUBE, BOTTLED, VORT 3-PA V3 SUPERCHARGER ASY, H.C	CAL1 1 1 1	7U032-016 7U033-020	PCV MOD ASY PCV VALVE, FORD, 3/8" HOSE 5/8" -3/8" REDUCER BARB UNION STEPLESS CLAMP, 17.0-70 STEPLESS CLAMP, 1.0 OD HOSE STEPLESS CLAMP, 28.6 X 7MM WID 3/8" EFI FUEL HSE HI-PSR HOSE, 5/8"ID CLASS 1 EMISSIONS	1 1 1 2 3 1 0.25 0.6667
4FU020-010	INSTR MAN 05-10 MUST GT	1	5A001-025	DIABLO MAFIA	1
4FU110-101	P/S RELOCATE ASSY	1	5A003-035	PREDATOR, 05-08 MUSTANG	
4FU010-101 7A250-075	BRACKET P/S 2010 GT 1/4-20 X .75 SHCS PLTD	1 1	8F060-048	FUEL INJ, 39LB EV6, OEM 03 C	
7F250-021 7J250-001 7P375-050 7P375-075 7R004-002 7R004-007 7U032-016 7U038-030	1/4-20 NYLOCK NUT ZINC PLATED 1/4 WASHER, SAE, PLTD 3/8" HOSE UNION, BRASS 3/4" HOSE BARB UNION, BRASS STEPLESS CLAMP, 17.0-70 STEPLESS CLAMP, 28.6 X 7MM WID 3/8" EFI FUEL HSE HI-PSR HOSE, P/S, 3/4 ID	1 2 1 2 2 4 3FT 4FT	7U032-018 7U100-055 7R004-002 8F001-255 7R002-044	FUEL PMP ASY,05 MUST TWIN II 3/8" SUBMERSIBLE EFI FUEL HOSE TIE WRAP, 7.5" NYLON STEPLESS CLAMP, 17.0-70 255 INTANK FUEL PUMP '86-'97 #44 HOSE CLAMP STEPLESS CLAMP, 11.3 X 5MM WID T-TAP CONN,14-16 AWG 16-14GA MALE SLIDE INSULATED	2.75 4 2 1 1 4 2 2
4FU111-044 4FU010-044 4FU010-034	S/C MOUNTING BRKT ASY S/C MOUNT PLT, MUST GT IDLER MOUNT PLATE, MUST	1 1 1	5W001-080 7P375-099 7U032-025	FUSE, 20 AMP. MINI BLADE Y-UNION, 3/8" BARBED TEFLON HOSE, 5/16" ID,3/8"OD, 1/32" W	1 1 0.125
4FU017-011	SPACER, STUDDED MUST GT 5 SPACER, .750 OD X 2.691 LONG	2 2	7U032-030	HOSE,SPIRAL 3/8" CUFF ID, 1' L	2
2A017-750-06	S SPACER750 OD X 2.712 LONG	1	8N101-290	WELDED CORE ASY	1
2A017-879-08 2A017-750-07 4FU017-021 4PCS016-160 2A046-120 7A375-375 7C080-150 7C080-140 7A375-100 7K312-030 7K375-040	7 SPACEŔ, .750 OD X .097 LONG SPACER, IDLER, MUST GT	1 1 1 1 1 2 7 2 10	4FE014-010 5W001-009 5W001-011 5W001-015 5W001-022 5W001-032	SUPRT PCS, 05-08 MUST GT CL RADIATOR PIPE-STAINLESS 16-14GA MALE SLIDE INSULATED 16-14 GA RING TERM .26" HOLE FUSE, BLADE TYPE 20 AMP T-TAP CONN,14-16 AWG 1/4" PLASTIC WIRE LOOM HARNESS, FUEL INJ PLUG W/WIRES FUSE HOLDER,16GA WIRE 18GA STRD WIRE RED 1/4-20 X .50 SHCS ZINC PLTD	1 1 1 1 1 60 1
4FU112-010 4FU012-010	AIR INTAKE ASY INLET DUCT,"A"	1 1	7A250-051 7A250-074	1/4-20 X .50 HHCS ZINC PLTD 1/4-20 X .75 HHCS PLTD	2
4FU014-060 5W001-085 7C060-015 7C060-020 7J006-094 7R002-024	INLET DUCT,"B" #56 HOSE CLAMP SLEEVE, 4 X 2, BLUE REDUCER SLV 4.00 X 3.5 X 2.35L #64 HOSE CLAMP AIR FILTER, 4.0FLG X 7.0L MAF, 3.8 I.D. MUSTANG GT 3/4NPT X 1" X 90° HSE FIT 1/4NPT TO 3/8"BARB 90° BRKT, INTAKE SUPPORT 3/8" EFI FUEL HSE HI-PSR COVER, AIR FILTER, MUST GT M47X8MM SCHD SS WATER PIPE ASSY, 07-08 MUST HOUSING, THRMST RELC 07 MUST G WATER PIPE, Ø1.5 X 90°,07 MUST SLEEVE, FLEX BRD Ø1.5" NOM. M6 X 1.0 X 16MM SHCS CL10.9+ Z M6 X 1.0 X 20MM HX 6MM WASHER S.S. #24 HOSE CLAMP	1 1 0.83 2 2 2 2 3	7F250-020 7J006-093 7J250-001 7P156-082 7P218-156 7P375-075 7P500-026 7P500-078 7R002-016 7R002-024 7R002-044 7R002-072 7R003-016 7R003-028 7R007-001 7S275-055 7S450-200 7U030-046 7U030-065 7U034-016 7U038-000	1/4-20 HEX NUT 6MM WASHER, PLATED 1/4 WASHER, SAE, PLTD 5/32 TEE VAC TEE, 7/32,7/32,5/32 3/4" HOSE BARB UNION, BRASS 1/2NPT X 3/4 BARB 90° BRASS 1/2NPT X 3/4 HOSE FIT STRT #16 HOSE CLAMP #24 HOSE CLAMP #24 HOSE CLAMP #44 HOSE CLAMP ADEL CLAMP, 1.0" ADEL CLAMP, 2-3/8" .26 HOLE NYLON RATCHET CLAMP 1-1/8" ELBOW, Ø2.75 X 55° SILICONE SLEEVE, 4 1/2 X 2, BLUE 5/32" VACUUM LINE 3/4"X90° RUBBER HOSE, SHORT 1" GS HEATER HOSE 1" GS HEATER HOSE	5 3 2 2 2 5 4 1 1 4 2 2 4 2 2 2 1 2 1 6 1 1 1 5 1 1 1 1 1 1 1 1 1 1 1 1 1 1
7U012-018	O-RING, 07 MUST GT THERM HSG	1	7U038-012 7U038-020	HOSE,3/4"DIA 90°,4X12 LEGS HOSE, Ø3/4 'S' MOLDED RUBBER	1 1



 
2010 Mustang GT, H.O. cont'd Part No. 4FU218-108L/108L PARTS LIST

	- 3 - 1				
PART NO.	DESCRIPTION	QTY.	PART NUMBER	DESCRIPTION	QTY.
7U038-150 7U100-055 7U375-054 8D001-001 8F001-403 8N010-160 8N010-220 8N055-050 8N056-061	HOSE, 3/4"X150° MOLDED HOSE TIE WRAP, 7.5" NYLON 3/4" VINYL CAP STD COMPRESS BYPASS VALVE PUMP, WATER, BOSCH SURGE TANK BRKT, MUST GT MTG BRKT, 05-07 MUST BOSCH PMP PLASTIC CAP, SURGE TANK SURGE TANK INTEGRA GSR MODIFIE	1 6 1 1 1 1 1	7U034-016 7U034-016 7U038-000 7U038-012 HC 7U038-020 HOS	SLEEVE, 4 1/2 X 2, BLUE 5/32" VACUUM LINE SE, 3/4 X 90° RUBBER, SHORT 1" GS HEATER HOSE 1" GS HEATER HOSE 3/4" HEATER HOSE OSE, 3/4 DIA 90°, 4 X 12 LEGS SE, 3/4 DIA 'S' MOLDED RUBBE E, 3/4 D X 150° MOLDED HOSE	1 5FT 1 1FT 1.25FT 12FT 1 1
8N106-135 8N006-020 8N010-171 8N010-173 2A017-036 7C080-030 7F008-020 7J312-000 7A250-051 7J250-001	WATER CLR ASY, MUST GEN.II WATER COOLR, FLDYN DUAL PASS BRACKET, DRVR SIDE CLR MNT,PLT BRACKET, PASS SIDE CLR MNT SPACER,PLT.BRG.HSG.,0.186" M8 X 1.25 X 30 HXHD CL10.9 NUT, M8 X 1.25 5/16 FLAT WASHER-SAE 1/4-20 X .50 HHCS ZINC PLTD 1/4 WASHER, SAE, PLTD	1 1 1 1 1 4 6 6 12 4 4	7U100-055 7U375-054 8D001-001 STI 8F001-403 8N010-160 SUI 8N055-050 F 8N056-061 SURG 8N010-340 MTG I 7U133-060 3/ 7A250-376 1/4-2	TIE WRAP, 7.5" NYLON 3/4" VINYL CAP D COMPRESS BYPASS VALVE PUMP, WATER, BOSCH RGE TANK BRKT, 05 MUST GT PLASTIC CAP, SURGE TANK EE TANK INTEGRA GSR MODIFIE BRKT 2010 MUST GT BOSCH PM 4" X 90° HOSE 5"X3.5" LEGS 20 X 3/4 SHOULDER SHCS NYL 20 NYLOCK NUT ZINC PLATED	6 1 1 1 1 1
8N155-082 4FU010-061 4FU010-091 7A250-051 7A250-074 7F250-021 7J006-093 7P100-076 7P250-045 7P375-050 7R002-010 7R004-002 7U030-056 7U038-000 8N055-080	COOLANT RES RELOC, 07-08 MU BRKT B, COOL RES RELOC MUST BRKT, COOL RES RELOC, 07 GT 1/4-20 X .50 HHCS ZINC PLTD 1/4-20 X .75 HHCS PLTD 1/4-20 NYLOCK NUT ZINC PLATED 6MM WASHER, PLATED HOSE REDUCER, 1"->3/4" PLSTC 1/4 MALE NPT X 3/8 MALE BARB 3/8" HOSE UNION, BRASS #10 HOSE CLAMP STEPLESS CLAMP, 17.0-70 3/8 PCV/VAC RUBBER HOSE 3/4" HEATER HOSE TANK, RAD OVERFLOW, MUST	ST1 1 1 4 3 3 10 1 1 1 2 3 2.5 1.83 1	7C010-075 2A017-753-02 SI 7J008-001 7F008-023 N 7A250-376 1/4-2	M8 X 1.25 X75 STUD PACER, 750 OD X .880 LONG 5/16" FENDER WASHERS IUT, M8 X 1.25 NYLOCK NUT 20 X 3/4 SHOULDER SHCS NYL 20 NYLOCK NUT ZINC PLATED	4 4 4 8 2 2
8N104-127 4FE014-010 5W001-009 5W001-011 5W001-015 5W001-022 5W001-032 5W001-071 5W018-010 7A250-051 7A250-051 7A250-074 7F250-020 7J006-093 7J250-001 7P156-082 7P218-156 7P375-075 7P500-026 7P500-026 7P500-078 7R002-016 7R002-044 7R002-044 7R002-072 7R003-016 7R003-016 7R003-016 7R003-028 7R007-001	SUPRT PCS, 2010 MUST GT CLI RADIATOR PIPE-STAINLESS 16-14GA MALE SLIDE INSULATED 16-14 GA RING TERM .26" HOLE FUSE, BLADE TYPE 20 AMP T-TAP CONN,14-16 AWG 1/4" PLASTIC WIRE LOOM HARNESS, FUEL INJ PLUG W/WIRES FUSE HOLDER,16GA WIRE 18GA STRD WIRE RED 1/4-20 X .50 SHCS GR8 ZINC PLT 1/4-20 X .50 SHCS GR5 ZINC PLT 1/4-20 X .50 HHCS GR5 ZINC PLT 1/4-20 X .50 HHCS GR5 PLTD 1/4-20 X .50 HHCS GR5 ZINC PLT 1/4-20 X .50 HCS GR6 ZINC PLT 1/4-20 X .50 HC	R 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1			

1. PREPARATION/REMOVAL

- **A.** Disconnect the battery before proceeding.
- B. Loosen the hose clamp at the throttle body. Disconnect the plastic 3/8" tube assembly attached to the passenger's side valve cover. Remove the plastic 3/8"x 90° connector from the plastic tube connected at the passenger's side valve cover. Set the connector aside to be re-used in a later step. Discard the remainder of the hose assembly. (See Fig. 1-c)

NOTE: The preferred method of removing the 90° connector from its original plastic tube is to apply a small amount of heat to the tube and slide the connector free.



- **D1.** Remove the 10mm headed bolt (located next to the inner fender) which secures the lower portion of the air filter enclosure. Remove the lower portion from the car it will not be reused. (See Fig. 1-d)
- **D2.** (Bullitt Only) Remove silver nut washer securing the front of the intake shroud. (see Fig 1-d1)
- **E.** Remove the six plastic push pins securing the radiator cover. Remove the cover and set aside to be reinstalled later. (See Fig. 1-e)



Fig. 1-d1 (Bullitt Only)

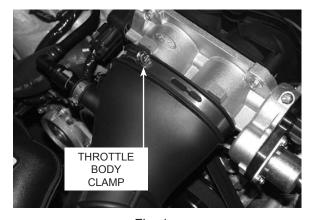


Fig. 1-a



Fig. 1-b



Fig. 1-c

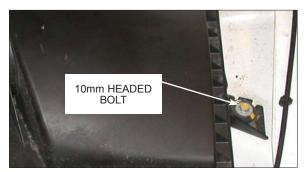


Fig. 1-d

1. PREPARATION/REMOVAL, cont'd

F. Locate the coolant drain plug on the passenger's side of the radiator. Next drain the coolant into a clean container. This coolant will be reused in a later step.

NOTE: Loosening the coolant reservoir cap will allow for coolant to drain more freely.

- G. Remove the two 8mm headed bolts securing the coolant overflow reservoir to the plastic fan shroud. (See Fig. 1-f)
- **H.** Disconnect the small overflow hose (running across the top of the radiator) from the overflow reservoir. (See Fig. 1-f)
- **I.1 (2007-2010 Models and Bullitt Only)** Remove the large hose connected to the bottom of the coolant overflow reservoir. (See Fig. 1-g)
- I.2 (2005-2006 Only) Remove the large hose connecting the thermostat housing to the bottom of the overflow reservoir. Set the hose and reservoir aside to be reinstalled in a later step. (See Fig. 1-g)

NOTE: If you are installing H.O. (charge cooled) kit, the coolant reservoir will not be reused. Retain only the fill cap for reuse.

- J.1 (2005-2006 Only) Remove the two upper radiator hoses from the engine coolant crossover tube and set aside. The radiator hose located on the driver's side will not be reused. (See Fig. 1-g)
- **J.2 (2007-2010 Only)** Remove single upper radiator hose. This host will be reused in a later step.
- K. (2005-2006 Only) Remove the thermostat housing from the large formed hose leading to the engine block and the lower outlet of the radiator. (See Fig. 1-h) Set the thermostat housing aside to be reinstalled in a later step.
- L. (2005-2006 Only) Remove the lower hose on the radiator and set the hose aside, as it will not be reused.
- **M.** Drain and remove the power steering reservoir. This reservoir will be relocated in a later step.
- N.1 Disconnect and remove the factory 5/8" plastic breather hose assembly attached to the driver's side valve cover and intake manifold. Remove the two fittings from the ends of the plastic tube for re-use. Discard the striped plastic tube. (See Fig. 1-i)
- N.2 (Bullitt Only) Remove strut tower brace two nuts each side with a 13mm socket.

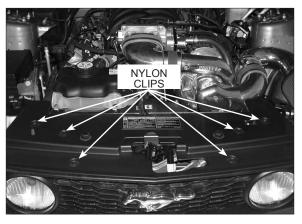


Fig. 1-e

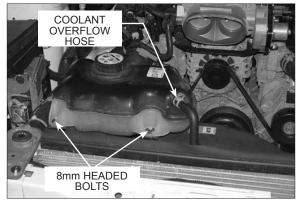


Fig. 1-f



Fig. 1-g

1. PREPARATION/REMOVAL, cont'd

- O. The installation of this supercharger system requires the removal, in part or whole, of the intake manifold so that modifications can be made to the coolant crossover tube or thermostat housing depending on year of application:
 - (2005-2006 Only) Unplug the wire connectors from each of the eight injectors. Remove all of the vacuum hoses and connectors located at the front and rear of the intake manifold. Remove the connector attached to the intake manifold runner control (*IMRC*) unit located at the rear of the manifold on the passeger's side.
 - **2. (2007-2010 Only)** Unplug the wire connectors from each of the eight injectors.
 - 3. Remove the four 8mm headed bolts securing the injector rails to the intake manifold. Do not remove the small clips that retain the injectors to the fuel rails. Using a 5/8" spring lock tool, disconnect the fuel feed line from the fuel rail. Remove the vacuum line from the fuel regulator. Remove the rails and injectors as a complete unit and set aside. New injectors will be installed in a later step. (See Figs. 1-i, 1-j)
 - Locate and remove the remaining 10mm headed bolts retaining the intake manifold to the cylinder heads. There are five on each side.
 - (2005-2006 Only) Remove the intake manifold and set aside so it can be reinstalled after modifications to the coolant crossover tube are made.

NOTE: Modification to the crossover tube will be completed in a later step

6. (2007-2010 Only) It is not necessary to remove the intake manifold from the vehicle completely. Raise the front of the manifold 3-4" and support between the throttle-body and alternator.

NOTE: Modification to the thermostat will be completed in a later step.

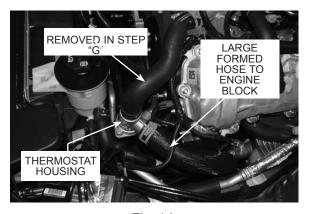


Fig. 1-h

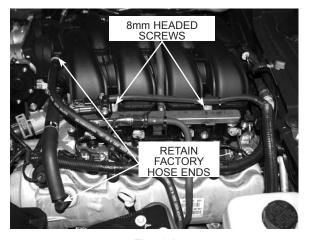


Fig. 1-i

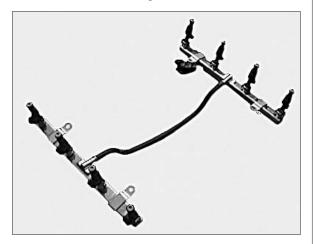


Fig. 1-i

1. PREPARATION/REMOVAL, cont'd

- P. Using a 1/2" ratchet, release the tension from the accessory drive belt and remove it from the car. This drive belt will be replaced with a longer one later in the installation.
- Q. Locate and remove the stud bolt that secures the alternator in place as well as the bolt located to the right of the alternator. (See Fig. 1-o) Using a 15mm socket or wrench, remove the nut that secures the capacitor, resistor and coolant hose support bracket to the stud bolt. Using an 18mm socket or wrench, remove the stud bolt, it will be modified and replaced in a later step.

On **2010 Models**, no coolant hose support bracket is used.

- R. There is a small tab that secures the wiring harness in place on the valve cover that will need to be removed to gain clearance for the supercharger belt. This tab is best removed with a small air saw but a grinder will work. After removal, smooth the area to prevent damage to the belt. (See Figs. 1-r, 1-r1)
- S. As seen in Fig. 1-o, the upper bolt is removed from the timing chain cover. This bolt will have to be modified by cutting off the threaded end where the resistor attaches. Modify and reinstall the bolt. (See Fig. 1-s)
- T. Disconnect the plug to the cam position sensor. Remove the wiring harness from the retaining clips that hold it to the valve cover. Move the harness out of the way. This harness will have to be relocated to gain clearance for the supercharger.

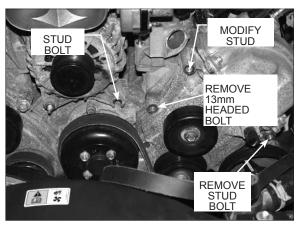


Fig. 1-o

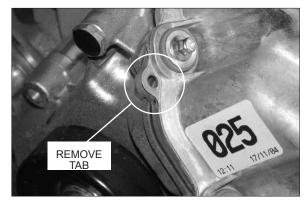


Fig. 1-r

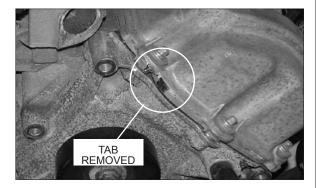


Fig. 1-r1

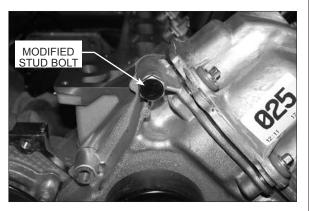


Fig. 1-s

2. OIL FEED INSTALLATION (Applies to Engine Oil-Fed Kits Only. Applications with V3 Superchargers Skip to Step 4)

- **A.** Locate the factory oil sensor on the driver's side of the vehicle near the oil filter.
- **B.** Remove the sending unit and set aside.
- C. Locate the supplied 1/4"NPT street TEE fitting. Install the TEE in the same location as the factory sending unit with the 1/4" x -4 x 90° installed on the TEE at the location noted. (See Fig. 2-a)
- **D.** Attach the stainless steel –4 hose to the –4 fitting installed in the street TEE. (See Fig. 2-a)
- E. Route the hose away from hot, sharp or moving parts and move to the top of the engine where it will be attached to the supercharger oil feed.
- **F.** Reinstall the factory sensor in the branch of the TEE as shown. (See Fig. 2-a)

NOTE: The oil feed hose to the S/C will be installed in a later step of the installation. Temporarily cap the open end of the hose to prevent contamination to the inside of the hose.



Fig. 2-a

3. OIL DRAIN ASSEMBLY INSTALLATION (Applies to Engine Oil-Fed Kits Only. Applications with V3 Superchargers Skip to Step 4)

- A. To provide an oil drain for the supercharger, it is necessary to make a hole in the oil pan. It is best to punch the hole rather than to drill it.
- **B.** Remove paint from the area around the hole.
- C. Mark the oil pan 5/8" down from the oil pan mounting rail on the driver's side of the engine. Measure forward 3/4" from the first bolt on the side of the oil pan. (See Fig. 3-a)
- D. Use a small center punch to perforate the pan and expand the hole. Switch to a larger diameter punch and expand the hole further to approximately Ø9/16". Most punches are made from hexagon material and may be placed in a socket with an extension to make this procedure easier.
- **E.** Tap the hole with a 3/8"NPT tap approximately 1/4" deep. Pack the flutes of the tap with heavy grease to hold chips. Use a small magnet to check for any stray chips.

NOTE: This method of rolling over the lip of the hole and tapping it works very well if carefully done and should cause no problems.

- F. Thoroughly clean the threaded area. Apply a small amount of silicone sealer or teflon paste to the new threads. Apply more sealer to the 3/8"NPT hose fitting and secure in the hole. Make sure a seal is formed all around the fitting. (See Fig. 3-b)
- **G.** Drain the engine oil and change the filter.

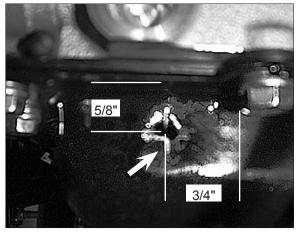


Fig. 3-a



Fig. 3-b

4. POWER STEERING RELOCATION (2010 Models Skip to Step 4.1)

- **A.** Locate the power steering assembly 4FU110-010.
- **B.** Attach the power steering (*P/S*) relocation bracket 4FU010-010 with the hardware provided to the P/S reservoir removed in an earlier section. (See Fig. 4-a)
- C. Attach the 3/4" P/S hose along with the 3/8" P/S hose to the outlets of the reservoir with the clamps provided. (See Fig. 4-b)
- **D.** Attach the 3/4" and the 3/8" hose barb unions to the factory hoses using the factory clamps.
- **E.** Attach the reservoir to the passenger's side radiator core support using one of the factory ground strap retaining bolts. (See Fig. 4-c)
- F. Attach the hoses from the reservoir to the factory P/S hoses and secure with the supplied clamps. Trim for best fit. Secure the hose to the fan shroud away from heat and moving objects.
- G. It will be necessary to trim the corner of the radiator core support cover to clear the relocated P/S reservoir. (See Fig. 4-d)



Fig. 4-b

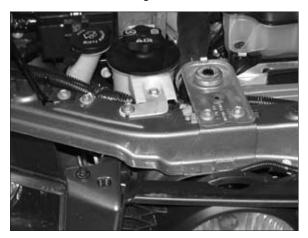


Fig. 4-c



Fig. 4-d

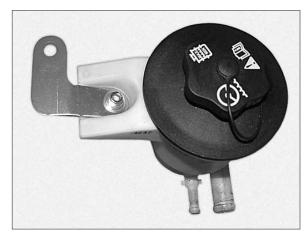


Fig. 4-a

4.1 POWER STEERING RELOCATION (2010 Models Only)

- **A.** Locate the power steering assembly 4FU110-010.
- **B.** Attach the power steering (P/S) relocation bracket P/N 4FU010-101 (R) with the hardware provided to the P/S reservoir removed in an earlier section.
- **C.** Locate the factory 3/4" PS hose and cut off the 90° bend as shown. (See Fig 4.1a)
- **D.** Using a 3/4" brass union and two stepless clamps, attach the 90° bend to a length of supplied 3/4" hose as shown. (See Fig 4.1b)
- E. Attach 90° 3/4" and a length of supplied 3/8" hose to reservoir using the factory clamps. Remove the inboard 13mm headed strut mount nuts and install PS reservoir assembly in location shown. (See Fig 4.1c)
- **F.** Route hoses towards front of vehicle away from exhaust and moving objects.
- **G.** Connect previously installed PS hoses from reservoir to the factory PS hoses using the appropriate brass unions and hose clamps. (See Fig 4.1d)



Fig. 4.1a



Fig. 4.1b



Fig. 4.1d

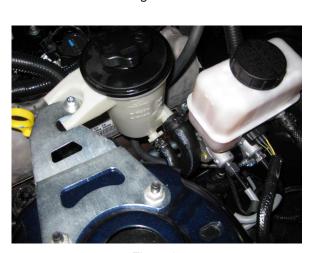


Fig. 4.1c

5.1 COOLANT TUBE RELOCATION (2005-2006 Model Only. 2007-2010 Models Skip to Step 5.2)

- A. Locate assembly 4FU214-021.
- **B.** Remove the hose connected to the back, lower portion of the engine coolant crossover tube. (See Fig. 5.1-a)
- C. Remove the nylon clip retaining the wire harness to the alternator brace and the four 10mm headed bolts securing the alternator brace. Set the brace aside to be reinstalled. (See Fig. 5.1-b)
- Remove the factory coolant bleed plug and set the plug aside. It will not be reused. (See Fig. 5.1-c)
- **E.** Remove the remaining two 10mm head bolts securing the crossover tube to the cylinder heads.

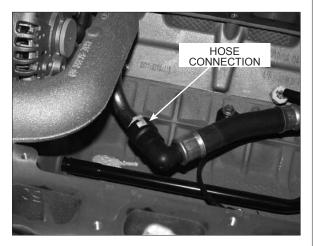


Fig. 5.1-a

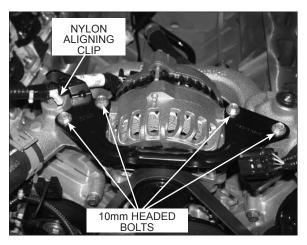


Fig. 5.1-b

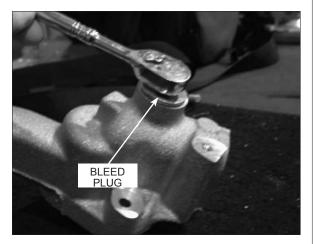


Fig. 5.1-c

5.1 COOLANT TUBE RELOCATION (2005-2006 Models Years Only), cont'd

- F. Remove the factory O-ring type gaskets to prevent damage from heat. Clamp the steel hose barb end of the coolant crossover tube in a vise as shown. Using a small amount of heat, heat the aluminum crossover tube. Using a twisting motion, remove the steel insert. (See Fig. 5.1-d) Penetrating oil will also aid in this step.
- **G.** Locate the supplied 1-1/4" expansion plug (7*P*125-002).
- H. Coat the expansion plug with sealant. Using a tube or socket that matches the recessed diameter of the plug, install the plug flush with the machined surface sealing the outlet of the crossover tube. (See Figs. 5.1-e, 5.1-f)
- Locate the supplied coolant relocation fitting, sealing nut and O-ring washer. (See Fig. 5.1-g)
- J. Install the fitting in the location of the factory coolant bleed plug. (See Fig. 5.1-h) Screw the jam nut all the way onto the fitting. Tighten the fitting in the position shown. (See Fig. 5.1-h) Secure with the jam nut.

NOTE: It is recommended that sealant be used to seal the thread of the fitting.

- **K.** Reinstall the factory O-ring gaskets to the cross-over tube.
- L. Set the coolant crossover tube back in its original location.
- M. Reinstall the two 10mm headed bolts through the crossover tube into the cylinder heads. Temporarily install two intake manifold retaining bolts through the crossover tube into the cylinder heads, where the manifold will be secured. Leave these loose as they are there only as a pilot for the crossover tube.
- **N.** Tighten the crossover tube retaining bolts, and remove the two manifold retaining bolts.



Fig. 5.1-d



Fig. 5.1-e



Fig. 5.1-f

5.1 COOLANT TUBE RELOCATION (2005-2006 Models Years Only), cont'd

- O. Reconnect the coolant crossover tube hose at the lower rear portion of the coolant crossover tube. Remove any coolant that may have spilled into the engine valley.
- P. Reinstall the alternator support bracket and the four 10mm headed retaining bolts removed earlier. Attach the capacitor resistor removed from the stud bolt on the front cover to one of the 10mm bracket retainers. Route the resistor and its wire away from moving parts.

NOTE: Leave two 10mm headed bolts that attach the bracket to the crossover tube loose.



- **R.** Lower the intake manifold onto the cylinder heads.
- S. Install the ten factory 10mm headed manifold retainers and tighten to factory specifications. Tighten the two 10mm headed bracket bolts that were previously left loose.
- **T.** Reconnect the IMRC control unit at the rear of the manifold along with the vacuum hose.
- **U.** Remove the small clips that retain the factory fuel injectors to the fuel rail. Remove the factory fuel injectors and set aside they will not be reused.
- V. Locate the supplied fuel injectors. Lubricate the injector O-rings with clean motor oil and install into the fuel rail. Reinstall the small retaining clips onto the injectors.
- **W.** Lower the fuel rail/injector assembly onto the manifold, making sure that the injectors seat properly into the manifold. Secure with the four factory 8mm headed bolts.
- X. Reconnect the fuel injector plugs and all other connections and vacuum lines previously removed from the manifold assembly.



Fig. 5.1-g

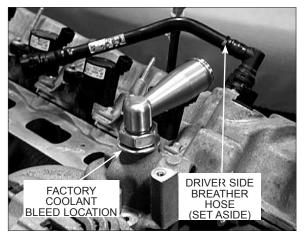


Fig. 5.1-h

5.2 THERMOSTAT HOUSING/RADIATOR HOSE MODIFICATION (2007-2010 Models Only)

- A. Using an 8mm socket, remove the two 6mm screws that retain the thermostat housing. Set the housing aside to be reused later. Leave the factory thermostat and O-ring seal in place as they will be reused (provided they are in good condition). (See Fig. 5.2-a)
- **B.** Locate the supplied thermostat housing adaptor and hardware. Using the two 6mm socket-head screws, install the housing adaptor as shown. (See Fig. 5.2-b)
- C. Using the 6mm hardware, washers and O-ring provided, reinstall the thermostat housing. Attach the previously removed resistor to the housing as shown. (See Fig. 5.2-c)
- D. Reinstall the intake manifold removed in a previous step. Check to see that the rubber intake runner gaskets are in place and *undamaged*. Make sure the cylinder head surface is clean.
- **E.** Lower the intake manifold onto the cylinder heads.
- **F.** Install the ten factory 10mm headed manifold retainers, and tighten to factory specifications.
- G. Remove the small clips that retain the factory fuel injectors to the fuel rail. Remove the factory fuel injectors and set aside. These will not be reused.
- H. Locate the supplied fuel injectors. Lubricate the injector O-rings with clean motor oil and install into the fuel rail. Reinstall the small retaining clips onto the injectors.
- I. Lower the fuel rail/injector assembly onto the manifold, making sure that the injectors seat properly into the manifold. Secure with the four factory 8mm headed bolts.
- J. Reconnect the fuel injector plugs, all other connections and vacuum lines previously removed from the manifold assembly.
- **K.** Locate the 4FU114-030 water pipe assembly.

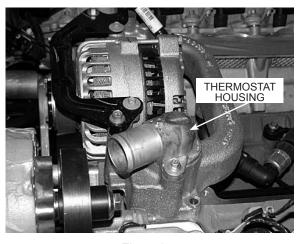


Fig. 5.2-a

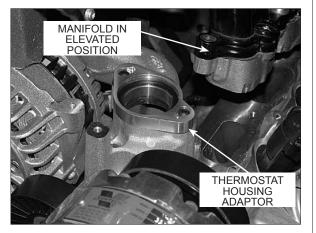


Fig. 5.2-b

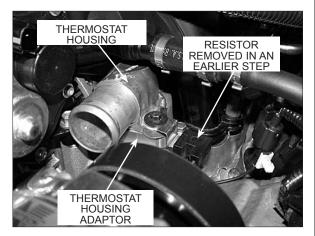


Fig. 5.2-c

5.2 THERMOSTAT HOUSING/RADIATOR HOSE MODIFICATION (2007-2010 Models Only), cont'd

- L. Cut approximately 2.25" off the short 90° end of the factory radiator hose and set aside. (See Fig. 5.2-I)
- **M.** Cut the remainder of the short 90° bend from the factory radiator hose, approximately half way between the 90° bend and the 45° bend, and discard. (See Fig. 5.2-I)
- N. Using the 2.25" section of radiator hose cut previously and two #24 hose clamps provided, install the short end of the 90° stainless tube (4FU014-060) onto the repositioned thermostat housing. (See Fig. 5.2-n)
- O. Slide the protective sleeve provided over the modified hose. Install the remainder of the factory radiator hose using one factory hose clamp and one #24 hose clamp. (See Fig. 5.2-o)

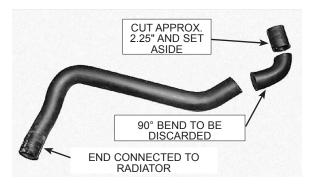


Fig. 5.2-I

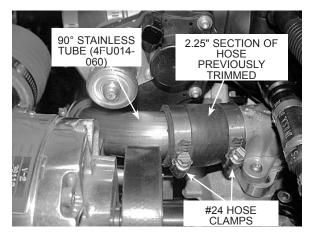


Fig. 5.2-n

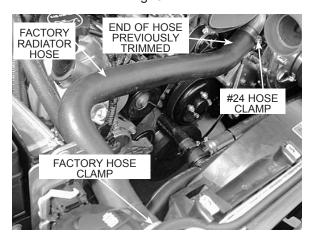


Fig. 5.2-o

6.1 PULLEY AND SPACER REPLACEMENT (Bullitt/V-Power/8-Rib Kits Only, All Others Skip to Step 6.2)

- A. Unplug the cam sensor connector.
- **B.** Tensioner modification (skip to Step C. if installing belt tensioner assist):
 - Remove the three screws retaining the factory spring tensioner to the front of the engine. Remove the factory steel idler from the tensioner and replace with the supplied 3" idler (4FU116-031) using the factory hardware. (See Fig. 6.1-a)
 - 2. Install the three M8 x 40mm bolts w/washers through the tensioner mounting holes.
 - 3. Slide the three .75"OD x .328"ID x .140" spacers onto the three bolts protruding through the tensioner. (See Fig. 6.1-a)
 - **4.** Secure the tensioner assembly to the front of the engine. Use Fig. 6.1-a as guide for spacer placement.

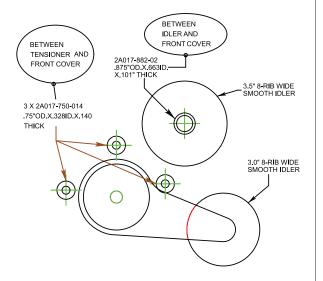


Fig. 6.1-a

6.1 PULLEY AND SPACER REPLACEMENT (Bullitt/V-Power/8-Rib Kits Only - All others skip to step 6.2)

- C. OPTIONAL Belt tensioner assist up-grade:
 - Remove the three screws retaining the factory spring tensioner to the front of the engine. Remove the factory steel idler from the tensioner and replace with the supplied 3" idler (4FU116-031) using the factory hardware. (See Fig. 6.1-C1)
 - 2. Locate the supplied tensioner assist plate. Install the supplied 3/8-16 x 2.5" screw and 3/8-16 jam nut into the plate. Install the three M8 x 55mm bolts w/washers through the plate. Slide the three .75"OD x .328"ID x .927" long spacers onto the previously installed hardware. (See Fig. 6.1-C2)
 - 3. Install the plate, hardware and spacers onto the factory spring tensioner. Slide the three .75"OD x .328"ID x .140" spacers onto the three bolts protruding through the tensioner. (See Fig. 6.1-C2)
 - **4.** Secure the tensioner assembly to the front of the engine. Use Figs. 6.1-C1, 6.1-C2 as guides for spacer placement.

NOTE: Leave the 3/8" screw and jam nut loose at this time.

- D. Remove the factory idler pulley located just above the spring tensioner location. Replace with the supplied 3.5" idler (4FU016-021) and .875"OD x .663"ID x .101" thick spacer (2A017-882-02) using the factory hardware. (See Fig. 6.1-a)
- **E.** Replace the alternator pulley:
 - First remove the plastic cap from the end of the alternator pulley to reveal the splined hub.
 - 2. Rotate the pulley so that a round punch can be inserted through the front of the alternator into the alternator-cooling fan. This will hold the alternator assembly from turning. Using the appropriate splined hub tool (see notes on page iv), loosen and remove the alternator pulley. The threads are standard.
 - 3. Install the supplied 8-rib alternator pulley (4FU016-011) and secure using the M16 x 1.50" flanged nut provided.

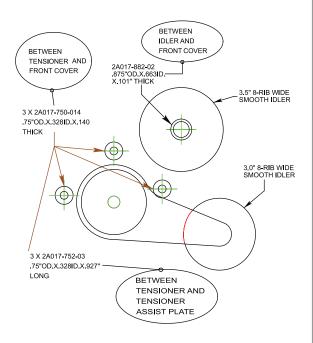


Fig. 6.1-C1 (optional)

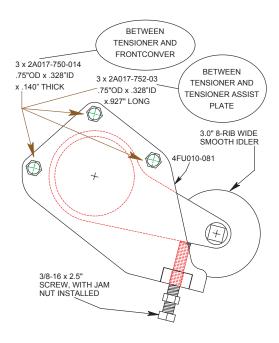


Fig. 6.1-C2 (optional)

6.1 PULLEY AND SPACER REPLACEMENT (Bullitt/V-Power/8-Rib Kits Only - All others skip to step 6.2), cont'd

- F. Remove the two bolts that retain the factory idlers to the front cover. Discard the idlers and bolts. Replace the top idler with the 3.5" smooth idler (4FU016-021) .875"OD x .663"ID x .101" spacer and stud bolt provided. Replace the lower idler with the 3.5" ribbed idler (4FU016-041) .875"OD x .663"ID x .101" spacer and stud bolt provided. (See Fig. 6.1-c.)
- G. Using the appropriate pulley puller, remove the factory power steering pulley and discard. Replace with the supplied 8-rib power steering pulley with the appropriate installer tool.
- H. Remove the A/C clutch retaining screws. Carefully remove the clutch and set aside with the hardware and small spacer located between tip of A/C compressor drive shaft and A/C clutch spline. Replace with the supplied 8-rib A/C pulley (4FR016-021), and secure using the factory hardware and spacer.
- I. Remove the crank pulley retaining bolt.
 Using the appropriate pulley puller,
 remove the crank pulley and discard.
 Install the supplied 8-rib crank pulley
 using the factory retaining bolt. (Thread
 locking compound must be applied to the
 screw threads.)
- J. Loosely install the 8-rib drive belt provided using Fig. 6.1-c for belt route reference. Not all pulleys are installed at this time.


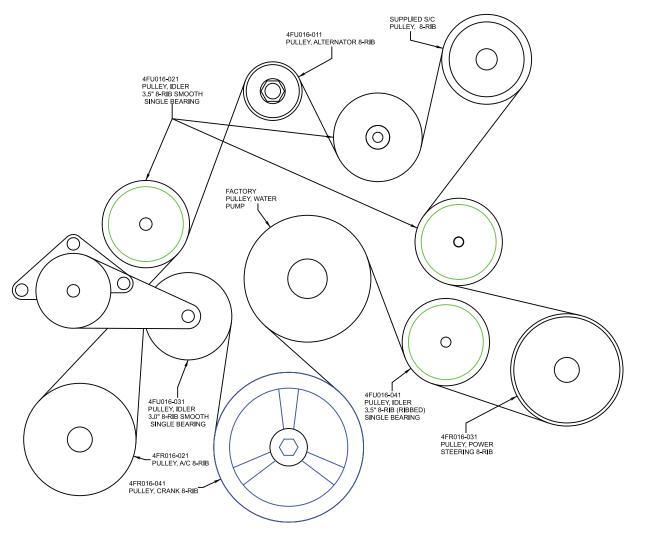


Fig. 6.1-c

6.1 PULLEY AND SPACER REPLACEMENT (Bullitt/V-Power/8-Rib kits Only - All others skip to step 6.2), cont'd

NOTE: See Fig. 6.1-d for the next few steps.

- **K.** S/C mounting plate installation:
 - 1. Install the two 140mm bolts into their mounting plate hole locations and slide the two 2.691" long spacers onto them. (See *Figs. 6.1-d*, 6.2-a.)
 - **2.** Install the idler plate onto the previously installed hardware and spacers.
 - 3. Install the .097" long spacer onto the bolt that will be secured through the alternator. (See *Figs. 6.1-d, 6.2-a.*)
 - 4. Loosely install the S/C mounting plate assembly using the original S/C mounting plate hardware, taking care to route the drive belt on the correct side of the spacers. (See Figs. 6.2-b, 6.2-c.)
 - **5.** Locate the remaining 3.5" smooth idler (4FU017-031), .544" long pilot spacer, and 1.597" long spacer as depicted in *Fig. 6.1-d.*
 - **6.** Install the idler pulley assembly referencing *Figs. 6.1-d*, *6.2-a*.

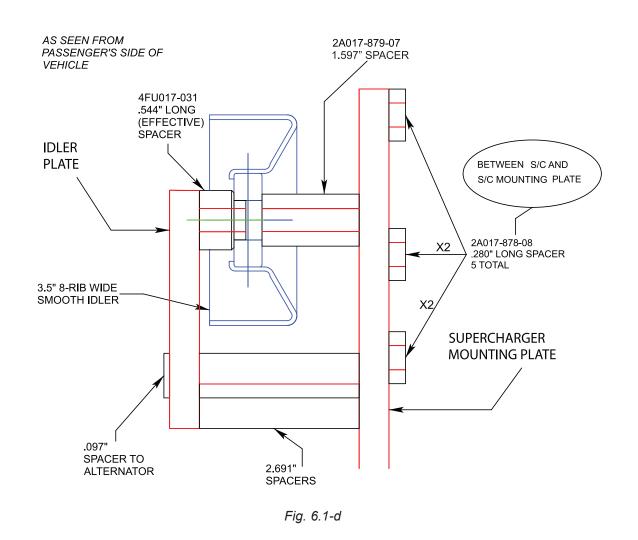

6.2 SUPERCHARGER MOUNTING PLATE INSTALLATION

- A. The mounting plate is provided with the spacers and bolts as they would be installed on the vehicle. *Keep these bolts and spacers marked as to their locations*. They are all different in size and mismatching them will result is misalignment of the mounting plate.
- **B.** (Non V-Power/Bullitt Kits only) Locate the two supplied stud-bolt spacers (see *Figs. 6.2-b, 6.2-c*) in the S/C mounting plate assembly. Remove the factory screws retaining the idler pulleys on the driver's side of the engine and replace with the stud spacers.
- C. It is necessary to install the supercharger accessory drive belt and loosely route it following *Fig.* 6.2-c, as not all pulleys are currently in place.
- **D.** Locate the supercharger mounting plate 4FU010-044 from the supercharger mounting plate assembly. (See *Fig. 6.2-a.*)
- E. (Non V-Power/Bullitt Kits only) Locate the two 8mm x 140mm long bolts and washers from the mounting bracket assembly and install in the locations noted. (See *Fig. 6.2-a.*)
- **F.** Slide the two long spacers onto the bolts previously installed. (See *Fig. 6-f.*) Install the small triangle-shaped idler pulley mounting bracket to the spacers. Install the .093" spacer onto the bolt that will be attached in the alternator location.
- **G.** Lower the mounting plate assembly into position on the front of the engine. Be sure to route the drive belt on the correct side of the idler bracket and spacers. (See *Fig. 6.2-g.*)
- H. Loosely attach the plate using the previously installed 140mm hardware. Locate the two 3/8-16 x 1.0" bolts and washers and install through the plate into the two stud bolt spacers retaining the factory idlers. (See Figs. 6.2-a, 6.2-c.)
- Locate the 8mm x 150mm bolt and washer. Loosely install the bolt through the mounting plate and remaining long spacer into the engine cover using Fig. 6.2-a for location reference.
- J. (Non V-Power/Bullitt Kits only) Locate the supplied idler, 1.776" idler spacer, idler pilot spacer, 3/8-16 x 3.75" long bolt and washer. Install the bolt/washer through the mounting plate, 1.776" spacer, supplied idler, idler pilot spacer and into the triangleshaped bracket. (See Figs. 6.2-f to 6.2-h for assistance.)

NOTE: If installing a standard output kit (non-cooled), the 3/8" x 3.75" bolt will be installed in the upper hole location. H.O. kits install in the lower hole.

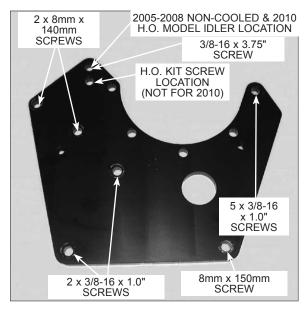


Fig. 6.2-a 2005-2008 NON-COOLED & 2010 H.O. MODEL IDLER LOCATION

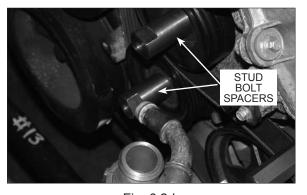


Fig. 6.2-b

NOTE: This figure is just for reference.
The small idler pulley mounting bracket will need to be installed at the same time as the supercharger (S/C) Mounting Plate. (See Fig. 7-d.)

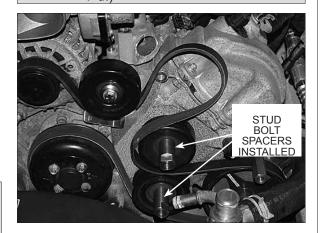


Fig. 6.2-c

6.2 SUPERCHARGER MOUNTING PLATE INSTALLATION, cont'd

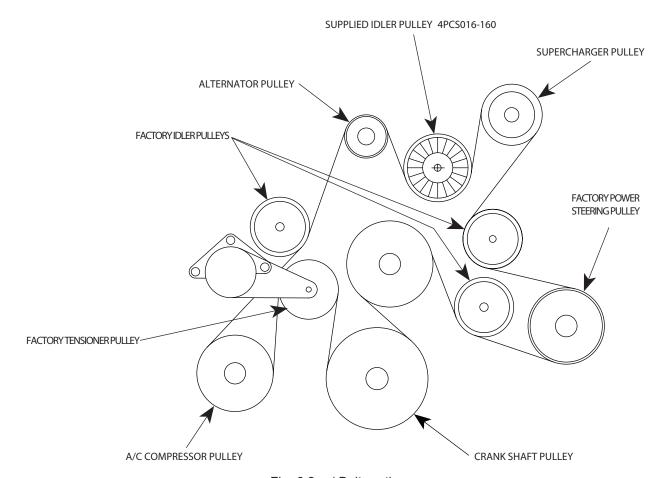


Fig. 6.2-e / Belt routing

6.2 SUPERCHARGER MOUNTING PLATE INSTALLATION, cont'd

- **K.** Tighten all mounting plate hardware, making sure the drive belt is properly routed and no wiring or hoses are caught between the mounting surfaces. (See *Fig. 6.2-g.*)
- **L1.** (Non V-Power/Bullitt Kits only) Install the five 3/8-16 x 1.0" bolts and washers through the back side of the mounting plate. (See *Fig. 6.2-h*.)
- **L2**. (V-Power/Bullitt Kits only) Install the five 3/8-16 x 1.5" supplied bolts and washers through the back side of the mounting plate. Install the five .280" long spacers (2A017-878-08) onto the previously installed hardware. (*See Fig 6.1-d*)
- *M. Attach the supplied length of 1/2" oil drain line hose, and one #8 hose clamp from the previously installed oil drain assembly, to the 1/2" barbed fitting in the supercharger.
- *N. Install the supplied 1/8"NPT x -4 straight fitting from assembly 4FU130-026 to the oil feed fitting on the supercharger.
- NOTE: Use only clean engine oil on the pipe threads. Teflon tape or pipe sealant is not recommended as it might loosen and cause blockage of the small oil feed orifice resulting in possible supercharger failure.
 - O. Attach the supercharger assembly to the mounting plate using the previously installed hardware. A 9/16" ratcheting end wrench will greatly aid in this step.
- *P. Secure the oil drain hose to the prevously installed brass fitting in the oil pan, making sure to cut the hose to length & route it in a smooth downward manner and away from moving or hot objects.
- NOTE: Any dips, "uphill" sections, kinks or restrictions may cause drainage problems and possible supercharger failure.
- *Q. Attach the -4 oil feed hose to the straight -4 fitting previously installed in the supercharger. Secure away from moving or hot objects.
- **R.** Using a 1/2" ratchet, rotate the factory spring tensioner clockwise and install the accessory drive belt. (Refer to Fig. 6.2-e for proper belt routing.)
- S. Optional belt tensioner assist upgrade only: Once the drive belt has been installed, snug the tensioner assist bolt. Lock in place with the previously installed jam nut.
- NOTE: Do not overtension the tensioner assist bolt, as damage may occur to the OEM tensioner.
- **T.** Reconnect the cam sensor plug.
- **U. Secure the remote drain hose away from the belt and other hoses using tie-wraps

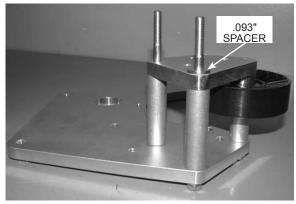


Fig. 6.2-f



Fig. 6.2-g



Fig. 6.2-h

- * Applies to "engine oil-fed" units only. V-3 applications skip these steps
- ** Applies to V-3 applications only

7. THERMOSTAT HOUSING RELOCATION (2005-2006 Only)

- A. It will be necessary to relocate the thermostat housing to gain clearance for the supercharger mounting bracket.
- **B.** Locate hose 7U133-050. This hose will be modified and replace the factory lower radiator hose removed in a previous step. (See *Fig. 7-a.*)
- **C.** Modify the supplied hose as seen in the figures below. (See *Figs. 7-b, 7-c.*)
- **D.** Trim approximately 5" off of the 9" end of the hose and 5-1/4" off the 13" end. (See *Fig. 7-c.*)

NOTE: Because of manufacturing tolerances, it is best to leave this hose long and trim to fit.

- E. Install the long end of the modified hose to the outlet of the radiator with a #24 hose clamp. Leave the clamp loose for adjustment.
- **F.** Install the thermostat housing to the open end of the new, lower radiator hose and the large formed factory hose. Adjust the thermostat's location making sure it clears any moving parts.

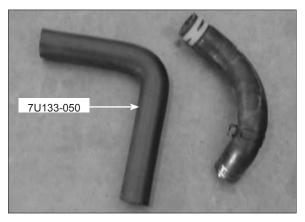


Fig. 7-a

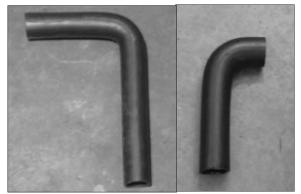


Fig. 7-b

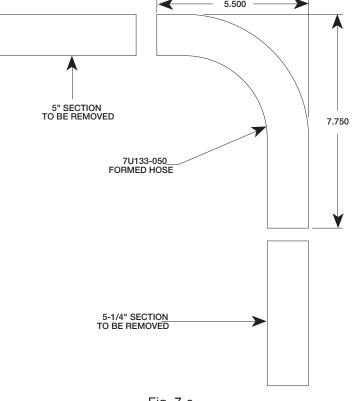


Fig. 7-c

7. THERMOSTAT HOUSING RELOCATION (2005-2006 Only), cont'd

NOTE: The hose clamps will be left loose for adjustment of the thermostat's location until after the installation of the supercharger and supercharger mounting bracket.

- **G.** Locate the 7U133-190 molded coolant hose. (See *Fig.* 7-*c.*)
- **H.** Install the end with the 90° bend onto the thermostat housing.
- I. Install the opposite end to the previously modified coolant crossover tube. Secure using the #20 hose clamps provided. (See *Fig. 7-c.*)



Fig. 7-d

NOTE: For non-cooled kits skip this section and proceed to Section 9.

A. BUMPER COVER AND SPLASH PAN

- Raise the vehicle with a floor jack and set on jack stands.
- 2. Remove the seven 5.5mm headed screws retaining the lower splash panel. (See *Fig. 8A-a.*)
- Remove the six Phillips-head screws (three on each side) from the lower portions of the plastic innner fender liners. (See Fig. 8A-b.).

On **2010 Models**, remove the four 7mm headed screws (2 per side) from the lower portions of the plastic inner fender liner.

- **4.** Remove the five plastic clips retaining the front portion of the fender liner. Both sides need to be removed. (See *Fig. 8A-c.*)
- **5.** Remove the four 10mm nuts (*two on each side*) retaining the bumper cover to the fenders. (See *Fig. 8A-d*.)

2010 models do not use the bracket depicted in Fig.8A-d. Pull outward from rear most portion of the bumper where it attaches to the inner fender to unsnap from retainers. The bumper detaches along the bumper to fender body line and underneath the headlights.

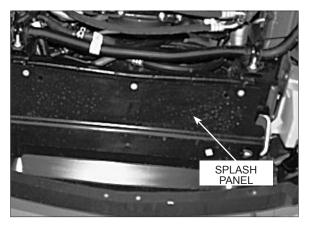


Fig. 8A-a

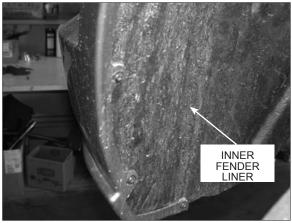


Fig. 8A-b



Fig. 8A-c

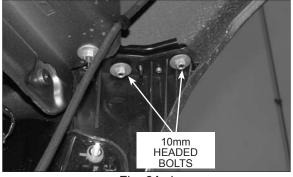


Fig. 8A-d

A. BUMPER COVER AND SPLASH PAN, cont'd

- **6.** Disconnect the connectors on the parking and the lower fog lights. (See *Fig. 8A-e.*)
- **7.** Remove the six nylon clips retaining the upper radiator core support cover. (See *Fig. 8A-f.*)
- 8. Remove the two 10mm headed bolts (one on each side in the upper portion of the grill). (See Fig. 8A-g.)

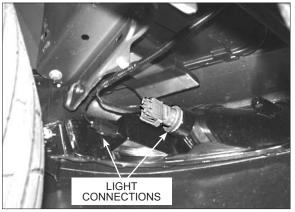


Fig. 8A-e

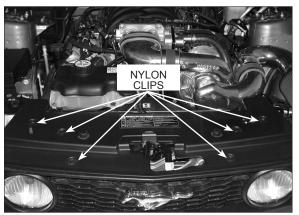


Fig. 8A-f



Fig. 8A-g

A. BUMPER COVER AND SPLASH PAN, cont'd

- **9.** Lift up on the tabs releasing them from the clips. (See *Fig. 8A-h.*)
- **10.** Pull out on the bumper cover
- **11.** Remove the connector to the driving light in the grill (*if equipped*).
- **12.** Remove the bumper cover and set aside. (See *Fig. 8A-i*.)

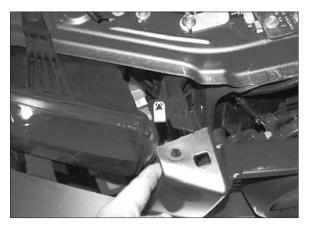


Fig. 8A-h

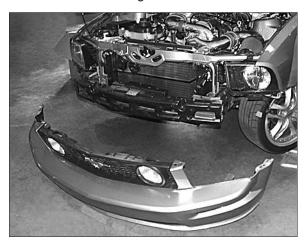


Fig. 8A-i

B. WATER COOLER ASSEMBLY INSTALLATION

NOTE: Refer to Fig. 8B-q throughout the following steps:

- **1.** Locate the water cooler assembly 8N106-135.
- 2. Install the two mounting bracket 8N010-171 and 8N010-173 to the water cooler using the supplied 1/4-20 x 1/2" screws, washers. (See *Fig. 8B-a.*)

NOTE: Leave these screws loose for adjustment when attaching the assembly to the vehicle.

- 3. Remove four nylon push pins from the styrofoam bumper support and set the support and the pins aside to be reinstalled. (See *Fig.* 8B-b.)
- **4.** Remove six of the eight 13mm headed inset bolts retaining the metal bumper support. (See *Fig. 8B-c.*)
- **5. 2005-2009 models:** Replace the bolts previously removed with the six 8mm x 1.25" x 35mm long bolts and washers provided.

2010 models install four M8x1.25x75mm studs into the four inner bumper bolt holes.

6. 2005-2009 models: Install the four 2A017-036 spacers (*two each side*) onto the bolts that will secure the water cooler. (See *Fig. 8B-d.*)

2010 models use four 2A017-753-02 spacers, four 5/16" fender washers, and four nylock nuts which are slightly longer than those depicted in Fig. 8B-d.

 


Fig. 8B-a

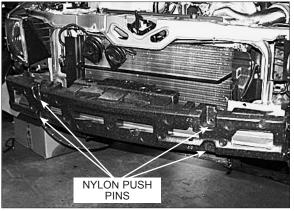


Fig. 8B-b

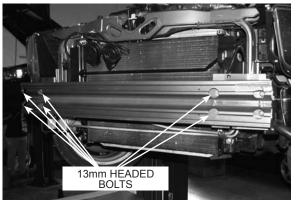


Fig. 8B-c

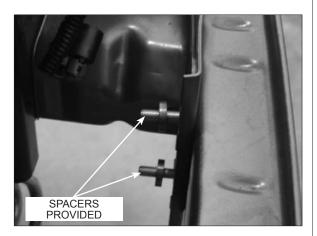


Fig. 8B-d

B. WATER COOLER ASSEMBLY INSTALLATION, cont'd

7. Attach the previously assembled water cooler to the bolts and spacers and secure with the 8mm nuts and washers provided. Tighten all cooler hardware at this time. (See Fig. 8B-e.)

NOTE: When installing the cooler, make sure that the water ports are configured as shown in Figs. 8B-a, 8B-q. The "top cooler port" must be the highest point on the cooler for proper air purging.

- **8.** Attach the supplied short 90° hose (7U030-065) to the top port on the CAC cooler as shown. (See *Fig. 8B-f.*)
- **9.** Install one of the supplied 3/4" hose unions into the open end of the previously installed 90° hose and secure. (See *Figs. 8B-f, 8B-q.*)

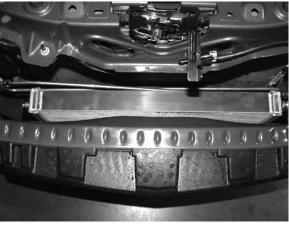


Fig. 8B-e

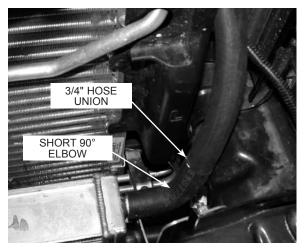


Fig. 8B-f

- B. WATER COOLER ASSEMBLY INSTALLATION, cont'd
 - 2005-2009 models: Locate assembly 8N104-125. Confirm that the assembly is complete.
 2010 Models use assembly 8N104-127.
 - 11. Attach the provided ring terminal to the ground wire on the suplied water pump plug harness. Connect the supplied length of 16GA wire to the positive wire using the supplied butt connector. Connect the water pump harness to the water pump.
 - 12. Locate the supplied water pump (8F001-403), two 2-3/8" adel clamps, and water pump mounting bracket. Place the adel clamps on the water pump. Using the supplied 1/4-20 hardware, secure the water pump and clamps to the mounting bracket. When installing, attach the water pump ground wire to one of the water pump mounting clamps using the previously installed ring terminal. (See *Fig. 8B-g.*)
 - **2010 Models** use water pump bracket depicted in Fig. 8B-g2.
 - 13. Attach the pump assembly to the two 8mm x 35mm long bolts previously installed and secure using the 8mm nuts and washers provided. (See Fig. 8B-h.)
 2010 Models see Fig. 8B-h2

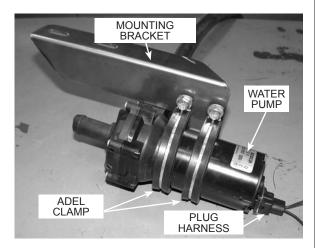


Fig. 8B-g



Fig. 8B-g2 (2010 Models)



Fig. 8B-h2 (2010 Models)

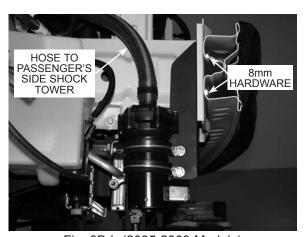


Fig. 8B-h (2005-2009 Models)

- B. WATER COOLER ASSEMBLY INSTALLATION, cont'd
 - **14.** Route the positive wire up towards the driver's side valve cover.
 - **15.** Locate the ballast resistor plug. Install the supplied T-tap connector, cut the water pump positive wire (*from the water pump*) for best fit, attach the supplied male spayed connector and attach to the wire T-tap connnector. (See *Fig.*, 8B-i.)
 - **16.** Cut the water pump positive wire and install the inline fuse holder and fuse. Install the wire loom provided and secure away from heat and moving parts. (See *Fig. 8B-i*.)

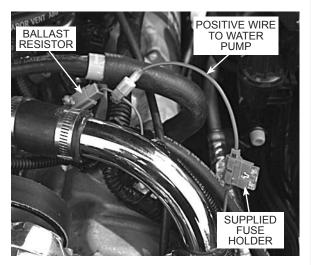


Fig. 8B-i

B. WATER COOLER ASSEMBLY INSTALLATION, cont'd

17. Locate the 3/4" x 150° molded rubber hose (7U038-150). Connect the short end of the 3/4" x 150° hose to the lower port on the previously installed water cooler. Install one of the provided 3/4" hose unions into the open end of the 150° hose. Attach a length of 3/4" hose approximately 24" between the hose union and the previously installed water pump discharge. Secure all hose connections using the nylon ratchet clamps provided. (See Fig. 8B-i.)

2010 models will require the passenger side air diverter to be trimmed where the power steering cooler line passes through. Enlarge the bottom of this notch 1-1/2" for 3/4" hose to pass through

18. Attach a length of 3/4" hose approximatelly 48" long to the previously installed water pump feed port and secure. Route the open end of the installed hose toward the passenger's side shock tower. This hose will be connnected in later step. (See Fig. 8B-h.)

NOTE: The installation of this hose section should maintain an "uphill" routing wthout dips or kinks.

★FRONT OF VEHICLE

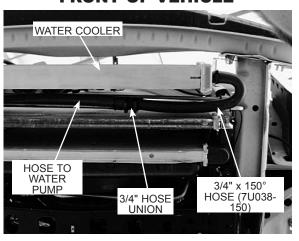


Fig. 8B-j | Viewed From Below

B. WATER COOLER ASSEMBLY INSTALLATION, cont'd

- **19.** Assemble the surge tank reservoir 8N056-060 install a 1/2"NPT x 3/4" straight barbed fitting in the bottom of the surge tank and one 1/2"NPT x 3/4" x 90° in the side. (See *Fig. 8B-k.*)
- **20.** Locate and attach the surge tank mounting bracket 8N010-160. Attach the bracket with two 1/4-20 x 1/2" socket head cap screws and washers. (See *Fig. 8B-I*.)



Fig. 8B-k



Fig. 8B-I

B. WATER COOLER ASSEMBLY INSTALLATION, cont'd

- 21. On the passenger's side of the engine, attached to the valve cover, is a large wire harness. The harness will have to be relocated to gain clearance for the surge tank and the radiator overflow reservoir. (See Figs. 8B-n. 8B-m.)
- 22. Detach the wiring harness from the retaining clips and move the harness to the shock tower. Secure the harness to the A/C line with wire ties. (See *Fig.* 8B-n.)
- 23. Remove the small clip retaining the small wiring harness to the shock tower. (See *Fig.* 8B-n.)
- **24.** Attach the small harness to the large harness with wire ties.
- **25.** To gain clearance for the coolant reservoir, the A/C line will need to be bent slightly towards the passenger's side fender. (See *Fig. 8B-n.*)

NOTE: A/C line is under high pressure. Use caution not to kink or damage the line.

(2005-2006 Only)

26. Remove the 10mm headed screw retaining the ground strap to the bracket on the strut tower. (See *Fig. 8B-o.*)

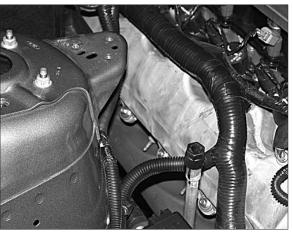


Fig. 8B-m



Fig. 8B-n

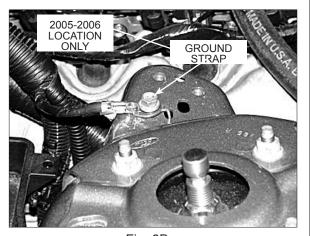


Fig. 8B-o

B. WATER COOLER ASSEMBLY INSTALLATION, cont'd

27. Attach the 3/4" hose previously installed to the straight 1/2"NPT x 3/4" barb at the bottom of the surge tank reservoir. Secure with a nylon clamp. (See Fig. 8C-p.)


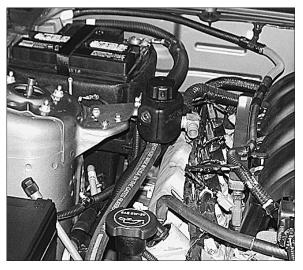


Fig. 8B-p

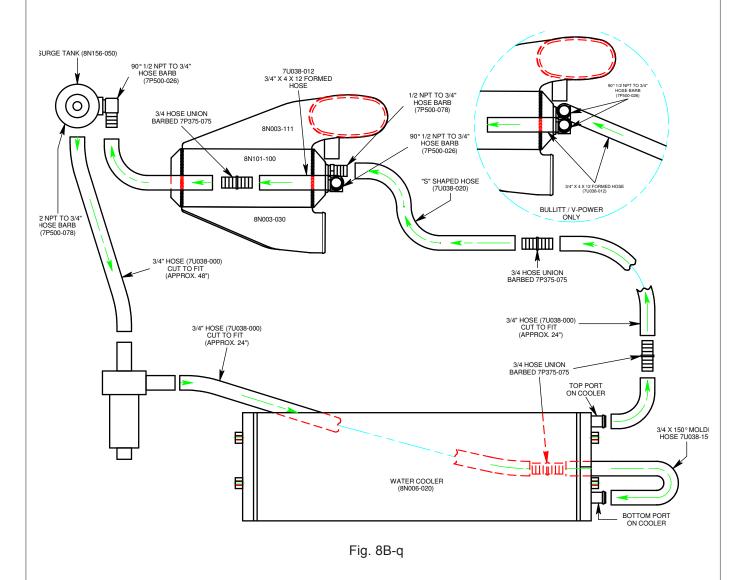

C. ENGINE COOLANT RESERVOIR INSTALLATION (2005-2006 Models Only)

NOTE: For 2007-2010 models skip to Section 8.E.

- 1. Locate assembly 8N155-080.
- 2. Attach the rear reservoir mounting bracket 4FU010-051 to the reservoir with the 1/4-20 x 1/2" long bolts and washers provided. (See Fig. 8C-a.)
- **3.** Attach bracket 4FU010-061 to the front of the reservoir with the hardware provided. (See *Fig. 8C-b.*)
- **4.** Locate and install 1/4"NPT x 3/8" barbed fitting in the tapped hole just above the previously installed mounting bracket. This hole may have to be opened using the appropriate drill bit. (See *Fig. 8C-c.*)

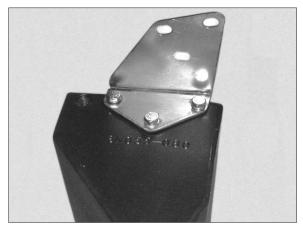


Fig. 8C-a

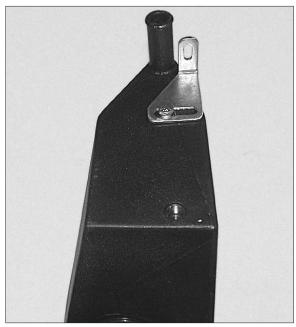


Fig. 8C-b

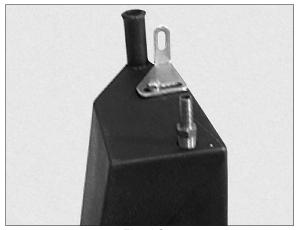


Fig. 8C-c

- C. ENGINE COOLANT RESERVOIR INSTALLATION (2005-2006 Models Only), cont'd
 - 5. Remove the 10mm headed bolt that secures the back of the ECU and the power distribution box. (See Fig. 8C-d.)
 - **6.** Install the coolant reservoir. Secure the front of the reservoir with the factory fastener removed previously. (See *Fig. 8C-e.*)

NOTE: Leave this bolt loose for final adjustment in a later step.

7. Attach the rear mounting bracket with the surge tank mounting bracket to the strut tower with the 6mm x 20mm long screws and washer provided. (See Fig. 8C-f.)

NOTE: Reinstall the factory ground wire with one of the 6mm screws and washers.

8. Attach a length of 3/4" hose (approximately 3' long) to the 3/4" bung on the front of the coolant reservoir. Route the hose to the 3/4" outlet on the thermostat housing secure the hose with the clamps provided. (See Fig. 8C-g.)

NOTE: A/C line on the passenger side must be bent away from block for reservoir clearance. This can be done with a large screwdriver as depicted in figure 8C-q2.



Fig. 8C-g2

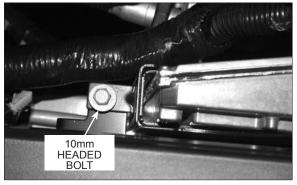


Fig. 8C-d

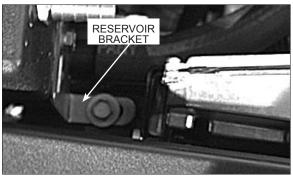


Fig. 8C-e

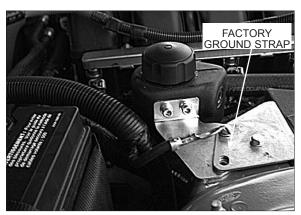


Fig. 8C-f

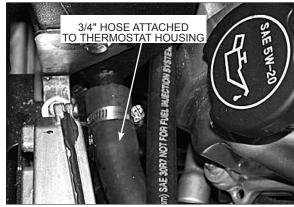


Fig. 8C-g

- C. ENGINE COOLANT RESERVOIR INSTALLATION (2005-2006 Models Only), cont'd
 - **9.** Modify the small hose removed from the factory coolant overflow reservoir. By cutting the "S" bend off the hose end. (See *Fig. 8C-h*.)
 - 10. Install a 3/8" union and a #17 stepless clamp. Secure the clamp. Using a length of 3/8" (approximately 40" long) hose that is provided, secure the hose to the union with a #17 stepless clamp. (See Fig. 8C-i.)
 - 11. Route the overflow hose across the radiator and under the radiator retaining bracket to the 1/4"NPT x 3/8" hose barb fitting in the coolant reservoir securing with a clamp. (See *Fig. 8C-j.*)



Fig. 8C-h



Fig. 8C-i

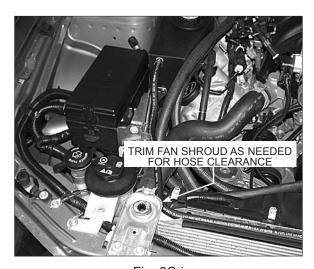


Fig. 8C-j

- **D.** RADIATOR HOSE MODIFICATIONS ('05-'06 Models Only)
 - **1.** Remove the passenger's side upper radiator hose. (See *Fig. 8D-a.*)
 - 2. Modify the upper hose by cutting the hose just after the bend. (See *Fig. 8D-b.*)
 - 3. Attach the hose to the formed stainless tube 4FU014-010 with a #24 hose clamp.
 - 4. A section of 1-1/2"ID hose left from the coolant tube relocation will be cut to approximately 2-3/4" long and attached to the outlet of the radiator reusing the factory spring clamp to secure the hose to the outlet.
 - **5.** Install the formed coolant tube to the inlet on the engine and to the radiator. Secure with hose clamps. (See *Fig. 8D-c.*)



Fig. 8D-a



Fig. 8D-b



Fig. 8D-c

E. ENGINE COOLANT RESERVOIR INSTALLATION (2007-2010 Models Only)

- 1. Locate assembly 8N155-082.
- 2. Attach the rear reservoir mounting bracket 4FU010-091 to the reservoir with the 1/4-20 x 1/2" long bolts and washers provided. (See Fig. 8E-a.)
- **3.** Attach bracket 4FU010-061 to the front of the reservoir with the hardware provided. (See *Fig. 8E-b.*)
- 4. Locate and install 1/4"NPT x 3/8" barbed fitting in the tapped hole just above the previously installed mounting bracket. This hole may have to be opened using the approppriate drill bit. (See Fig. 8E-c.)

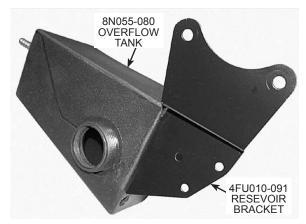


Fig. 8E-a



Fig. 8E-b

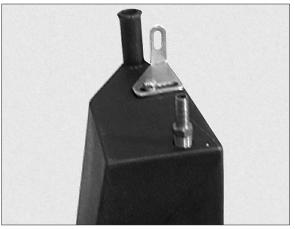


Fig. 8E-c

- E. ENGINE COOLANT RESERVOIR
 INSTALLATION (2007-2010 Models Only),
 cont'd
 - **5.** Remove the 10mm headed bolt that secures the back of the ECU and the power distribution box. (See *Fig. 8E-d.*)
 - **6.** Install the coolant reservoir. Secure the front of the reservoir with the factory fastener removed previously. (See *Fig.* 8*E*-e.)

NOTE: Leave this bolt loose for final adjustment in a later step.

- **7.1** Attach the rear mounting bracket with the surge tank mounting bracket to the strut tower using the factory strut mounting hardware. (See *Fig. 8E-f.*)
- 7.2 (Bullitt Only) Attach bracket 4FU010-061 on the underside of the 4FU010-091 reservoir bracket to ensure clearance from strut tower brace.
- 8. Attach a length of 3/4" hose (approximately 22" long) to the 3/4" bung on the front of the coolant reservoir. Secure using one of the #10 hose clamps provided. Route the open end of the hose to the 1" hose previously connected to the factory coolant reservoir. Connect and secure the two hoses using the 3/4" x 1" hose union, the factory 1" spring clamp and the #10 hose clamp provided.

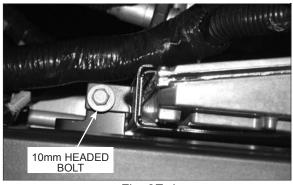


Fig. 8E-d

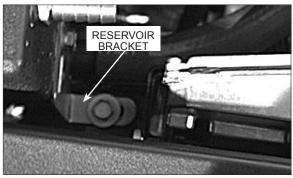


Fig. 8E-e

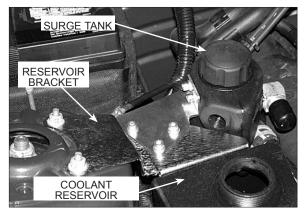


Fig. 8E-f

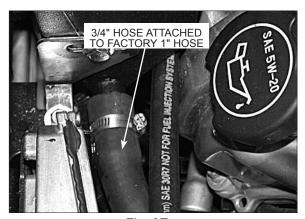


Fig. 8E-g

- E. ENGINE COOLANT RESERVOIR INSTALLATION (2007-2010 Models Only), cont'd
 - **9.** Modify the small hose removed from the factory coolant overflow reservoir. By cutting the "S" bend off the hose end. (See *Fig. 8E-h.*)
 - 10. Install a 3/8" union and a #17 stepless clamp. Secure the clamp. Using a length of 3/8" (approximately 40" long) hose that is provided, secure the hose to the union with a #17 stepless clamp. (See Fig. 8E-i.)
 - 11. Route the overflow hose across the radiator and under the radiator retaining bracket to the 1/4"NPT x 3/8" hose barb fitting in the coolant reservoir securing with a clamp. (See *Fig. 8E-j.*)

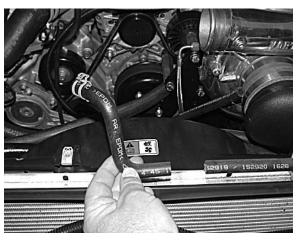


Fig. 8E-h



Fig. 8E-i



Fig. 8E-j

F. COOLER CORE INSTALLATION.

- 1. Locate the charge air cooler assembly.
- **2.** Attach the 4.5" x 2" sleeve to the throttle body and secure with a #72 hose clamp.
- 3.a (Non-V-Power/Bullitt Kits only) Install the 1/2"NPT x 3/4" barb 90° and straight fittings into the charge cooler as shown. (See *Fig. 8F-a.*)
- **3.b** (V-Power/Bullitt Kits only) Install the two 1/2" NPT x 3/4" barb 90° fittings into the charge cooler as shown (See Fig. 8F-a1)
- 4. Attach the long end of the 2.75" (3" if V-Power) silicone elbow to the cooler inlet and loosely install a #44 (#48 on V-Power cars) hose clamp. The open end of the elbow should be facing up as it will be attached to the supercharger discharge.
- Lower the cooler assembly into position. Attach the open end of the previously installed 2.75" elbow to the supercharger discharge and loosely install a #44 hose clamp.
- **6.** Attach the cooler discharge to the previously installed sleeve on the throttle body. Secure with a #72 hose clamp.
- **7.** Tighten all cooler clamps at this time.
- **8.** Locate one of the remaining 3/4" molded 90°. Trim approximately 5" from the long end and attach the short end to the forward most 3/4" x 90° fitting previously installed in the cooler. Secure with the nylon ratchet clamp provided.
- 9. Install a 3/4" hose union into the open end of the previously installed hose. Attach a section of 3/4" hose approximately 32" long to the union. Route the open end of the hose to the surge tank. Using the remaining adel clamp and factory hardware, secure the hose to the factory coolant reservoir mounting location. (See *Figs. 8F-q, 8F-b* for assistance.) Secure all hose connections with the supplied nylon ratchet clamps.
- 10a. (Non-V-Power/Bullitt Kits only) Locate the supplied "S" shaped hose. Trim approximately 1" from the short end and attach it to the straight fitting previously installed in the cooler. Install a 3/4" hose union into the open end of the "S" hose. Attach a section of 3/4" hose approximately 24" long to the union and route to the driver's side and down to the water cooler. Trim for best fit and connect to the 3/4" hose union previously installed in the 90° short rubber hose attached to the top water port on the CAC cooler.

NOTE: The installation of this hose section should maintain an "uphill" routing without dips or kinks.

10b (V-Power/Bullitt Kits only) Locate the remaining 3/4" molded 90° hose and install on the rear most 3/4" x 90° fitting previously installed in the CAC. Secure with the nylon ratchet clamp provided. Trim as required. Using the supplied 3/4" barb union connect the other end of the molded 90° hose to a section of 3/4" hose approximately 24" long routed to the driver side and down to the top of the water cooler. trim for best fit and connect to the 3/4" hose union previously installed in the 90° short rubber hose attached to

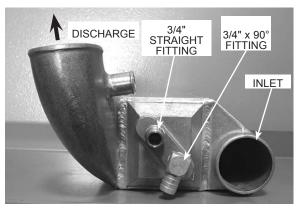


Fig. 8F-a

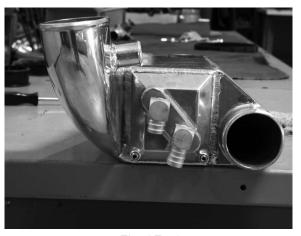


Fig. 8F-a1

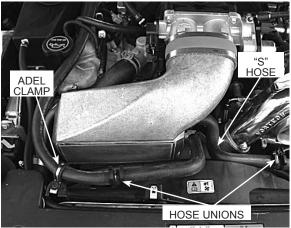


Fig. 8F-b

- the top port on the CAC water cooler.
- **11.** At this time, verify that all hose connections are secure using the nylon ratchet clamps provided.
- 12. (2007-2010 Models Only) To provide additional clearance for the CAC, you will need to cut the factory radiator hose approximately 4" from its connection at the radiator. Install the supplied Ø1.5" x 4" hose union and two #24 hose clamps. Adjust to allow CAC clearance and secure. (See Fig. 8F-c.)

G. COOLANT RESERVOIR FILL

- 1. Check to make sure all previously installed hose connections are secure.
- 2. Fill the engine cooling system through the Vortech supplied coolant reservoir using the factory coolant previously drained.
- 3. Locate the factory coolant reservoir cap removed in section 1 and install it on the Vortech supplied reservoir.
- 4. (2005-2006 Only) Once the coolant system is filled and all trapped air expelled, install the 1/8"NPT plug provided in the previoisly installed cross-over tube. Thread sealant should be used.
- 5. CAC cooling system.
 - a. Temporarily remove the 3/4" hose attached to the 3/4" x 90° fitting on the CAC surge tank.
 - **b.** Cap the open end of the 3/4" x 90° fitting using the provided vinyl cap.
 - c. Fill the CAC system using a 25%/75% antifreeze/water mix. Using a funnel, fill through the 3/4" hose removed from the surge tank fitting.
 - **d.** Fill the system until the coolant level reaches the surge tank.
 - e. Remove the vinyl cap from the surge tank fitting and reinstall the 3/4" hose previously removed and secure with the nylon ratchet clamp.

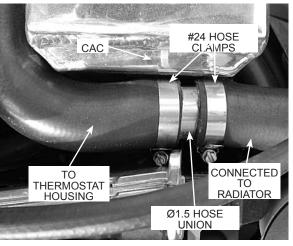


Fig. 8F-c (2007-20010)

8.1 BUMPER COVER MODIFICATION (2010 Models Only)

6. Reinstall the front bumper assembly including the foam inner bumper, all plastic splash panels and light connections in the reverse order removed.

2010 Models skip this step and see section 8.1 **2010 Models** will require removal of the lower grill uprights and certain surrounding areas to clear the Water Cooler (See Fig. 8G).



Fig. 8.1-1



Fig. 8G (2010 Models Only)



Fig. 8.1-2

Cut out vertical supports in lower grill opening.
 The upper lip of the grill should be trimmed back to approximately 4-1/4" when measured from the back side of the grill. (See Fig. 8.1-1)
 The lower lip should be trimmed back approximately 4-1/4" measured from the front of the grill. (See Fig. 8.1-2)

8.1 BUMPER COVER MODIFICATION, CONT'D (2010 Models Only)

- 2. Trial fit bumper and check for interference against intercooler. Additional removal of material may be required to clear the intercooler end tanks and brackets (See Fig 8.1-3a, b).
- 3. Remove bumper and mark on upper lip supports 1" from edge. Drill a 1/4 " hole from the top of the support through the lip of the grill. From the bottom drill a 5/16" hole through the lip only, being careful not to drill through the support. An angle drill using the shortest bit possible is recommended.
- 4. Install the supplied 1/4-20 Nylon shouldered bolts from the lip side so that the threads protrude through the supports and attach with the supplied 1-4/20 Nylock nut (See Fig. 8.1-4). Do not over tighten nuts.
- 5. Reinstall the front bumper assembly including the foam inner bumper, all plastic splash panels and light connections in the reverse order removed. See Fig. 8.1-6 for final installation reference.



Fig. 8.1-6



Fig. 8.1-3a



Fig. 8.1-3b



Fig. 8.1-4

8.2 COMPRESOR BYPASS VALVE INSTALLATION CHARGE COOLED KITS ONLY V-POWER/BULLITT KITS SKIP TO 8.3

- 1. Assemble the bypass using a piece of 1" hose cut to 11" long and a piece cut to 13" long and four #16 hose clamps.
- **2.** Attach the 11" piece of hose to the inlet of the bypass and secure with a clamp.
- 3. Secure the 13" piece to the outlet of the valve, securing it with a clamp. (See *Fig. 8.2.*)
- 4. Attach the bypass assembly to the charge cooler. The 11" long piece will be attached to the charge cooler. Secure with clamps. Leave the 13" long section open for future attachement to the air inlet.

- **5.** Attach a length of 5/32" vacuum hose to the bypass valve and route to the vacuum port of the fuel rail sensor.
- 6. Cut a section of the factory hose and install the vacuum TEE that is provided. (See Fig. 10-b)
- **7.** Attach the vacuum hose from the bypass valve to the TEE.


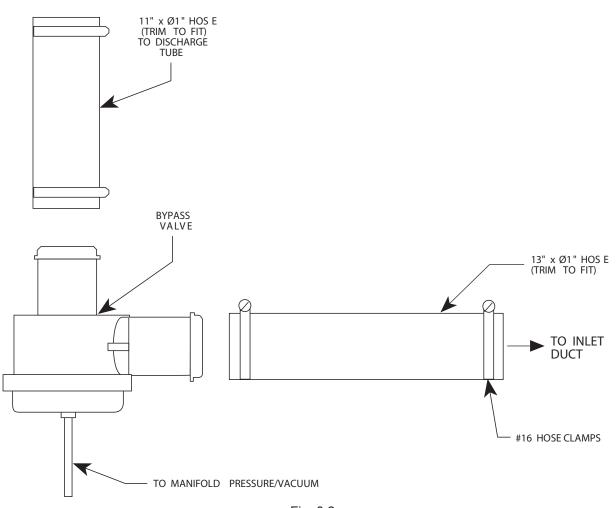


Fig. 8.2

8.3 V-POWER/BULLIT COMPRESSOR BYPASS VALVE INSTALLATION CHARGE COOLED KITS ONLY V-POWER/BULLITT KITS ONLY

- Assemble the bypass using the supplied Maxflow Race Bypass valve, Ø 1.75" silicone coupler with two #28 hose clamps, Bypass "Y", and two lengths of 1" hose cut to lengths of 16" and 17.5" with four #16 hose clamps. (See Fig. 8.3)
- 2. Attach the Maxflow Race Bypass Valve to the flange located on the lower duct of the CAC using the supplied hardware and gasket.
- 3. Attach one end of the Ø 1.75" silicone coupler to the outlet of the bypass valve and secure with #28 hose clamp.
- **4.** Insert the Ø 1.75" side of the bypass "Y" into the open end of the Ø 1.75" silicone coupler and secure with #28 hose clamp.
- 5. Secure the two lengths of 1" hose cut to 16" and 17.5" to the two outlets on the bypass "Y" with #16 hose clamps (See Figure 8I-a for orientation).
- **6.** Leave the opposite ends of the 1" hose open for future attachment to the air inlet box.
- 7. Attach a length of 5/32" vacuum hose to the bypass valve and route to the vacuum port of the fuel rail sensor.
- 8. Cut a section of the factory hose and install the vacuum TEE that is provided (See Fig. 10-b).
- **9.** Attach the vacuum hose from the bypass valve to the TEE

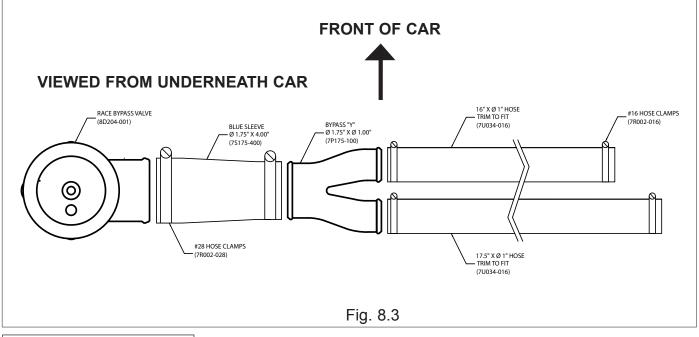

9. AIR DISCHARGE ASSEMBLY (Non-cooled kits only)

- **A.** Attach the 4.5" sleeve to the discharge duct with the #72 clamps provided.
- **B.** Install the 3.0" x 2.75" reducer to the inlet of the discharge duct and secure the #48 hose clamp provided.
- **C.** Install the duct to the inlet of the throttle body and the outlet of the supercharger Secure the remaining #72, and #44 hose clamps provided. (See *Fig. 9-a.*)

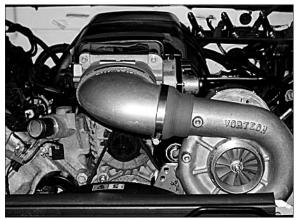


Fig. 9-a

10. COMPRESSOR BY-PASS VALVE INSTALLATION (Non-cooled kits only)

- A. Assemble the compressor by-pass valve by using a piece of 1" hose cut 15" long and a piece cut to 4.25" long, and four #16 hose clamps.
- **B.** Attach the 4.25" piece of hose to the inlet of the bypass and secure with a #16 clamp.
- C. Secure the 15" piece to the by-pass valve outlet using a #16 hose clamp. (See *Fig.* 10-a.)
- **D.** Attach the open end of the 4.25" hose to the boss on the air discharge duct. Secure with a #16 hose clamp. The open end of the 15" long hose will be connected to the air inlet in a future step.
- **E.** Secure all hoses with the clamps provided.
- **F.** Connect the supplied length of 5/32" vacuum to the port on the bypass valve. Route the line to the fuel regulator vacuum hose. Using the supplied vacuum TEE, connect the bypass vacuum line. (See *Figs. 10-a, 10-b*, for assistance.)


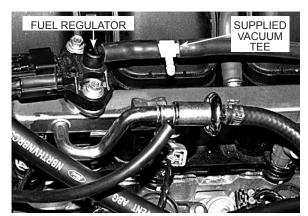


Fig. 10-b

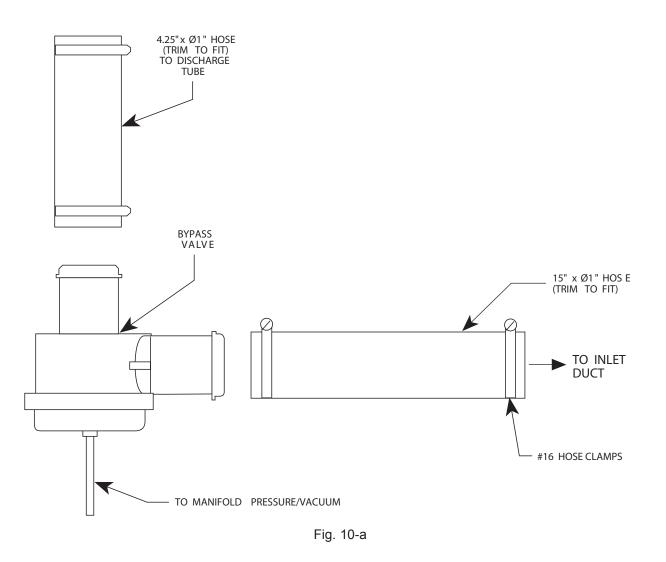

P/N: 4FU020-010 v6.5, 06-05-18 ©2018 Vortech Engineering, Inc. All Rights Reserved, Intl. Corp. Secured

11. COOLANT RESERVOIR RE-INSTALLATION (Non-cooled kits only)

- A. Reinstall the factory coolant reservoir using factory hardware to secure.
- **B.** Reattach the large hose at the bottom of the reservoir using the factory hose clamp.
- **C.** Reconnect the small overflow hose at the top using the factory clamps.
- **D.** Check all cooling system hose connections to make sure they are secured with the appropriate hose clamps.
- **E.** Refill the cooling system using the previously drained coolant.
- **F.** (2005-2006 Only) Once the coolant system is filled and all trapped air expelled, install the 1/8"NPT plug provided in the previously installed crossover tube. Thread sealant should be used.

12. CRANK CASE BREATHER AND PCV INSTALLATION

- A. Locate PVC/MAF assembly 4FU139-096.
- B. Locate the previously removed OEM driver side valve cover breather hose & remove the OEM 3/8 x 90° fitting from the hose. Install the provided PCV hose assembly between the driver's side valve cover and the intake manifold. Secure hose connections as necessary using the supplied stepless clamps.

(See Figs. 12-a, 12-b for assistance.)

- **C.** Locate the 3/8" x 90° fitting removed from the passenger's side valve cover in a previous step.
- **D.** Connect the remainder of the supplied 3/8"ID hose to the 90° fitting and connect to the passenger's side valve cover. (See *Fig. 12-c.*)
- **E.** Route the open end of the 3/8" hose behind the alternator and across to where the air inlet duct will be located.



Fig. 12-a



Fig. 12-b

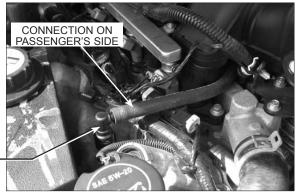


Fig. 12-c

FACTORY 90° HOSE CONNECTOR

13. AIR INLET ASSEMBLY

- **A.** Locate assembly 4FU112-010.
- **B.** Remove two of the 3/8-16 x 1" bolts securing the supercharger in place. Install the air inlet support bracket and secure with the 3/8" bolts removed from the supercharger mounting plate. (See *Fig.* 13-a.)
- **C.** Install the 3/4"NPT x 1" x 90° plastic fitting to the air inlet duct. (See *Fig. 13-b*.)
- **D.** Install the 1/4"NPT x 3/8" hose barb fitting in the location noted. (See *Fig. 13-c.*)
- D.2 (V-Power/Bullitt Kits Only) Drill out the second 3/4" NPT location on the air inlet duct using caution not to damage the threads and install the second 3/4" NPT x 1 x 90° plastic fitting to the air inlet duct. Orient both fittings as shown in Fig 13-d2.
- E. Attach the 4.0" x 3.5" reducer sleeve to the inlet duct. Secure the sleeves with the clamps provided. (See *Fig. 13-d*.)

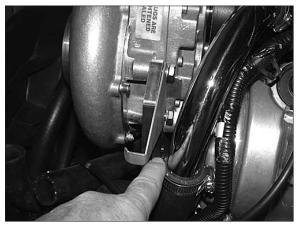


Fig. 13-a

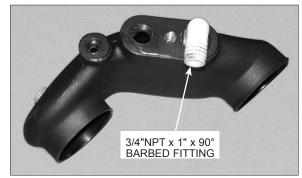


Fig. 13-b

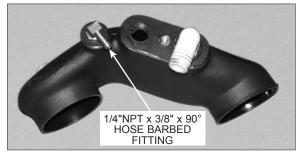


Fig. 13-c



Fig. 13-d2 (V-Power/Bullitt Kits Only)



Fig. 13-d

13. AIR INLET ASSEMBLY, cont'd

- **F.** Attach the 3/8" hose previously connected to the passenger's side valve cover, to the 1/4"NPT x 3/8" hose x 90° fitting installed in a previous step.
- **G.** Attach the 1" bypass outlet hose to the 90° plastic fitting and secure the hose with a #16 hose clamp.
- **H.** Install the duct to the inlet of the supercharger and secure in place with the clamps provided.
- Locate and install a 4.0" x 2.0" long sleeve to the inlet of duct 4FU012-010 and secure with two #64 clamps. (See Fig. 13-e.)
- J. Remove the Factory MAF sensor element from the top portion of the air filter housing.
- **K.** Install the element using the 4mm hardware provided to the supplied MAF tube. (See *Figs. 13-f, 13-g.*)

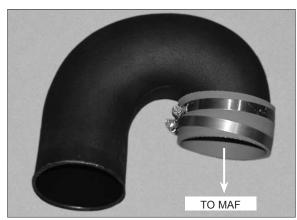


Fig. 13-e

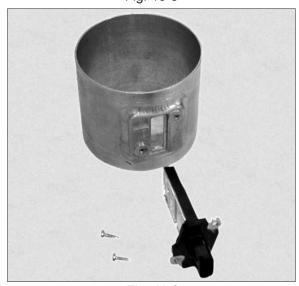


Fig. 13-f

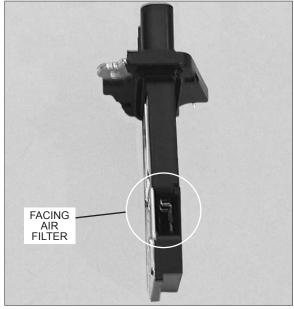


Fig. 13-g

NOTE: Install the MAF sensor element so the inlet of the sensor faces the air filter. (See Fig. 10-h.)

- L. Install the MAF sensor and air filter to the 180° duct. (See *Fig. 13-h*.)
- M. Install the 180° duct and the MAF sensor with filter to the inlet duct leading to the Supercharger. (See Fig. 13-i.) Clock the MAF exactly as shown. (See Fig. 13-i.)
- **N.** Secure the rear clamp at the inlet duct union to the previously installed support bracket. (See *Fig. 13-i.*)
- O. MAF (Mass Air Meter) (Non-Cooled Kits Only) Harness Extension:
 - Locate the supplied wire and butt connectors in assembly 4FU101-001.

13. AIR INLET ASSEMBLY, cont'd

NOTE: It is strongly recommended that the wires be soldered. Temporary solderless connectors have been provided in case you are unable to solder.


- 2. Remove the split loom from the factory wires on the MAF sensor.
- 3. Cut the wires to the connector approximately 2" from the plug.
- **4.** Using the supplied connectors and wire, extend the connector to the MAF.
- **5.** Install the supplied 3/8" split-loom to the extended sensor plug harness. Secure the split-loom with wire-ties or tape.
- **6.** Route the lengthened wires and connector to the MAF, keeping the wires away from hot or moving parts.
- P. MAF Interface Adapter Installation (Charge Cooled kits only)
 - 1. Locate the MAFia (Interface Adapter) box.
 - Plug the MAFia in between the factory MAF connector and the MAF sensor.
 - Remove the small red cover in the middle of the supplied MAFia box.
 - **4.** Verify that the MAFia box is set on number "2"
 - 5. If you find that the MAFia box is not set, use the tool that is provided with the MAF Interface Adapter box and set to the number "2".
 - **6.** Replace the cover and secure the MAFia box and set to the number "2".

NOTE: It is critical that the MAF Interface Adapter box be set on number "2", The calibration that is provided with this kit has been created to work at this setting. Any change to the MAF Interface Adapter box by setting it to a higher or lower number could cause damage to the engine.

Q. On 2010 models it will be neccesary to bend the hood latch cable 90° for air filter clearence. (See Fig 13-j)



Fig. 13-h

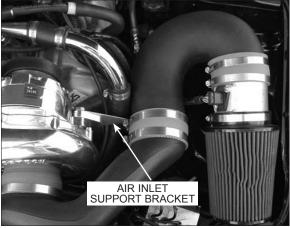

Fia. 13-i



Fig. 13-j

14. FUEL PUMP UPGRADE

NOTE: This section is best performed with the fuel level BELOW half a tank.

- A. Remove the rear seat by depressing the two release buttons at the front edge of the seat. (See Fig. 14-a.)
- **B.** Remove the round plastic inspection cover on the driver's side. (See *Fig.14-b*.)
- **C.** Unplug the sending unit harness and disconnect the fuel line connection.
- D. Using a small screwdriver or chisel and hammer, tap the retaining ring in a counter clockwise direction. Remove the retaining ring and set aside. (See Fig. 14-b.)
- E. Slowly pull the fuel pump assembly up. Locate the crossover fuel line connection on the fuel pump assembly and disconnect. (See *Fig. 14-c.*)
- **F.** Remove the pump assembly from the tank being careful not to damage or lose the rubber O-ring.
- **G.** Carefully cut the step-less clamps securing the short corrugated fuel line between the fuel pump outlet and distribution rail. Remove the fuel line and discard. (See *Fig. 14-d.*)

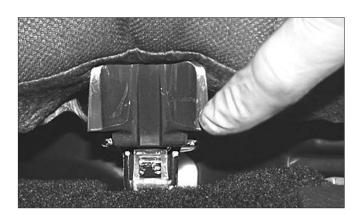


Fig. 14-a

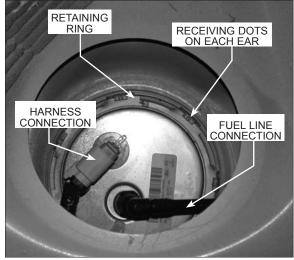


Fig. 14-b



Fig. 14-c

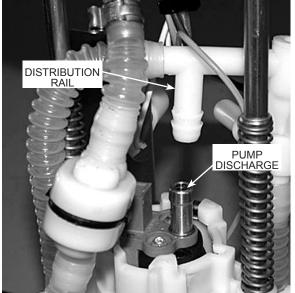


Fig. 14-d

14. FUEL PUMP UPGRADE, cont'd

- H. Using the supplied 17.0 stepless clamps and 2.75" length of Ø3/8" rubber hose, connect the supplied "Y" fitting to the distribution rail. (See Fig. 14-e.)
- Locate the supplied fuel pump and pump inlet screen. Attach the pump inlet screen to the pump and orient exactly as shown. (See *Fig. 14-f.*)
- J. Secure the supplied fuel pump to the side of the factory pump assembly using the #44 hose clamp supplied. Verify that the hose clamp is routed inside of the metal posts so that they can be pushed down without restriction. (See Fig. 14-f.)
- K. Slide the two supplied .75" long teflon sleeves over the discharge of each fuel pump. (See *Fig.* 14-g.)

NOTE: The supplied 1.5" long Teflon tube will need to be cut into two .75" long pieces.



Fig. 14-e

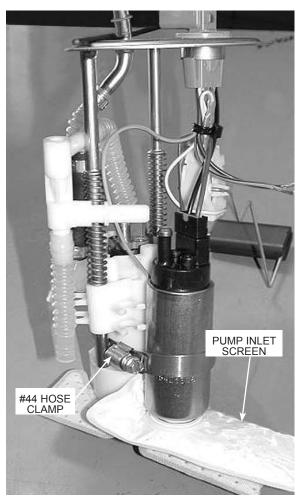


Fig. 14-f

14. FUEL PUMP UPGRADE, cont'd

- L. Slide the supplied 11.3 stepless clamps onto the two open legs of the Y-fitting. Connect the discharge of both pumps to the previously installed "Y" fitting using the two supplied Ø3/8" corrugated teflon hoses. Secure the remaining hose ends using the supplied 11.3 stepless clamps. (See Fig. 14-h.)
- M. Secure all hoses to the fuel pump assembly using the supplied ties. Make sure the lid is able to spring up and down without restriction and that the hoses do not kink. (See Fig. 14-h.)
- **N.** Use the supplied T-splice and slide connectors to connect the black and red wires from the supplied pump to the corresponding power and ground on the factory pump. (See *Fig. 14-h*.)
- O. Reinstall the fuel pump assembly into the fuel tank in the reverse order of removal. Ensure that the fuel hoses do not rub on the sharp edges of the fuel tank. Take care not to damage the assembly. INSTALLATION WILL BE TIGHT. Connect all fuel and electrical connections. Verify that the fuel gauge float is able to move freely. Make sure the O-ring seal is in place and not damaged. There is an alignment arrow on the pump assembly top that will need to be aligned with the dot on the fuel tank. (See Fig. 14-b.)



- P. Locate the power distribution box located on the passenger's side of the engine compartment. Verify the #41 fuse is for the fuel pump.(2010 Model year uses #13) Replace the factory 15AMP fuse with the supplied 20AMP fuse.
- **Q.** Cycle the ignition key and check for any fuel leaks, verify proper fuel gauge operation.
- R. Reinstall the plastic inspection cover and rear seat.

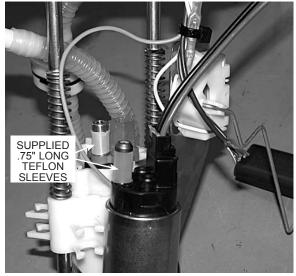


Fig. 14-g



Fig. 14-h

15. REFLASH COMPUTER

IMPORTANT! To ensure trouble-free programming of your vehicle's computer:

- · Make sure the vehicle's battery is sufficiently charged.
- Turn off all accessories and close doors to prevent unnecessary drain on the battery.
- Do not attempt to program your vehicle while a battery charger is connected.
- Improper battery voltage will result in failure of the programming process.
- Do not disconnect the cable or turn off the ignition during programming.
- **A.** Reconnect the battery.
- **B.** Locate the vehicle's OBD2 connector located in the lower left hand corner of the dash on the driver's side of the vehicle. (See *Fig 15-a*.)
- C. Attach the OBD2 connector from the Flash tool (provided in the kit) to the vehicle's OBD2 port. (See Fig 15-b.) Make sure this connector is seated all the way into the vehicle's OBD2 port. You do not want this connector coming out during programming or damage may occur to the vehicle's ECM.
- **D.** The Reflash tool should power up and display three parameters:
 - 1. Performance Tune
 - Diagnostics
 - 3. Options
- E. Select "Performance Tune" and press the enter button in the middle of the arrow keys. (See *Fig* 15-c.)
- F. Read the disclaimer entirely, then select agree and press ENTER.
- G. At this point please read the screen displayed on the reflash tool. If you have any questions, either refer to the manual provided with the reflash tool or contact our service department for further assistance.
- **H.** Turn the ignition on (*do not start the vehicle*). Set the parking brake and press the "ENTER" button to continue.
- "SELECT TUNE" will be displayed at the top of the screen. Use the arrow keys to select the appropriate tune for your vehicle and press the ENTER button. You will have four choices to select from:
 - **1.** STD OUTPUT (non charge-cooled)
 - 2. Charge-cooled, air/water
 - 3. Charge-cooled, air/air (this option is NOT used in this application)
 - Original Backup
- J. Continue to follow the screen and when finished unplug the reflash tool from the vehicles OBD2 port.

NOTE: Do not disturb the cable, or turn the ignition off during this time. If the programming is disrupted, the computer will not start or run your vehicle!



Fig. 15-a



Fig. 15-b



Fig. 15-c

16. FINAL CHECK

WARNING: Do not attempt to operate the vehicle until all components are installed and all operations are completed including the final check.

- **A.** If your vehicle has gone over 15,000 miles since its last spark plug change, you will need to change the spark plugs now *before* test driving the vehicle.
- B. Check all fittings, nuts, bolts and clamps for tightness. Pay particular attention to oil and fuel lines around moving parts, sharp edges and exhaust system parts. Make sure all wires and lines are properly secured with clamps or tie-wraps.
- C. Check all fluid levels, making sure that your tank(s) is/are filled with 91 octane or higher fuel before commencing test drive.
- **D.** Start the engine and allow to idle a few minutes, then shut off.

H.O Charge Cooled Kits Only

NOTE: Check to see that CAC coolant is flowing through the surge tank. If coolant is not flowing, remove the 3/4" rubber hose from the side of the surge tank and apply light suction in an attempt to pass any trapped air in the system. Reconnect the hose and recheck coolant flow.

- E. Recheck to be sure that no hoses, wires, etc. are near exhaust headers or moving parts. Look also for any signs of fluid leakage.
- F. PLEASE TAKE SPECIAL NOTE: Operating the vehicle without ALL the subassemblies completely and properly installed may cause FAILURE OF MAJOR COMPONENTS.
- **G.** Test drive the vehicle.
- **H.** Always listen carefully for engine detonation. Discontinue heavy throttle usage if detonation is heard.
- I. Read the STREET SUPERCHARGER
 SYSTEM OWNER'S MANUAL AND RETURN
 THE WARRANTY REGISTRATION FORM
 within thirty (30) days of purchasing your
 supercharger system to qualify.

For internally lubricated V3 units only

This supercharger has been factory pre-filled with special Vortech synthetic lubricant. Oil does not need to be added to a brand new unit; however a fluid level check should be performed.

Prior to operating the supercharger on the vehicle and after installation onto the vehicle:

Remove the factory installed flat-head brass shipping plug (not the dipstick) from the top of the supercharger case. Replace the sealed shipping plug with the supplied "vented" plug. Do not operate the supercharger without it. Check the supercharger fluid level.

Fluid level checking procedure:

- 1. Ensure that the .06" copper sealing washer is located on the dipstick base.
- 2. Thread the clean dipstick into the unit until it seats.
- 3. Once the dipstick has seated, remove the dipstick from the unit. Fluid should register in the crosshatched area on the dipstick.
- 4. DO NOT OVERFILL!!! Drain excess fluid from the unit if it is above the maximum level on the dipstick.

Check the fluid level using the dipstick at least every 2.500 miles.

Initial supercharger fluid change must be performed at 2,500 miles. The supercharger fluid must be changed at least every 7,500 miles.

Drain the fluid, refill the unit with 4 oz. of Vortech V3 lubricating fluid and then confirm proper oil level using the dipstick. DO NOT OVERFILL!!!

WARNING:

Use of any other fluid other than the special Vortech lubricant will void the warranty and may cause component failure.

